


PFOB4


Battery:
CR2032

ORDERING OPTIONS




Art.
PFOB4


SPECIFICATIONS
Elsema (PentaFOB)
Frequency - 433Mhz
Buttons - 4




Art.
PFOB1




Art.
PFOB1-S



Art.
PFOB2



Art.
PCK2



Art.
PCK4

COMPATIBLE WITH



RECEIVER COMPATIBILITY

- Suits Models:
Suits Elsema Receivers with PentaFOB or PentaCode
Compatibility

Remote Programming Steps

Program Remote to Receiver

1. Check that all the switches are 'OFF' on the 12 way dip-switch inside the new remote.
2. Press & hold the 'Program' button on the receiver (garage door motor).
3. Press the remote button you want to use for 2 seconds, receiver LED will flash and turn Green.
4. Release the buttons on the receiver (garage door motor) and the remote.

Program Existing Remote to New Remote

1. Open the case of an existing and functioning remote and press the 'Program' button once.
2. On the new remote, press and hold the remote button you want to use for 2 seconds.

Whilst every effort has been made to ensure the accuracy of the information supplied herein, we assume no liability for any errors or omissions. Information contained in this document is subject to change without prior notice.