


TSTC01 EXPLODED VIEW & PARTS LIST

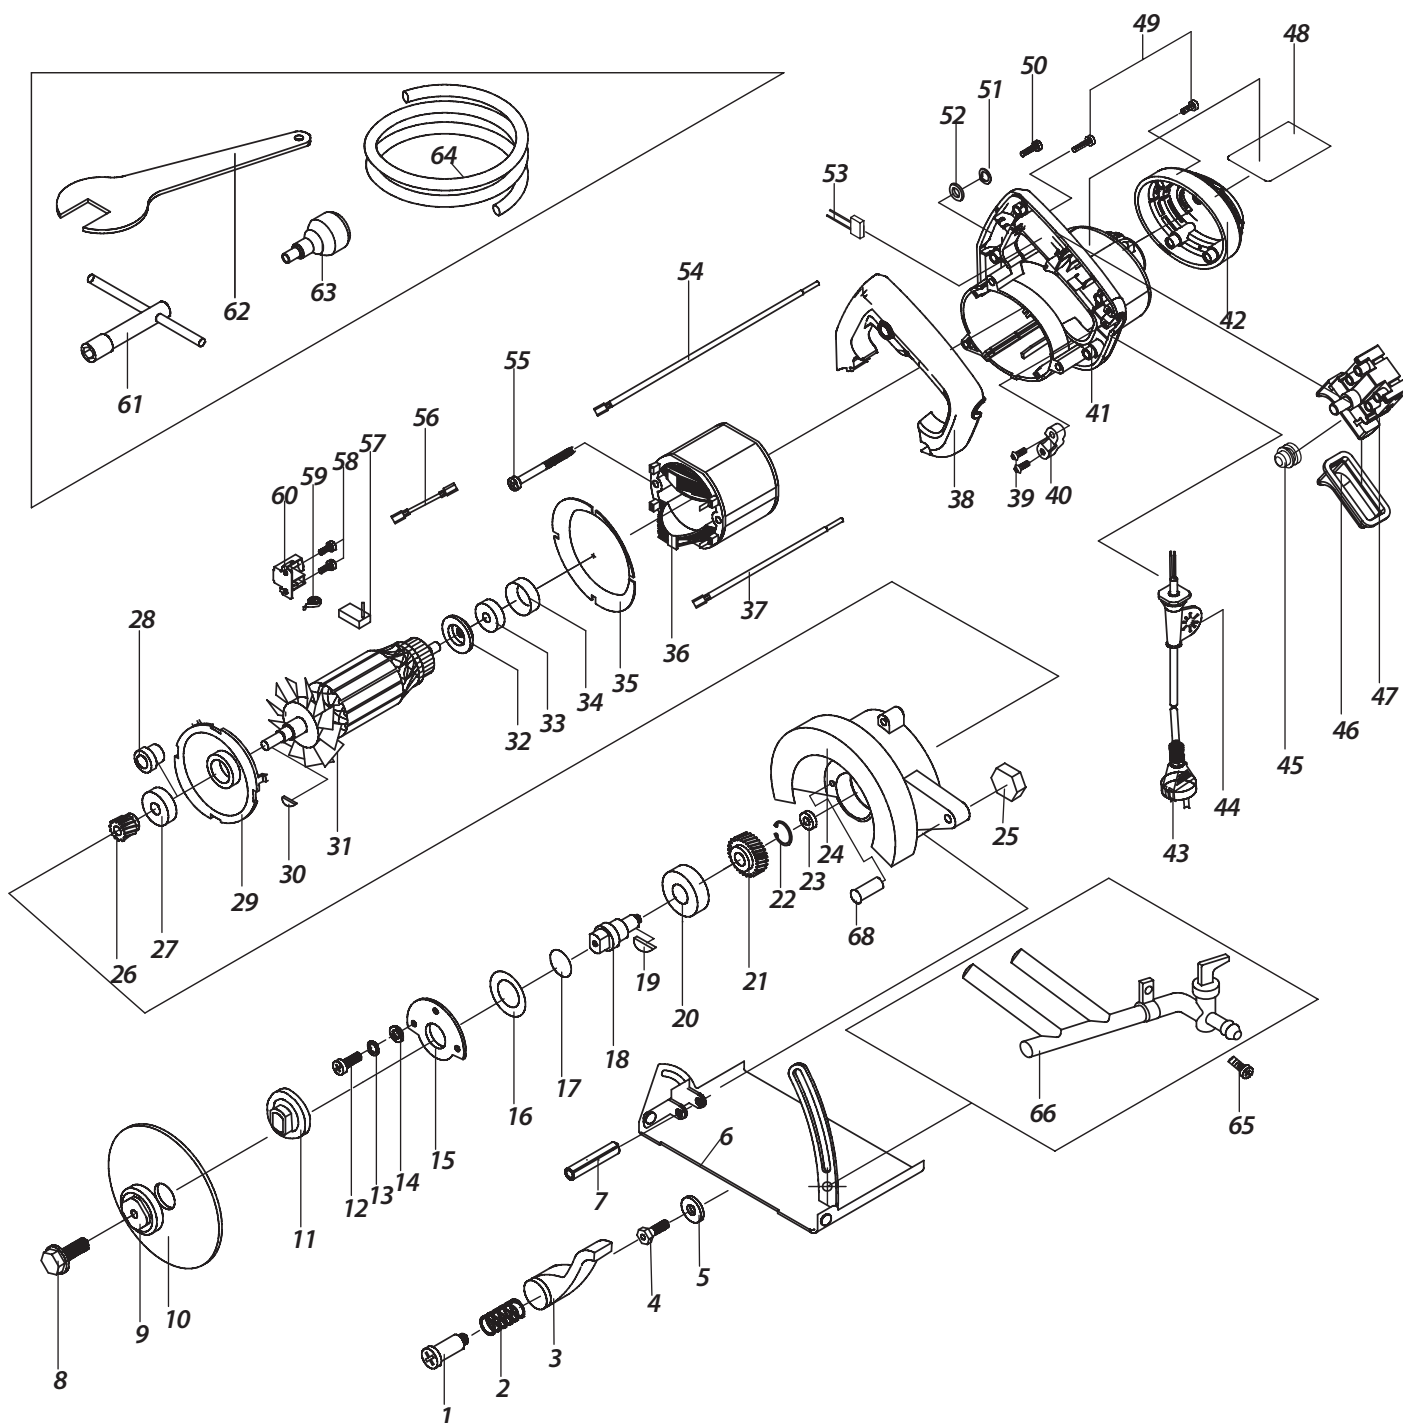

1	Lock Handle Pin	17	O-Ring 15x1.8	34	Bearing Sleeve	51	Elastic Washer 5 X3
2	Lock Handle Spring	18	Output Spindle	35	Fan Guide	52	Washer 5 X3
3	Lock Handle	19	Half-Round Key 3x3.7x10	36	Stator	53	Capacitor
4	Lock Bolt	20	Bearing 6202-2RS	37	Stator Connecting Cable	54	Stator Connecting Cable
5	Washer 6	21	Driven Gear	38	Handle Cover 1	55	Screw ST4.2x68 X2
6	Base Assembly Set	22	Circlip 10	39	Screw ST3.9x13 2 X2	56	Stator Connecting Cable X2
7	Cylindrical Pin 6x30	23	Bearing 619/6	40	Cable Clamp 1	57	Carbon Brush X2
8	Hex Bolt M6 Leftx18	24	Gear Box	41	Housing 1	58	Screw ST3.5x13 X4
9	Outer Flange	25	Nut M6 Left	42	Back Cover 1	59	Roll Spring X2
10	Saw Blade 110x20x1.5	26	Driving Gear	43	Cable & Plug 1	60	Brush Holder Assembly X2
11	Inner Flange	27	Bearing 629-2Z2/C4	44	Cable Armour 1	61	Sleeve Wrench
12	Cross Head Screw M4 X3	28	Watering Ring	45	Switch Button Armour	62	Wrench
13	Elastic Washer 4 X3	29	Connecting Board	46	Switch Handle Armour	63	Water Pipe Jointer X2
14	Washer 4 X3	30	Half-Round Key 2.5x3.7x10	47	ON-OFF Switch	64	Water Pipe 6x7x4m
15	Bearing Cap	31	Armature	48	Rating Plate	65	Cross Screw M4x10
16	Dust Proof Washer	32	Dust Proof Ring	49	Screw ST3. 9x16-F X8	66	Nipple Assembly
		33	Bearing 627-2Z2/C4	50	Inner Hex Screw M5x45 X	67	Rubber Pole