

Instructions

for mantel clock with mechanical hour strike movement W701 / W791 and automatic anchor

1. Unpack the clock

Take clock, pendulum and key carefully out of carton

2. Transportation securing device

Please remove all transportation and packing securing devices such as rubber foam, paper etc. to release hammer, pendulum intermediate part and bell.

3. Winding the clock

The movement has a 14 days power reserve. Don't forget to wind up your clock regularly. To wind the clock hold the pendulum on one side and push key into the winding square at front of movement. Turn key clockwise until movement is fully wound (approx. 8 1/2 full turns).


4. Insert pendulum and start clock

The pendulum intermediate part is at the front of the movement. Please hang pendulum carefully into the pendulum intermediate part. Move pendulum gently to left or right side until pendulum intermediate part is touching the hour shaft. Let the pendulum swing so you can hear an even "tick-tock" sound.

If pendulum should stop, just push it again to right or left and release it. This is also necessary when you wind up the clock.

5. Time setting

Turn minute hand (large hand) clock or counterclockwise to set the correct time. The clock will strike one bell every hour on the hour.

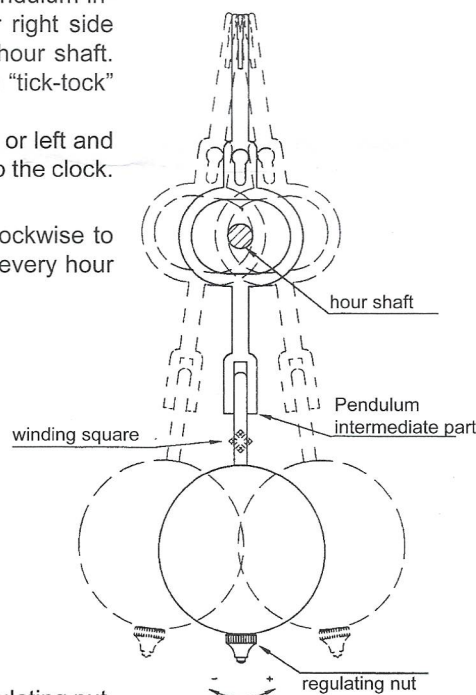

6. Regulating the clock

Underneath the pendulum disc there is a small regulating nut. If clock loses time turn nut to the right, if clock runs too fast turn nut to the left. (one full turn is approx. 2 minutes per day). When turning the nut please hold pendulum disc so that it does not twist.