

LOCKTON
E-Series

How to Disable Emergency Lockout Function

Art. **ELEV36**

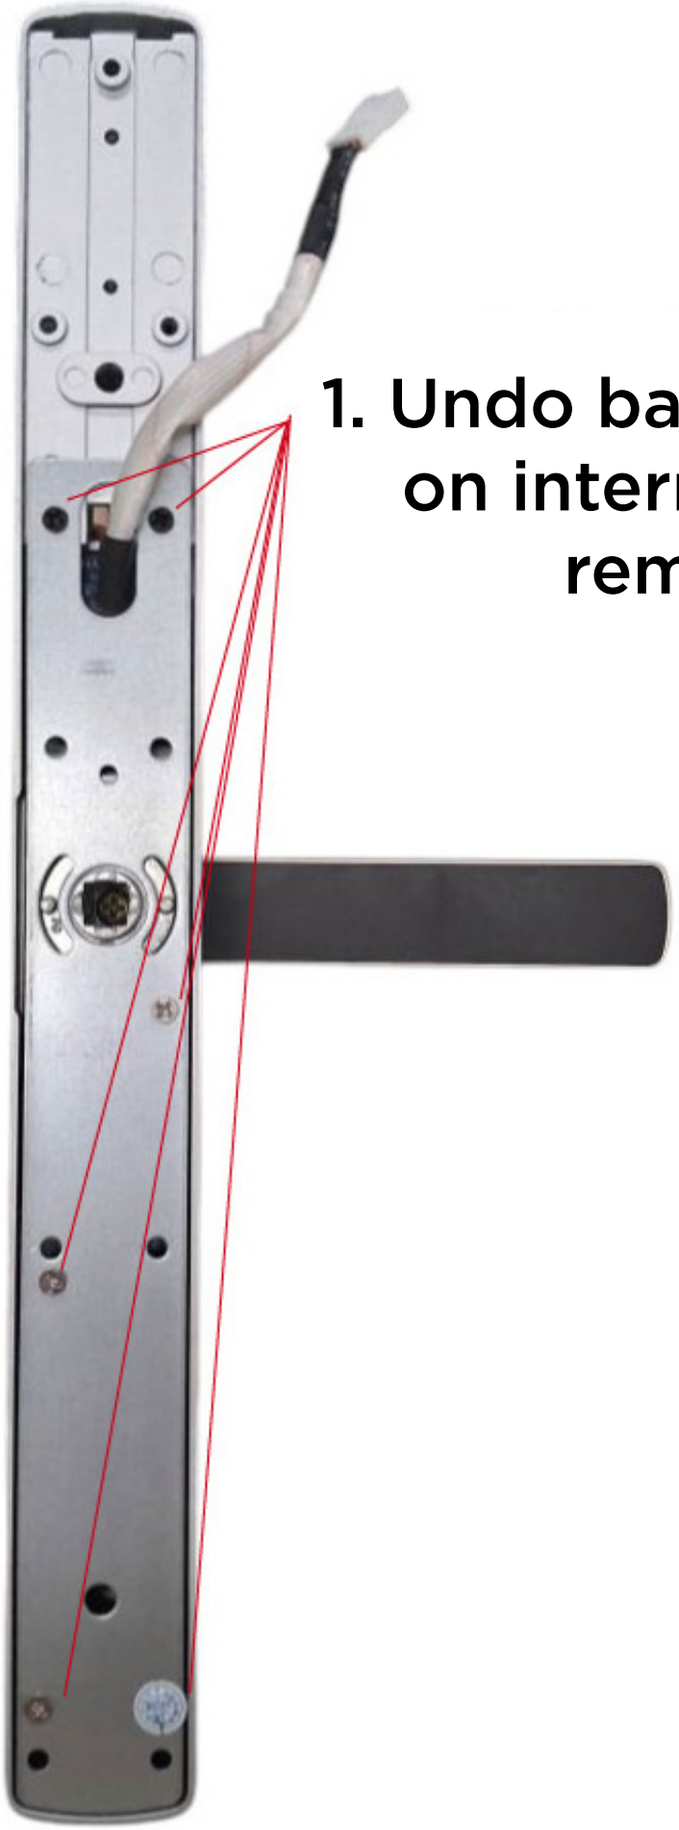

1. Undo back plate screws on internal handle and remove plate

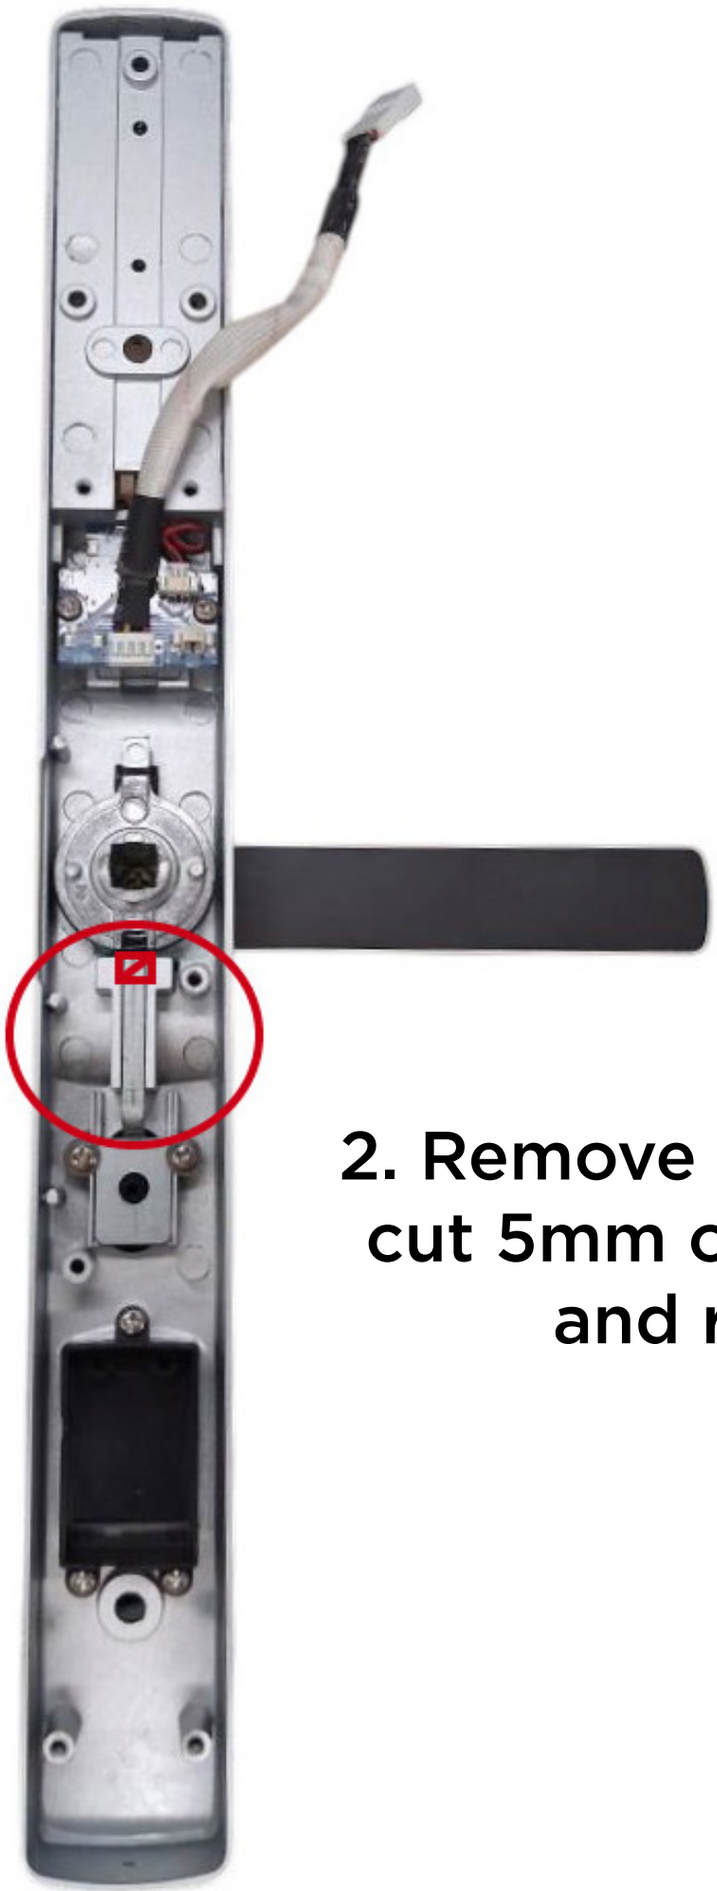

2. Remove tail insert, cut 5mm off the tip and refit