

## FITTING INSTRUCTIONS FIT1012


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

### BONNET GUARD HYUNDAI VELOSTER

### BG596D

1. Raise bonnet of vehicle
2. Clean front part of the bonnet
3. Position the Bonnet Guard on and take note of the 2 pre-drilled holes at the rear of Bonnet Guard.
4. Clean the area with supplied alcohol wipes

5. Mark the hole positions and attach the Rhino tape and clips

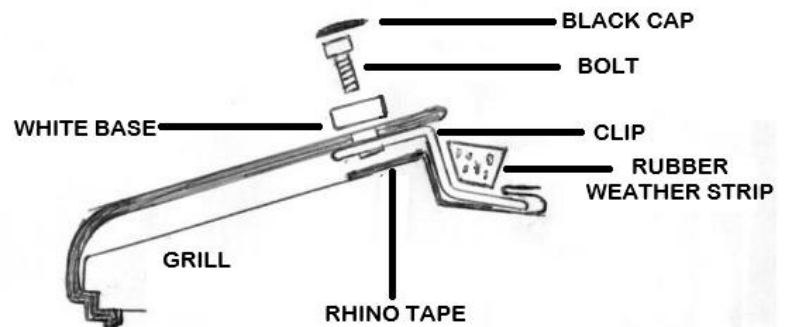

6. Install the front first as shown in sketch

7. Fit bumpons to the bonnet as per the red dots below. Do not install bumpon on the bonnet guard, they must be installed to the vehicle



8. Fasten the Bonnet Guard with the supplied bolt, base and black

# ***airplex***

AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and lukewarm water solution, using a clean, soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.