

FITTING INSTRUCTIONS FIT1170


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

GWN CANNON 2020+ NUDGE BAR

NB160

MADE IN NEW ZEALAND


1. Remove belly pan
2. Place spring wire on black T-bolt (Fig1) and thread through a hole on the side of the chassis and out of the hole on the underside of the chassis.

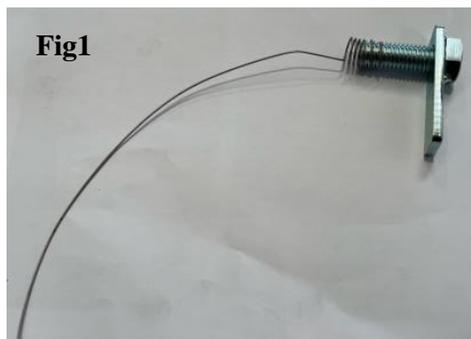

3. Place bracket on and do up **finger tight**



4. Using the spring wire feed the silver T-bolt (Fig1) through the hole on the inside of the chassis and top hole in the bracket. **Finger tight**

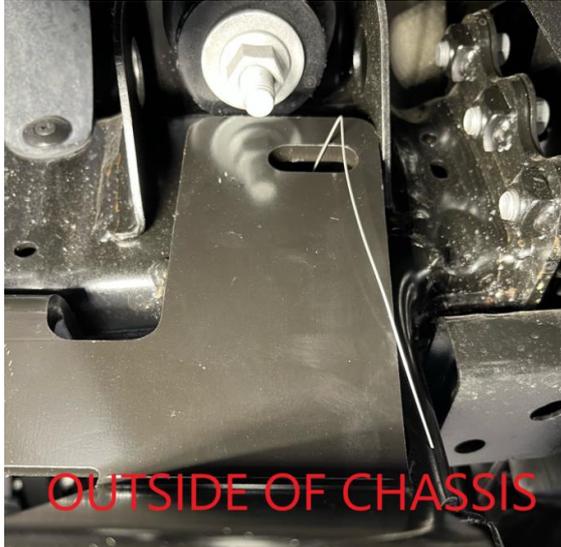

5. Repeat other side

6. Attached Nudge bar onto brackets **finger tight.**



7. Attach 2 support brackets near number plate. 2 bolts behind nudge bar and bracket slide behind the nudge plate and secure with number plate on top.



8. Align nudge bar and **tight up all nuts and bolts.**
9. Reinstall belly pan