



## Weather Shields Fitting Instructions



Genuine Accessories

**KIA EV3**

Kit Part No: **EVA22APK10** (Dark Tint)  
**EVA22APK00** (Matte Black)

## General Notes







- Read through the fitting instructions before installation of the accessory. Install the accessory following the fitting instructions. Failure to do so may cause damage to the vehicle or the accessory.
- Ensure all recyclable discarded vehicle accessory components and packaging are recycled following local recycling regulations.
- It is always recommended that this accessory is fitted by a qualified Kia Technician.
- Safely store and protect any removed vehicle components.
- Ensure all bare metal surfaces are protected using automotive bare metal primer and touch-up paint, or suitable automotive rust inhibitor.
- Remove all metal swarf and dust from all vehicle surfaces if surface is used for accessory installation.

## Safety Notes

- Check that all work practices comply with safety standards.
- Please wear appropriate clothing and use safety equipment.



## Parts Supplied

1  FRONT RHS	2  FRONT LHS	3  REAR RHS	4  REAR LHS
5  ALCOHOL WIPE	6  ADHESIVE PROMOTER		

## Tools Required



**Important**



Apply within 21° and 38° degrees Celsius  
Do not install when temperature is lower than 16



## Genuine Accessories

# KIA EV3

Kit Part No: **EVA22APK10** (Dark Tint)  
**EVA22APK00** (Matte Black)

### STEP 1

- Remove the contents of the weather shield pack and remove plastic packaging.

**NOTE:** Do not remove 3M adhesive backing tape at this time


### STEP 2

- Take the Alcohol wipe as provided and wipe clean the area of the car where the weather shields are going to be installed.

**NOTE:** Please allow the cleaning product to dry after cleaning.

#### Tools Used

- Alcohol wipe – provided.

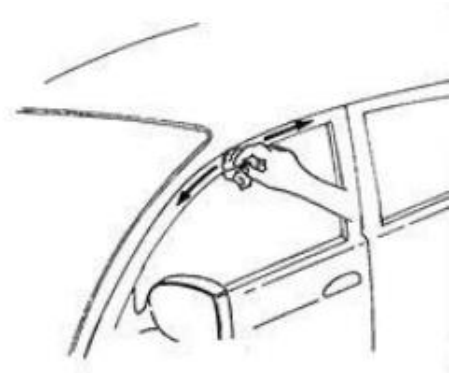


### STEP 3

- Using the provided adhesive promoter, apply directly to the weather shield installation area of the door frames.

**NOTE:** Please allow the cleaning product to dry after this has been applied. The recommended time for this is between 1-10 minutes.

#### Tools Used

- Adhesive promoter– provided.

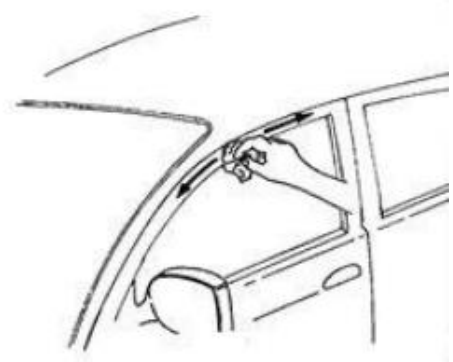




Genuine Accessories

**KIA EV3**

Kit Part No: **EVA22APK10** (Dark Tint)  
**EVA22APK00** (Matte Black)

#### STEP 4

- Take the weather shields one at a time. Remove the red tape protection approximately. 50mm at each end.
- Starting with the front left weather shield, press the weather shield up against the door, lining up where they should sit.
- Position to match the shape of the door.

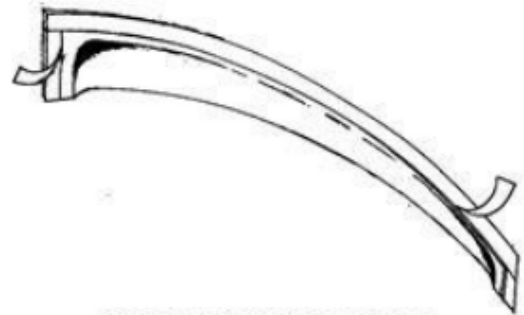


PEEL ENDS ONLY TO START

#### STEP 5

- Once the weather shields are lined up, remove the red tape by holding one hand firmly on the product and peeling the red out from behind.

#### STEP 6

- Once installed, please press the weather shield firmly against the vehicle to help the tape set.
- Drying time can be up to four hours, depending on weather conditions.
- Complete these steps on each door until all 4 parts are installed.

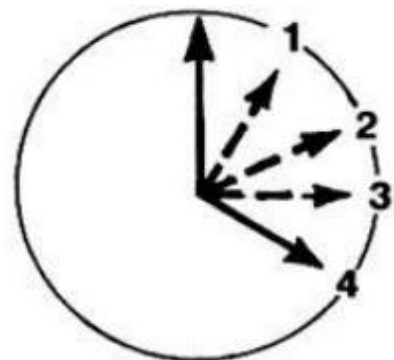

ONCE COMPLETE YOU CAN CLOSE THE  
INSTALLATION INSTRUCTIONS WINDOW