

FITTING INSTRUCTIONS FIT1319

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


BONNET GUARD VW ID.4 2023+

BG652D

MADE IN NEW ZEALAND

1. Raise bonnet of vehicle
2. Clean the front part of the bonnet
3. Position the Bonnet Guard on and take note of the 3 pre-drilled holes at the rear of Bonnet Guard.
4. Clean the area with supplied alcohol wipes
5. Mark the hole positions and attach the clips as shown below
6. Install the bonnet guard as shown in Fig1. Slide bonnet guard tabs into gaps above headlight and grill.

More images below.

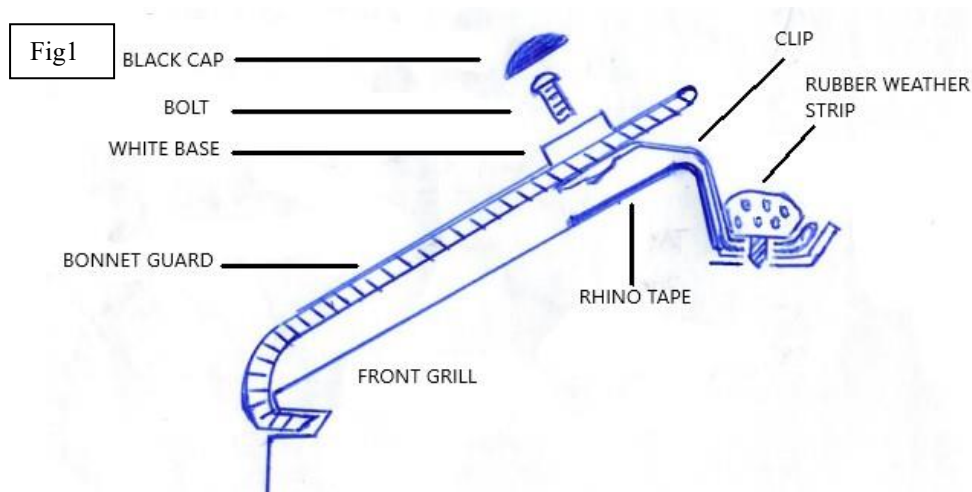

7. Fit bumpons to the bonnet, under the far corner of the Bonnet Guard on both sides to prevent rubbing
8. Fasten the Bonnet Guard with the supplied bolt, base and black cap

*CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET. NEVER PRESS ON
THE BONNET GUARD.*

airplex

AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz



airplex

AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

