



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

FITTING INSTRUCTIONS FIT1323

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


RAD LIDS **ALLOY HARD LID CENTRAL LOCKING KIT**

HL7CENTRALLOCK-RAD

MADE IN NEW ZEALAND

Kit components include:

1. Actuator bracket assembly

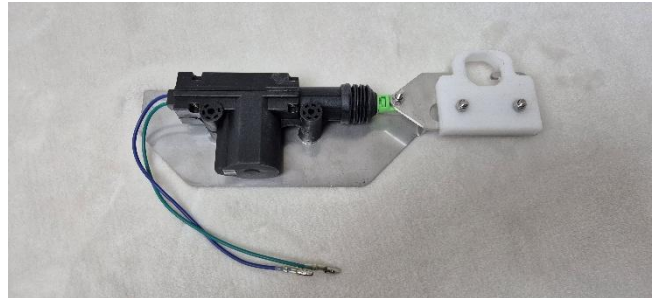

2. Cable ties, Cable tie mounts, 1x screw and nut and alcohol prep wipes



3. Wiring loom – Hard lid section



4. Wiring loom – extension



5. Wiring loom – vehicle section





AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

Step 1:

Remove RAD internal handle cover.

Remove screw and rod attachment arms from the underside of handle and remove plastic guard. Be careful not to lose the special washer.




Special washer

Plastic guard

Step 2:

Install central locking actuator and bucket assembly

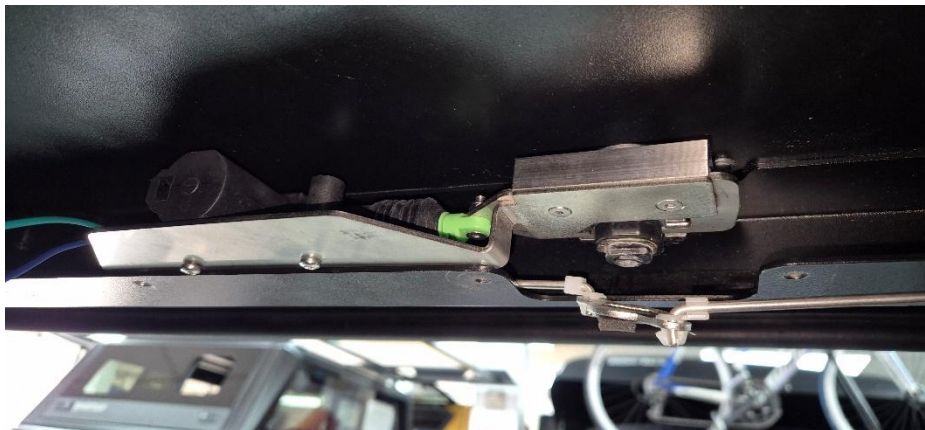




AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

Step 3:

Reinstall screw and rod attachment arms from the underside of handle making sure the special washer is correctly seated. Use tape to hold washer in place as it may fall off if left unattended.

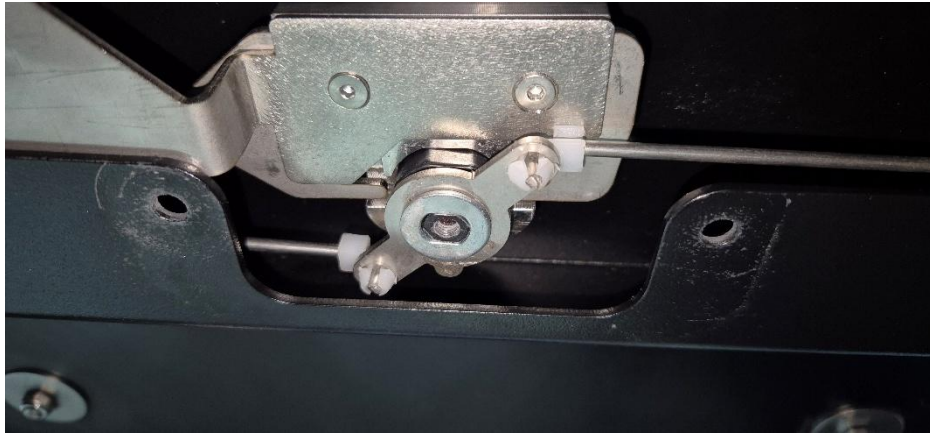



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

Step 4:


Install screw and bolt to hold actuator bracket assembly



Step 5:

Plug wiring loom - hard lid section to the actuator making sure the wiring is clear of any moving parts and running the wiring inside the internal hard lid bracing.

Use cable tie and cable tie mounts to evenly fasten the wire hidden inside the hard lid internal bracing as shown in red below.

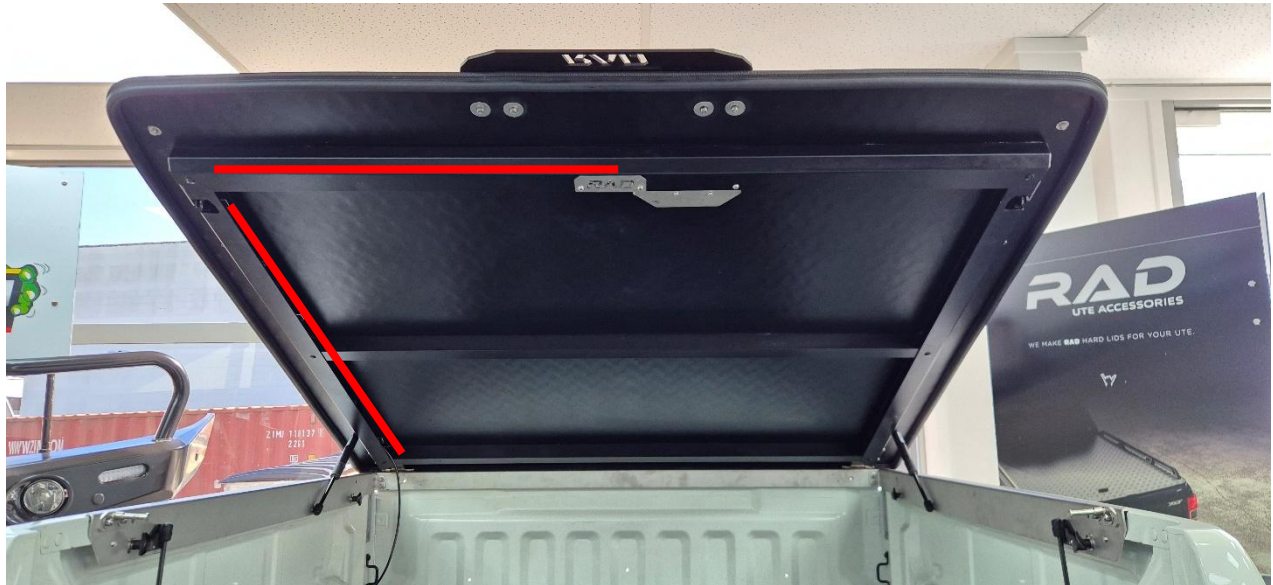

Step 6:

Using the Wiring loom – vehicle section, find an opening and run wiring through the tub down under the vehicle.

Once under the vehicle, find vehicle central locking signals and connect using Wiring loom – vehicle section.

If you require a longer length wire, use the Wiring loom – extension.

Step 7:

Reinstall RAD internal handle cover to complete installation

