


Vehicle bodies and vehicle installation can vary, so please read the following instructions as they refer to important information which could affect the quality of the final installation.

- If a Bedliner is fitted, there may be some additional trimming required.
- Recommended installation by 2 people.



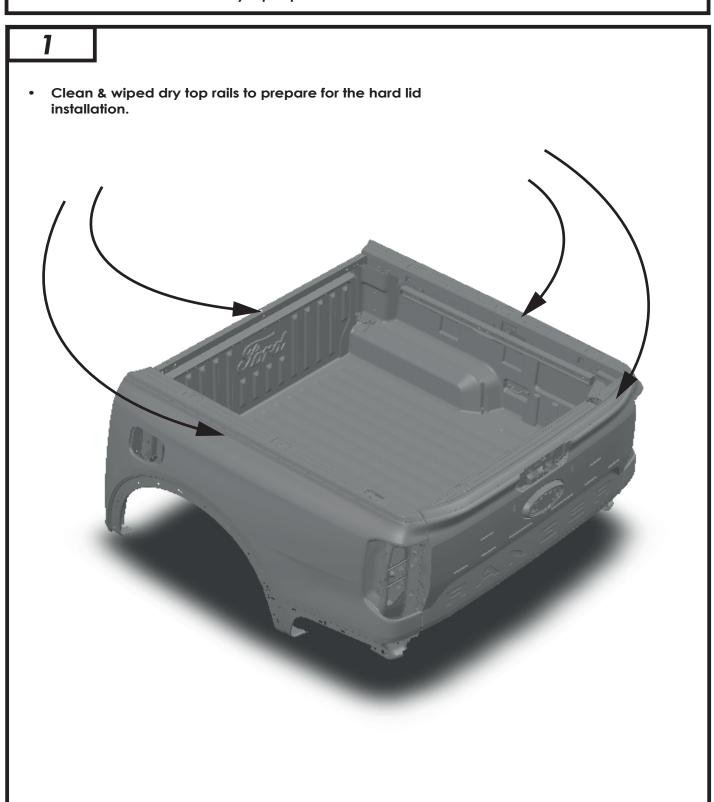

2


- Clean & wiped dry
- Add the 3mm foam tape to the front rail.
- Make sure it goes the full length to each side rail.




3


- Carefully with two people lift and drop in the Hard lid,
- Drop the front end it first followed slowly by the rear.

NOTE: Having the tailgate down helps to avoid hitting it.

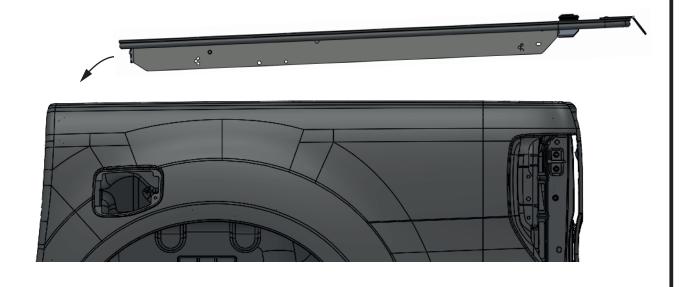




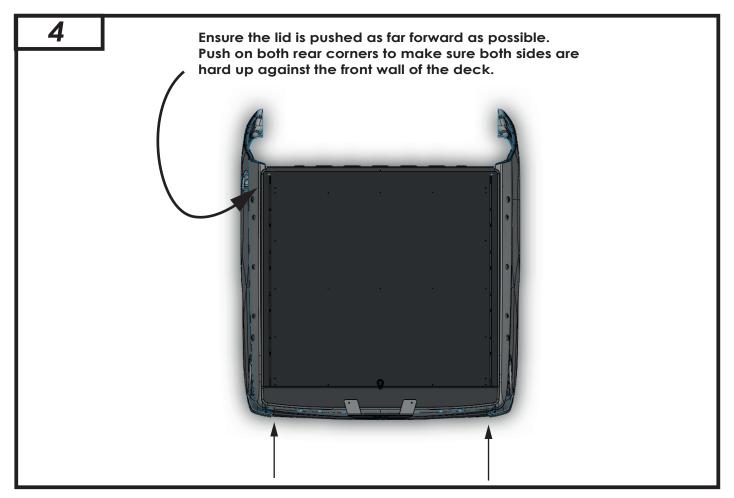


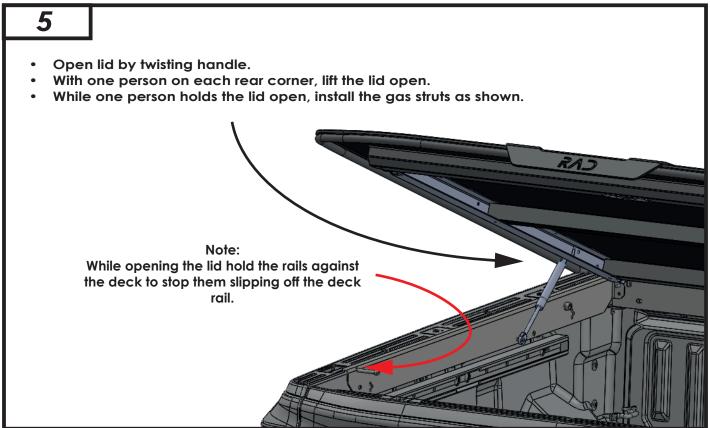



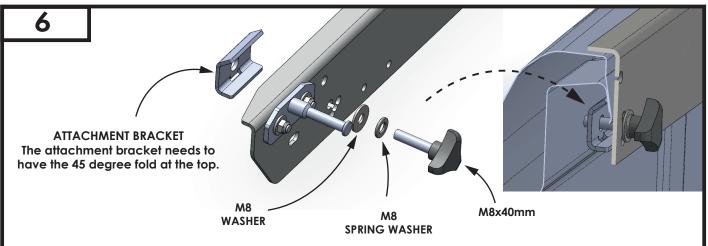


- The attachment brackets are assembled as shown.
- Ensure parts are fitted in correct order as shown.
- Use the hole closest to the bottom of the vehicle rail.

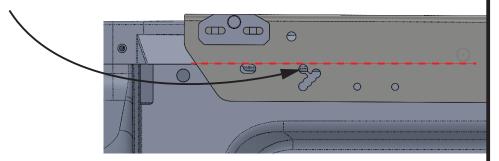

1 & 2




Loosely put all 4 attachment brackets in. Push down on the rails and tight the brackets

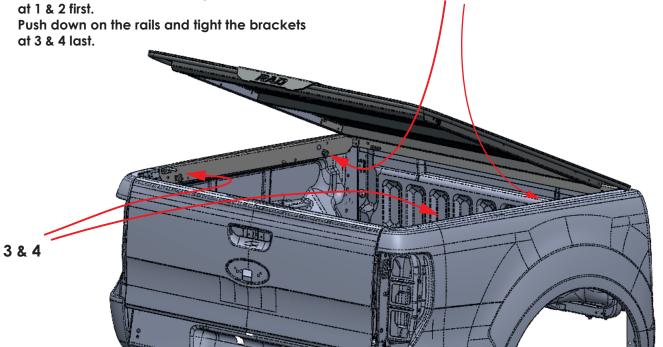




7

- Adjust the latch pin back or forward to have it centred in the latch.
- It is important to make sure it is centred and is not catching on the side of the latch.
- Tighten M6 nuts once it is in place.

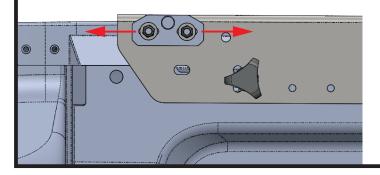



The pin needs to not catch on these surfaces.

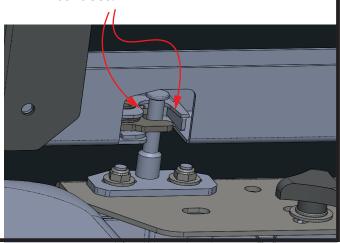

8

- Adjust the latch up and down till the lid latches to the customers liking.
- Ensure the lid seals well around the d-seal.

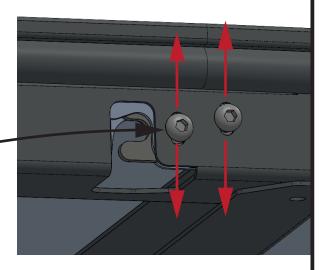

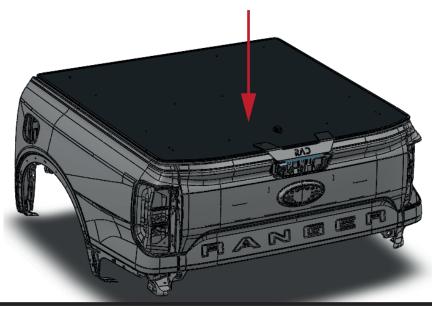



Thank you for getting



FIND US @ RADFORUTES.COM