

RAD HARDLID - SHARK 6 - 2024+ STANDARD - FITTING INSTRUCTION




Vehicle bodies and vehicle installation can vary, so please read the following instructions as they refer to important information which could affect the quality of the final installation.

- If a Bedliner is fitted, there may be some additional trimming required.
- Recommended installation by 2 people.

7

 Clean & wiped dry top rails to prepare for the hard lid installation.

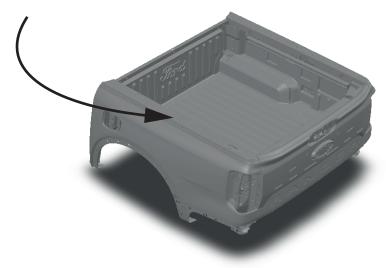

2

 Add the 3mm foam tape to gaps in the front rail or silicone can also be used to seal the gap.






3 Remove the fasteners down both rails, leaving the rear fastener. Do not remove




4


- Carefully with two people lift and drop in the Hard lid,
- Drop the front end it first followed slowly by the rear.

NOTE: Having the tailgate down helps to avoid hitting it.

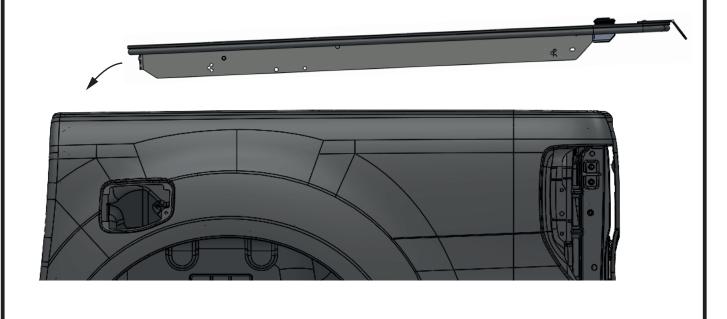




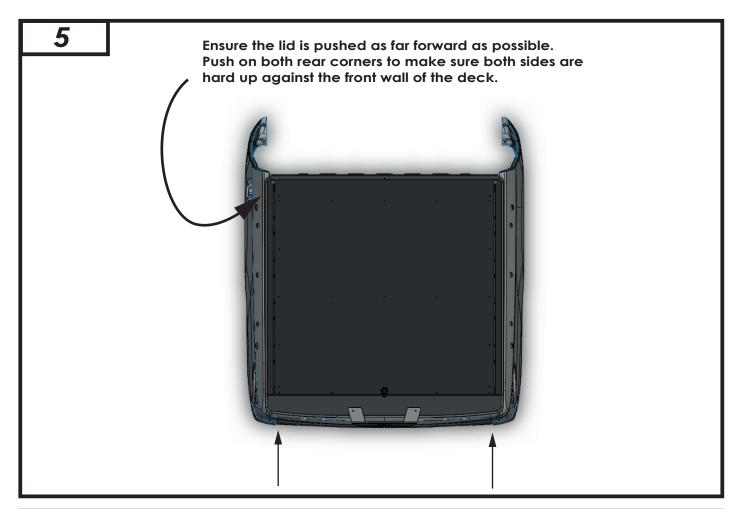

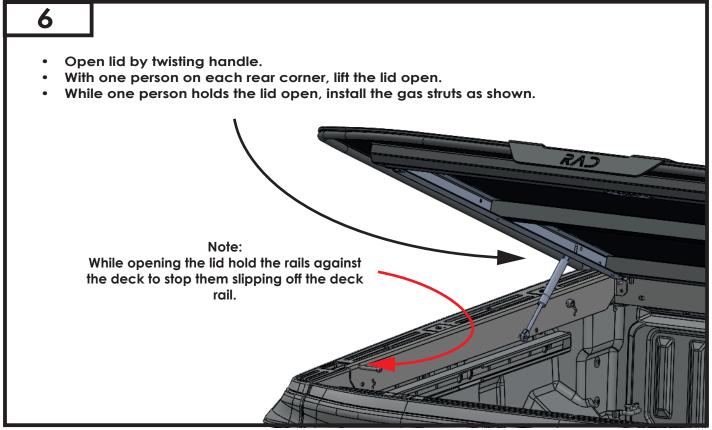




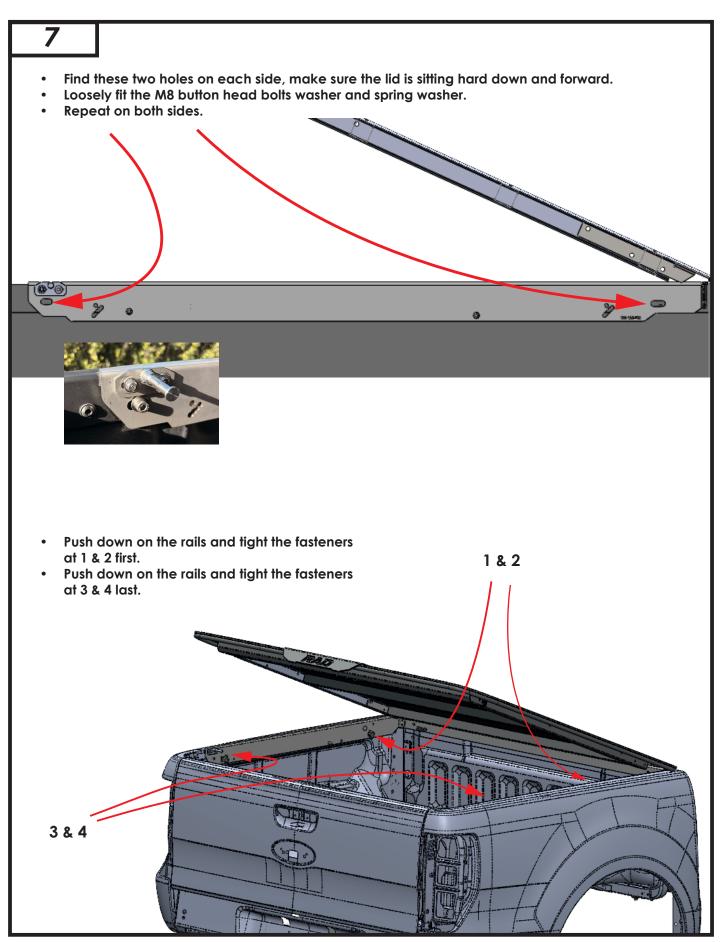




8

- Adjust the latch pin back or forward to have it centred in the latch.
- It is important to make sure it is centred and is not catching on the side of the latch.
- Tighten M6 nuts once it is in place.

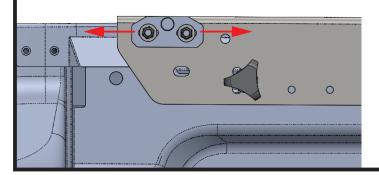



The pin needs to not catch on these surfaces.

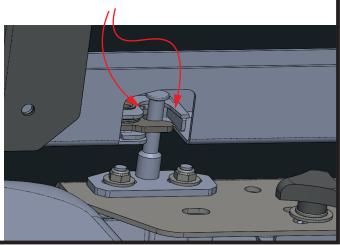

9

- Adjust the latch up and down till the lid latches to the customers liking.
- Ensure the lid seals well around the d-seal.

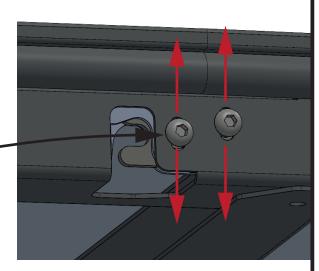

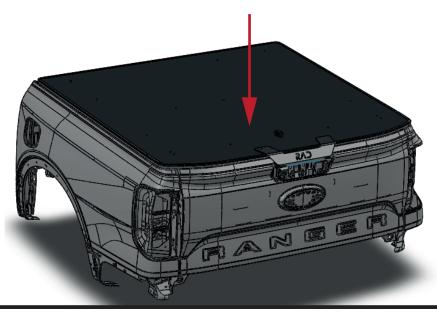

Thank you for getting

FIND US @ RADHARDLIDS.CO.NZ