

FITTING INSTRUCTIONS FIT1347


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

WEATHER SHIELDS KIA CARNIVAL

2546RH & 2546LH

MADE IN NEW ZEALAND

1. Place Weathershield on door and adjust so that the front section seals on sponge strip and fits correctly on door.
2. Note the clips similar to those in the diagram and lower the window glass.
3. Position these clips onto the rubber window molding and fasten loosely to the Weathershield with the screws supplied.
NOTE: The clips do not fit between the rubber window molding and door frame. They will press into the rubber, clear of the glass when finally tightened.
4. Tighten all the screws, but do not overtighten.

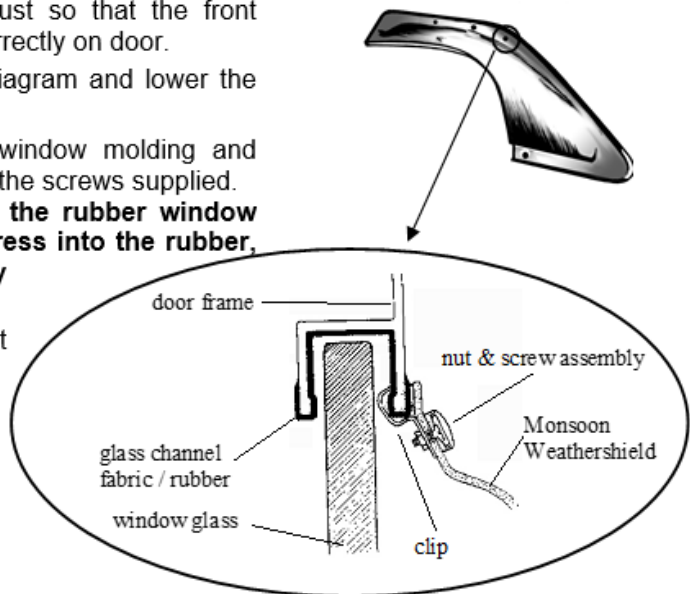

Double sided tape

