

## FITTING INSTRUCTIONS FIT1351


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

### FUSO SHOGUN EURO STYLE SUNVISOR


P/N SV134A

#### Installation Guide:

1. Assemble the rubber pads to the main steel brackets.  
Fit the self-adhesive rubber pad to the flat plate on the steel Sunvisor bracket.
2. Drill (or carefully cut) a hole through the rubber to correspond to the two holes in each bracket.  
Fit as shown in the image below.

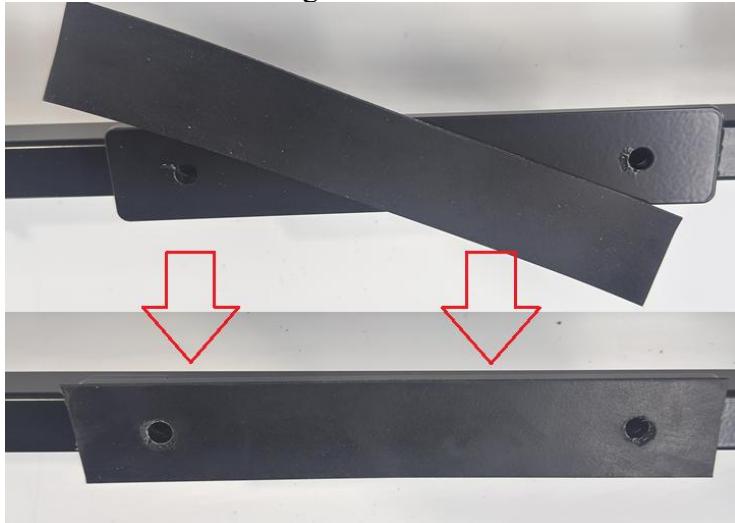

3. Unpack the acrylic Sunvisor blade. Lay it on a soft clean surface being careful not to scratch the surface while assembling..
4. Assemble the two main steel brackets to the inside of the Sunvisor blade.  
Note the assembly order of the fastenings. These are designed so that no part of the steel touches the Sunvisor blade. Take note of the assembly order in the below diagram.

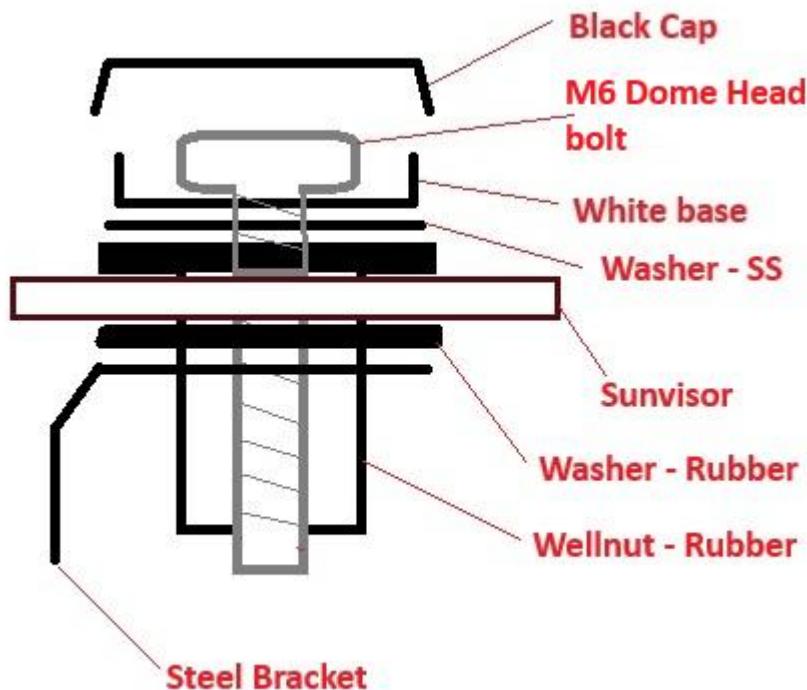

5. Tighten each of the screws while holding the assembly together.

Important: **DO NOT OVER TIGHTEN!**

Tighten the screw until there is a 'bulb' or swelling of the lower part of the rubber to prevent it pulling through the hole in the steel bracket. See example of Maximum bulb below.



6. The Sunvisor is now fully assembled and requires fitting to the truck.

Note: the assembly is the same for both high roof and low roof Fuso Shogun truck. However, the high roof does have two additional mounting support plates.

7. On the truck, locate and remove the four screws/bolts above the windscreens. Remove these M8 screws. They will not be re-used.

FITMENT TO LOW ROOF SHOGUN – Skip to step 13.



AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)

8. For the high roof cab: There is a rectangular support plate to be fitted under each bracket. Bracket number B79 x 2. This is supplied with the high roof kit.
9. Hold the support plate up to align with the M8 threaded holes where the handle/screws were removed. Note the size of the area where the plate is to be fitted. Thoroughly clean the area with isopropyl alcohol wipe to similar.



10. Peel the backing off the self adhesive tape on each plate.
11. Fit the plate to the truck, taking care to align with the holes. Press the plate firmly to adhere.
12. Using the supplied M8 bolts, washer and spring washer, fasten the Sunvisor to the front of the truck.
13. Tighten bolts firmly.
14. If there is protective film still on the stainless decorative strip on top of the Sunvisor, remove this.