


## FITTING INSTRUCTIONS FIT1362

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


### BONNET GUARD VW TIGUAN 2024+

### BG679D

1. Clean and open bonnet.
2. Test Bonnet Guard on the bonnet and note 2 holes in bonnet that correspond with 4 pre-drilled holes in Bonnet Guard.
3. Fit Bonnet Guard in position, fasten securely with supplied plastic base and steel screw.

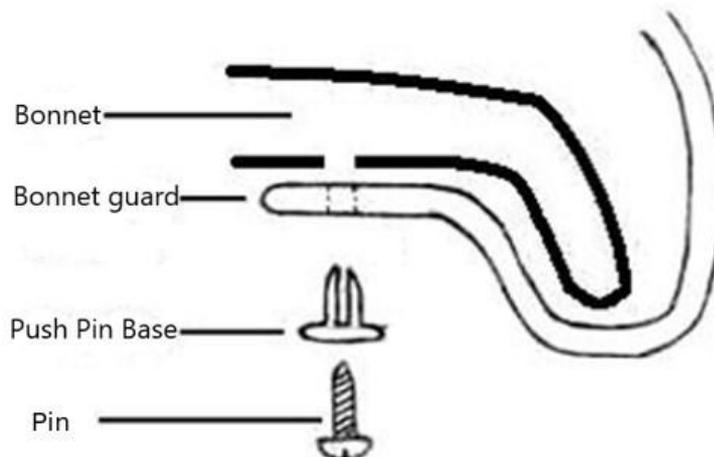

4. Fit the plastic "W" clips to the 2 holes at the outer edge of the Bonnet Guard. Apply the supplied rectangular pieces of anti-abrasive tape on edge of bonnet where plastic fastening "W" clips secure the Bonnet Guard. Use the supplied alcohol prep-pads to cleanse the area first.

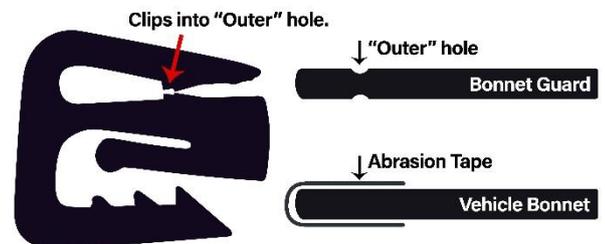

**CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD.**

Wash acrylic with a mild soap and lukewarm water solution, using a clean, soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.