



AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)

## FITTING INSTRUCTIONS FIT1370


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

# BONNET GUARD GEELY RIDDARA RD6

# BG680D

MADE IN NEW ZEALAND

1. Raise bonnet of vehicle
2. Clean the front part of the bonnet
3. Position the Bonnet Guard on and take note of the 5 pre-drilled holes at the rear of Bonnet Guard.
4. Give the area around the camera a quick clean with the included alcohol wipes, specifically where the double-sided tape on the bonnet guard will sit.
5. Mark the hole positions and attach the clips as shown below
6. Slide the 4 bonnet guard tabs into gaps above headlight and grill.

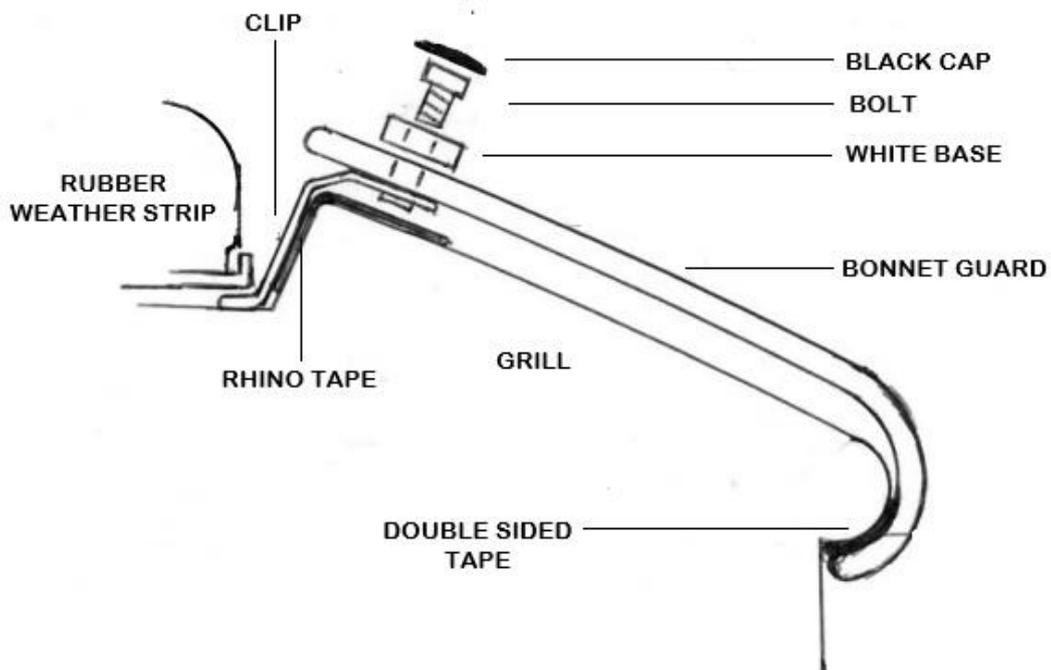



AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)

7. Fit bumpons to the bonnet, under the far corner of the Bonnet Guard on both sides to prevent rubbing
8. Fasten the Bonnet Guard with the supplied bolt, base and black cap

*CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET. NEVER PRESS ON  
THE BONNET GUARD.*