


FITTING INSTRUCTIONS FIT1382

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD JAC T9

BG682D

1. Raise bonnet of vehicle
2. Clean the front part of the bonnet
3. Position the Bonnet Guard on and take note of the 5 pre-drilled holes at the rear of Bonnet Guard.
4. Mark the hole positions on the bonnet guard and attach the clips as shown below diagram and images

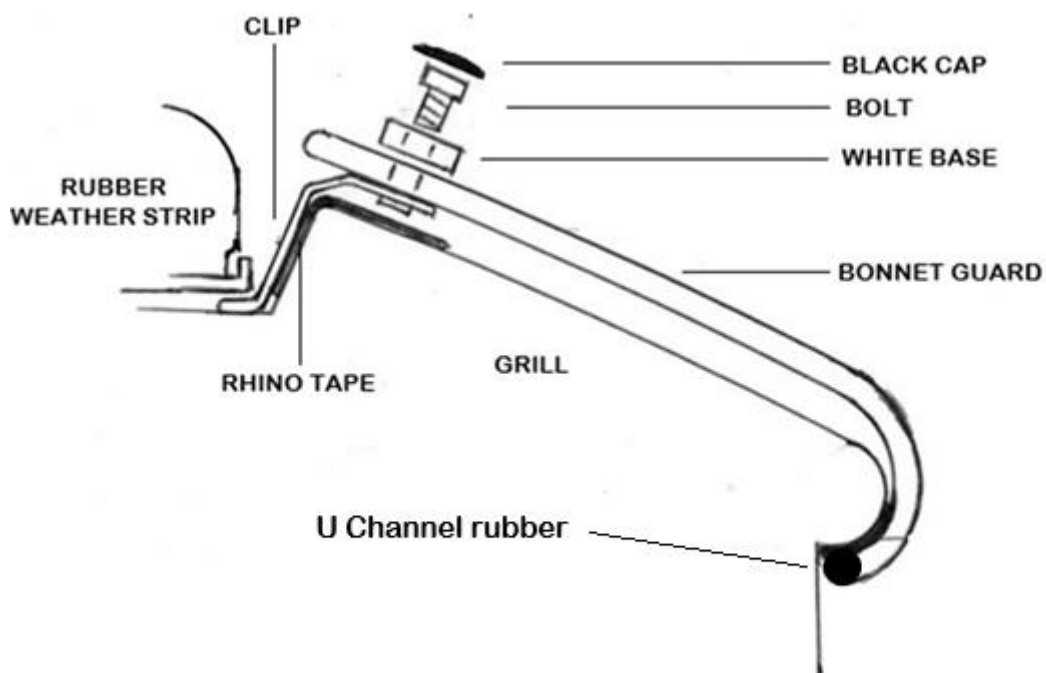

airplex

AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz



airplex

AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

5. Slide the 4 bonnet guard tabs with pre-installed rubber into gaps above headlight and grill. See image below



6. Fit bumpers **to the bonnet**, under the far corner of the Bonnet Guard on both sides to prevent contact with paintwork.
7. Fasten the Bonnet Guard with the supplied bolt, base and black cap



airplex

AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

*CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET. NEVER PRESS ON
THE BONNET GUARD.*