

FITTING INSTRUCTIONS FIT1384

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD TOYOTA HILUX TRAVO N90 2026+

BG683D


1. Clean & Open Bonnet of Vehicle
2. Position the **bonnet guard centrally** along the front leading edge of the vehicle's bonnet. Note how the middle of the bonnet guard will **sits in the groove between the bonnet and the front Toyota emblem trim** and the outside end of the bonnet guard wrap underneath the bonnet. See 2nd image below.



3. Look under the front edges of the bonnet.
Check that the holes on the **bonnet guard inner tabs align** with the factory pre-drilled holes.
Keep the guard temporarily held in this position for the next fastening step.



4. Verify the **bonnet guard is perfectly centred** and fully seated against the bonnet edge.
Insert the provided **push pins through the washers** first.
Secure the guard by pushing the pins firmly into the aligned holes.
Follow the exact installation sequence shown in the diagram below

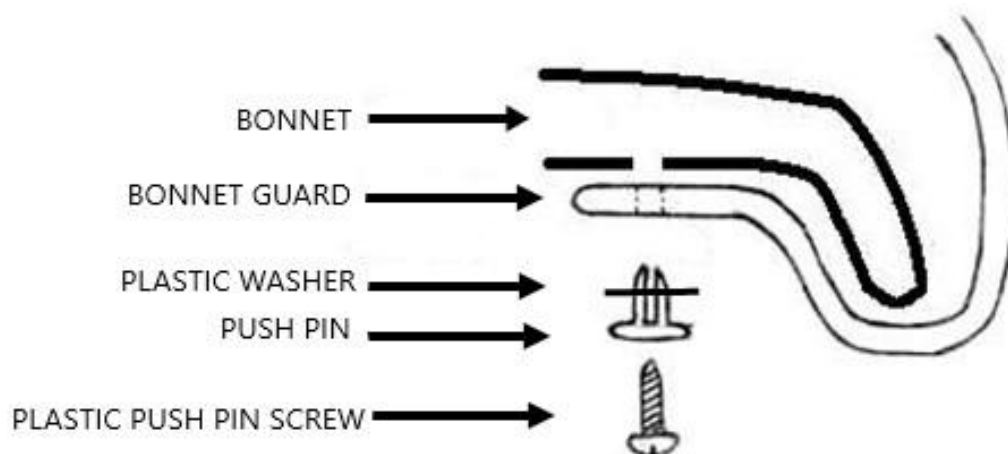

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and lukewarm water solution, using a clean, soft cloth or sponge.