

FITTING INSTRUCTIONS FIT1390

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION


NUDGE BAR NEXT GEN RANGER

NB168

ATTENTION : PLEASE READ AND UNDERSTAND ALL INSTRUCTIONS AND WARNING BEFORE INSTALLATION.

PARTS LIST :

STORM NUDGE BAR (1 SET)

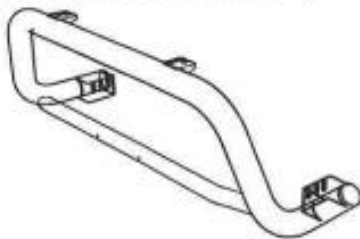


MOUNTING BRACKETS RH-LH (1 PAIR)




SUPPORT MOUNTING BRACKETS RH-LH (1 PAIR)



BOLTS M12x30x1.25 (10 PCS.)

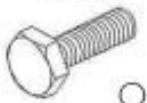

BOLTS M12x100 (4 PCS.)

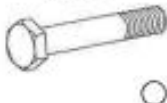

NUT M12 (14 PCS.)



WASHER 1/2 (26 PCS.)



SPECIAL WASHER 1/2 (2 PCS.)



BOLTS M8x30x1.25 (2 PCS.)




WASHER M8 (2 PCS.)






STEP 1

- REMOVE BOLTS THAT SECURES ORIGINAL RECOVERY POINT
- INSTALL MOUNTING BRACKETS TO THE CHASSIS WITH ORIGINAL BOLTS AND RECOVERY POINT ON BOTH LEFT & RIGHT HAND SIDES

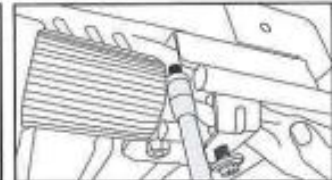

STEP 2

- PUT THE SUPPORT MOUNTING BRACKETS BOTH SIDE (RH-LH) AND TIGHTEN THE ORIGINAL BOLTS THAT SECURES ORIGINAL RECOVERY POINT
- PUT THE MOUNTING BRACKETS BOTH SIDE (RH-LH) AND TIGHTEN BOLTS M12 X 100

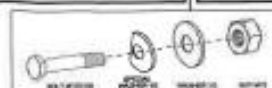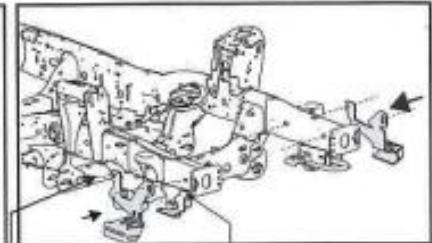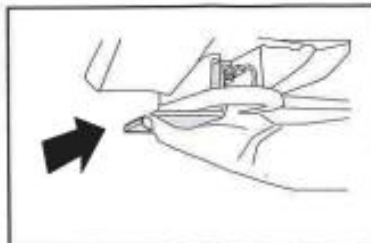

STEP 3

- FIXING THE SUPPORT BRACKET LEGS AND THE BRACKER TOGETHER BY USING A SET OF M12 X30 BOLTS TO SCREW INTO BOTH POINTS ON BOTH SIDES.
- INSTALL THE BUMPER TO THE POSITION OF THE LEGS. BY FIXING 2 BOLTS ON EACH SIDE AS SHOWN IN THE PICTURE AND COMPLETE THE DISTANCE SETTING

