



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826
info@airplex.co.nz www.airplex.co.nz

FITTING INSTRUCTIONS FIT1391


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD KMG MUSSO 2026+


BG686D

MADE IN NEW ZEALAND

1. Clean and open bonnet.
2. Trial fit the Bonnet Guard and note the 2 pre-drilled holes in the Bonnet Guard that correspond with the holes in the underside of bonnet.
(these 2 holes are currently partially securing the rubber weatherstrip underside of the bonnet)
3. Remove the 2 corresponding plastic fasteners.
4. Locate Bonnet Guard in position and fasten securely with supplied screw between the bonnet and rubber weather strip.
Note sequence as per diagram as below.

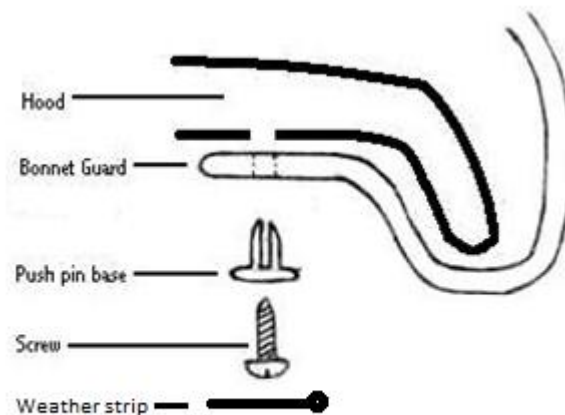

5. Apply the anti-abrasive tape on edge of bonnet where plastic fastening clip secures the Bonnet Guard near the fenders. Use the supplied alcohol prep-pads to cleanse the area first.
6. Snap the supplied plastic "W" clip into hole position on Bonnet Guard as shown, over the anti-abrasive tape.

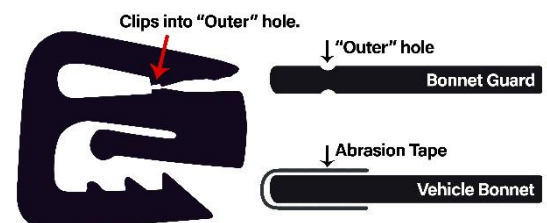

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.
NEVER PRESS ON THE BONNET GUARD***

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.