


PRO *lift*


FITTING INSTRUCTION

Ssang Yong

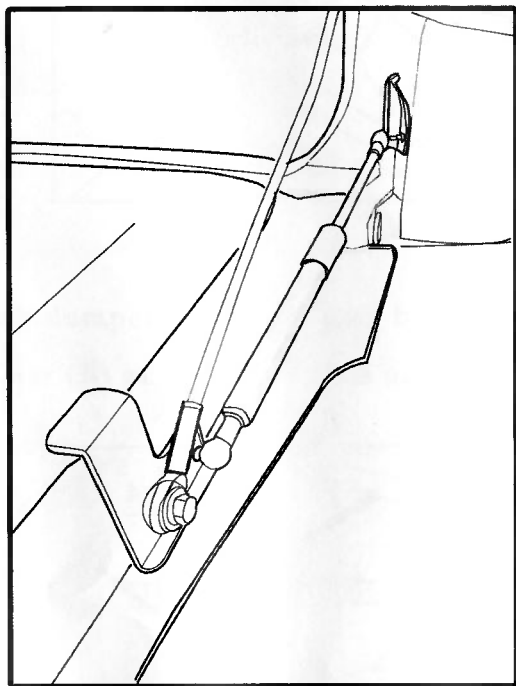

Patent Pending Worldwide

Part list

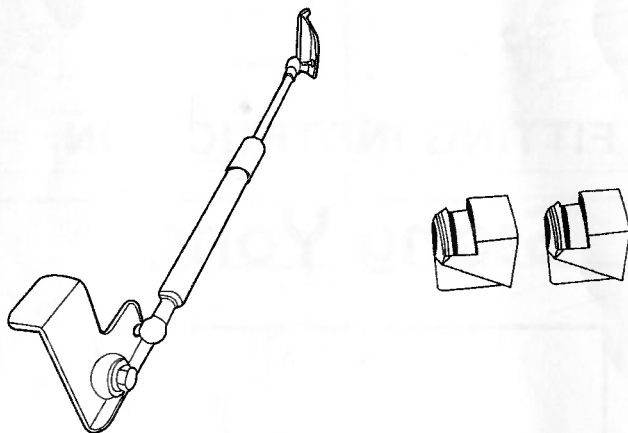


Tooling


No.12,14




1. Attache damper to the truck using original bolt (A)

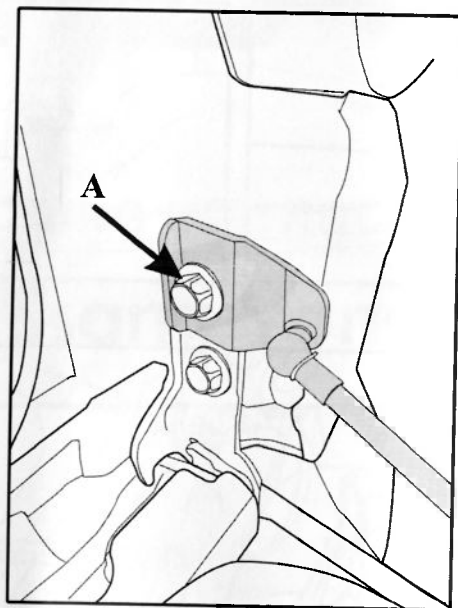


2. Attach damper to the tailgate by putting damper bracket (B) and tighten with original bolt (C)

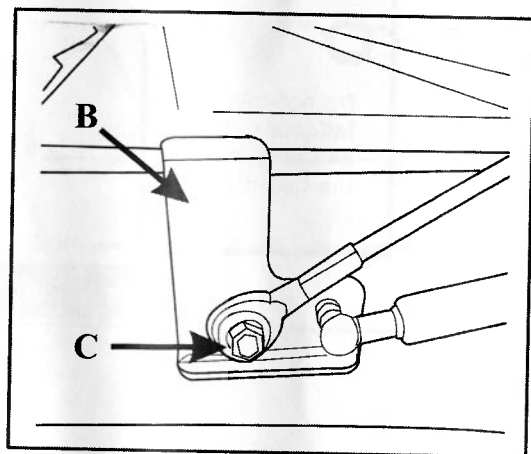



A

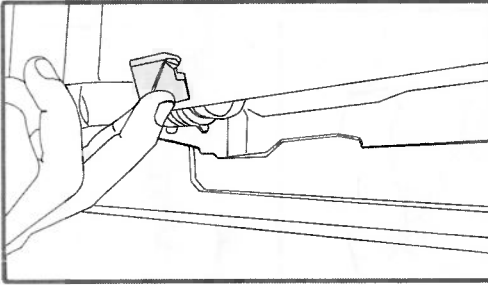

B

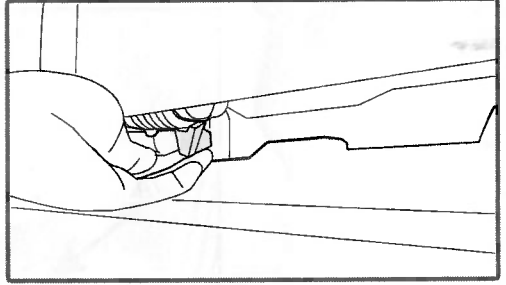

C

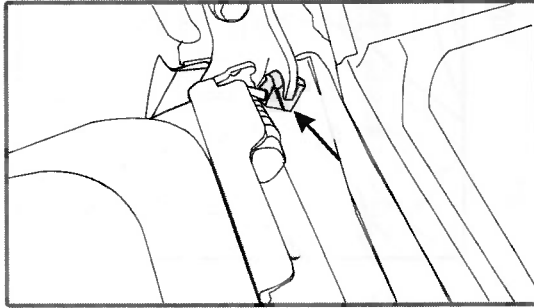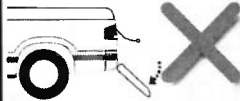**CAUTION**

Do not take off
tailgate cable
and drop down
the tailgate

Patent Pending Worldwide