



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

FITTING INSTRUCTIONS FIT1402

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

DAF Stoneguard. NGD

SG706B


MADE IN NEW ZEALAND

Stoneguard Installation Guide:


These measurements and instructions are intended as an accurate guide. All product positioning on the vehicle **should also be checked visually before final drilling & alignment.**



1. Remove both the Left and Right side A-pillar trims. Remove using the appropriate trim removal tool.
2. With the A-pillar covers removed and on the workbench, apply masking tape to the lower end of the A-pillar trim and mark up as shown in the diagram below.
3. Carefully drill as marked with an 18mm hole saw.

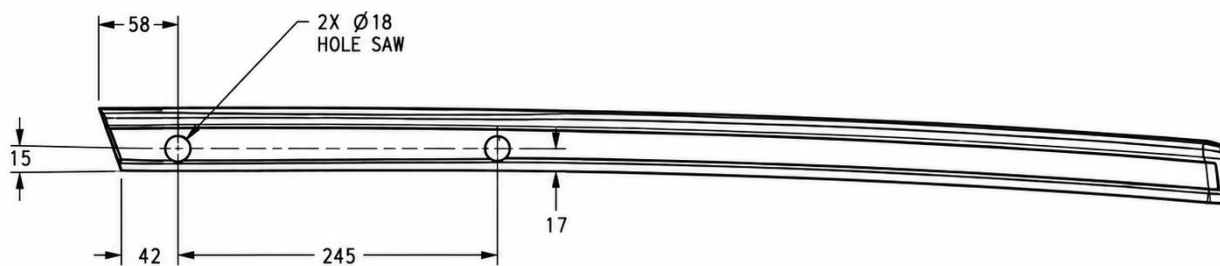

LEFT SIDE

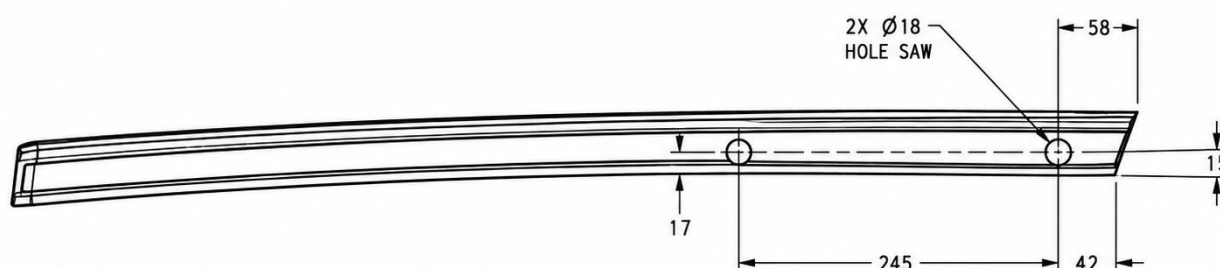

RIGHT SIDE



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

4. Remove the lower two fasteners that hold the pillar trim base to the truck on each side.



5. Refit the A-Pillar trim to the truck.
6. Fit the two front support brackets to the front of the cab using;
M6 x 40mm Machine screw
Flat Black washer
Bracket (as shown in image below)
16mm tube spacer in behind bracket.



7. Fasten the stoneguard to the A-Pillar using two fasters each side.
M6 x 40mm button head machine screw
M6 Spring Washer
M6 flat washer
Stoneguard
16mm Spacer behind bracket
Note: While tightening these fittings, lightly pull the stoneguard forward to ensure it clears the door opening.



AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

8. Fasten the two front support brackets to the front of the stoneguard using;
M6 x 20mm Button Head machine screw
M6 lock nut

