AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

FITTING INSTRUCTIONS FIT1404

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

CARGO BARRIER LDV DELIVER9	CB111

- **Note: Before drilling, always check you are not going to damage any vehicle components i.e… Fuel tank, water hoses, electrical wiring, battery etc… Make sure you read the general fitting instructions before starting.**
- **This Cargo Barrier is capable of being located in one position only, behind the driver and passenger seats**
- **The installation kit contains sufficient components for fitment in this location.**
- **This Cargo Barrier and its correct installation complies with the AS/NZS 4034.1 Standard.**

Top

Quantity	Item	Check list (-)
2	Long Fixed brackets	
2	M10 x 25mm Button head bolts	
2	M10 Flat washers	
2	M10 Nyloc Nuts	
2	Mount plate sets	
4	M10 x 25mm Button head bolt	
4	M10 Flat washers	
4	M10 lock washers	
1	Threaded allen key tool	

Bottom

Quantity	Item	Check list (-)
2	Z brackets with slotted hole at one end	
2	M10 x 25mm Button head bolts	
8	M10 Flat washers	
2	M10 nyloc nut	
2	Mount Plate sets	
4	M10 x 50mm button head bolt	
4	M10 Star washers	
1	M10 x 60mm button head bolt	
1	15mm plastic spacer	

AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

Top mounts:

- Locate factory hole at the top showen in photo



- Measure back 48mm mark and drill out to 12mm you can reach over the top and hold the tapped mount plate to bolt the mount through.
- Attach the bracket to barrier with M10 x 25mm button head bolt with nyloc nut and flat washer
- Then attach to the rear hole on the mount with M10 x 25mm bolt with lock and flat washer.




Bottom Mounts:

- Sit barrier in place
- Attach the one small bottom bracket to the passenger side of the barrier.
- Fold bracket in wards to sit on the the floor.
- Fit mount plates on the floor parallel to eachother.
- On the passenger side mark through the end of the bracket for your first point, sit mount plate on the floor mark and drill the first hole to 11.5mm and the rear to 19mm using the threaded allen key to feed the threaded mount plate underneath. NOTE: use a spacer on the drill and Before drilling check under the vehicle to be sure its clear.

AUTOMOTIVE ACCESSORY
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand
PO Box 11286, Ellerslie, Auckland 1542 New Zealand
PH +64 (9) 276-9826 Fax +64 (9) 276-9836
info@airplex.co.nz www.airplex.co.nz

See mount picture:

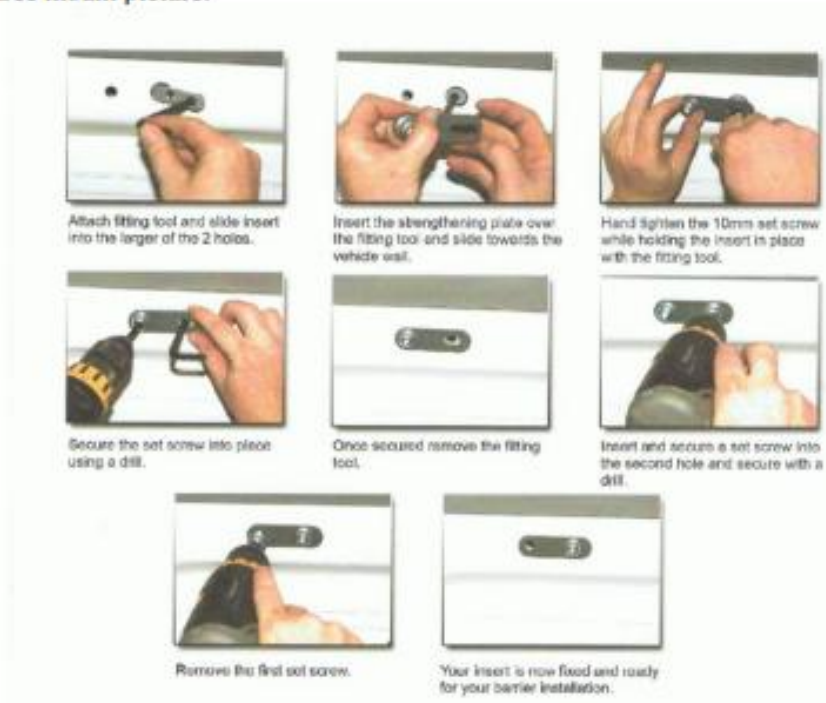

- Use M10 x 50mm with lock and flat washers to mount on the mounts. See photos
- Drivers side ensure barrier is siting straight and use the tab on the barrier to mark your first hole point, drill both holes to 11.5mm put mount on the floor and the tapped plate goes under the vehicle. Use M10 x 60mm with 15mm spacer for the front hole and M10 x 50mm for the rear hole



Note: If vehicle is a double door, the same fitting instructions apply as the passenger side, fitting the mount.