


FITTING INSTRUCTIONS FIT161

PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

BONNET GUARD SUZUKI VITARA V6

BG276D


1. Open hood of vehicle.
2. Place Bug-Guard in position on hood of vehicle so that the lower moulded tag sits up against the inside stiffener panel of the hood. **Ensure it is centrally located on the hood.**
3. When the bug-guard is in position, mark the location of the holes onto the stiffener panel of the hood and then remove Bug-Guard.
4. Drill the marked holes with 2.8mm (7/64") drill bit, **taking care to only drill through the inside stiffener panel.**
5. Re-position Bug-Guard on hood. Attach with the screws and washers provided.
Sequence should be nylon sleeve, washer, screw.
Do not overtighten the screws.
6. Look to see where Bug Guard touches hood of vehicle, and fit rubber vibration bumpons as required.
7. Fit "Bumpons™": These protective adhesive domes **MUST** be fitted to prevent possible damage to the hood by rubbing. (see diagram).

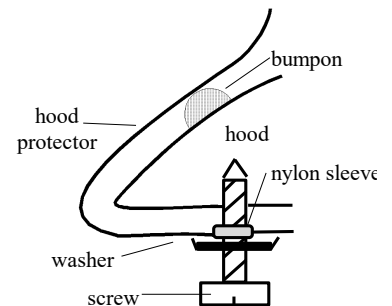

THE BONNET GUARD MUST NOT TOUCH THE HOOD WHEN IN USE.

Check the drawing supplied here as a guide to the preferred positions to locate the Bumpons™.

CLOSE THE HOOD BY DROPPING FROM 6" HEIGHT.
ASSIST CLOSURE ONLY BY PRESSING ON THE HOOD.
NEVER PRESS ON THE BONNET PROTECTOR.

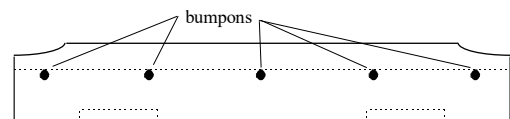

8. To apply the bumpons, the hood must be dry and clean of dirt, grease, polish, or water. When the Bumpon™ positions have been decided, clean these areas with the Alcohol Prep Pads supplied, and apply the Bumpons™ to the hood. Do not touch the adhesive.
9. It is the drivers responsibility to regularly check that the Bumpons™ are in place and that the Bonnet Guard never touches the hood. Replacement parts are readily available from the Distributor.

Hood adjustment: After fitment of Bug Guard, it is important to check if there is sufficient room between the hood and the grille. Close hood slowly to determine if room is sufficient. If doubtful, it is advisable to adjust the hood stops to allow more room.

Wash acrylic with a mild soap and luke warm water solution, using a clean soft cloth or sponge.
No authorisation by or association with any automobile manufacturer is implied.

CAUTION: FOR VEHICLES WITH BONNET TURBO INTAKES, PLEASE CHECK SUITABILITY OF THIS PRODUCT WITH YOUR SERVICE TECHNICIAN.