



AUTOMOTIVE ACCESSORY  
MANUFACTURE & DISTRIBUTION

AIRPLEX INDUSTRIES LTD  
21 Saleyards Road, Otahuhu, Auckland 1062, New Zealand  
PO Box 11286, Ellerslie, Auckland 1542 New Zealand  
PH +64 (9) 276-9826 Fax +64 (9) 276-9836  
[info@airplex.co.nz](mailto:info@airplex.co.nz) [www.airplex.co.nz](http://www.airplex.co.nz)

## FITTING INSTRUCTIONS FIT982


PLEASE READ INSTRUCTIONS COMPLETELY BEFORE INSTALLATION

### BONNET GUARD HOLDEN COLORADO 2016+


### BG573D

MADE IN NEW ZEALAND

1. Open the Bonnet and fit the Bonnet Guard in place ensuring that it is centrally located. Note the holes in the Bonnet Guard lining up with the holes in the Bonnet.
2. Insert the plastic grommet through these holes in the underside of the Bonnet.
3. Firmly fasten using screws provided. As shown in diagram "A"

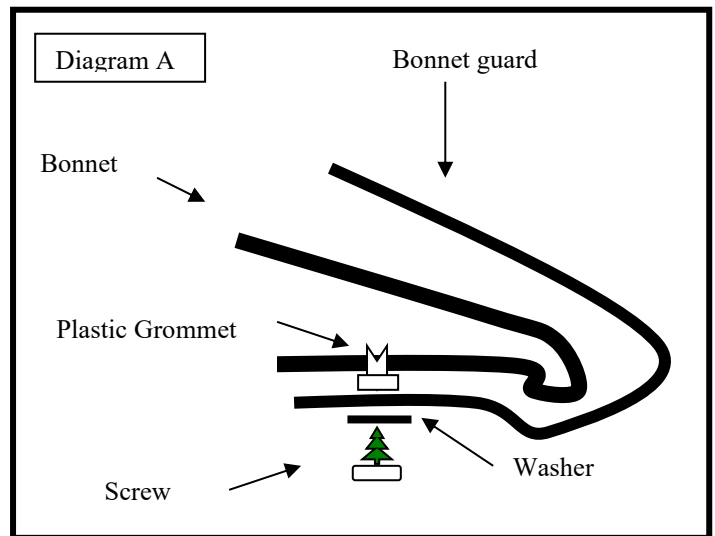

4. Apply the 4 supplied anti-abrasive tape to the edge of the Bonnet where plastic fastening W-clip secures the Bonnet Guard near the fenders. (cleanse the area with the supplied Alcohol wipes first)
5. Snap the 4 plastic W-clips into hole positions on Bonnet Guard, over the anti-abrasive tape. As shown in diagram "B".

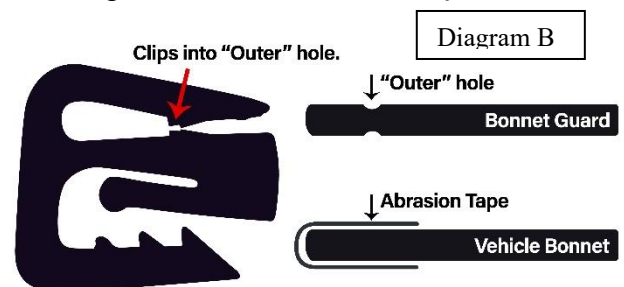

**Install W-clip to bonnet guard and bonnet simultaneously to avoid damaging the bonnet guard.**

***CLOSE THE BONNET BY DROPPING FROM 6" HEIGHT.  
ASSIST CLOSURE ONLY BY PRESSING ON THE BONNET.  
NEVER PRESS ON THE BONNET GUARD.***

Wash acrylic with a mild soap and lukewarm water solution, using a clean, soft cloth or sponge.  
No authorization by or association with any automobile manufacturer is implied.