

# INSTALLATION GUIDE

## UTP Keystone Jack 90°

YOU WILL NEED



**CTSTRIP**  
UTP/STP Cable  
Cutter & Stripper



**10531C**  
5° Side Cutting  
Pliers for Copper Wire




**CTPD110**  
110 Punch  
Down Tool

1.



Strip the outer jacket 38mm

2.

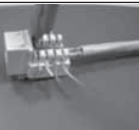

Seat the colour coded wire pairs in the corresponding colours on the IDC's as per wiring configuration T568A or T568B

3.



Punch down the wire pairs with the 110 Punch Down Tool.

4.



Carefully snip the excess wires. Clip the cable retention cap/dust cover into place.