




INSTALLATION INSTRUCTIONS

HR 015 Hose Restrictor Bracket


IMPORTANT: The position of the Hose Restrictor Bracket is dependent on the proximity of the shower to the WC and/or bath. Place the bracket on the wall (with the hose inserted) and move until the handpiece no longer reaches the WC and/or bath. Once the location for installation has been determined, fix the Hose Restrictor Bracket to the wall as per instructions below.

1

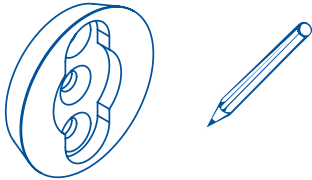

Place the wall bracket on the wall and mark the location for installation.


2

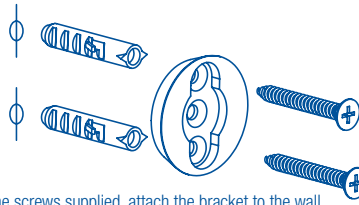

Using the screws supplied, attach the bracket to the wall.


Note: Use plugs for masonry wall only.

3

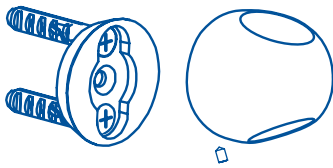


Attach the Hose Restrictor to the wall bracket ensuring the grub screw hole is at the bottom of the fixture.

4

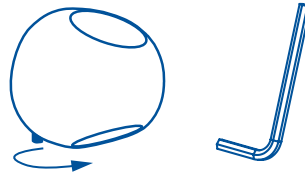


Secure the Hose Restrictor to the wall bracket by tightening the grub screw with the hex key provided.

5

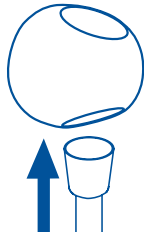

Insert the hose conical nut (without the handpiece attached) into the Hose Restrictor.


6



Attach the handpiece to the hose.

Note: Do not over tighten the conical nut.

7

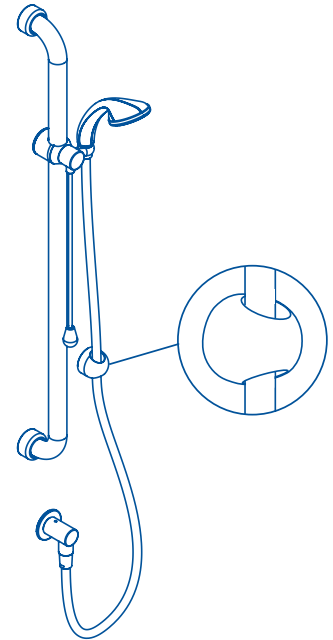

Note: Images used are for illustration purposes only. Actual installation will vary dependent on the shower system installed, and its proximity to the WC and/or bath.

NOTE: If this product is to be installed on a hollow wall, appropriate hollow wall anchors should be used.