




INSTALLATION INSTRUCTIONS

HS 026 Shower Combination


1

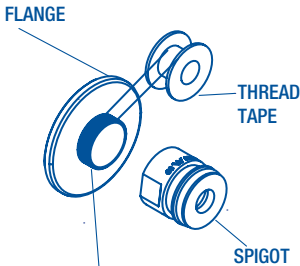

Thread should be protruding 10-14mm from wall

Place flange onto 1/2" water outlet and apply thread tape supplied.


2

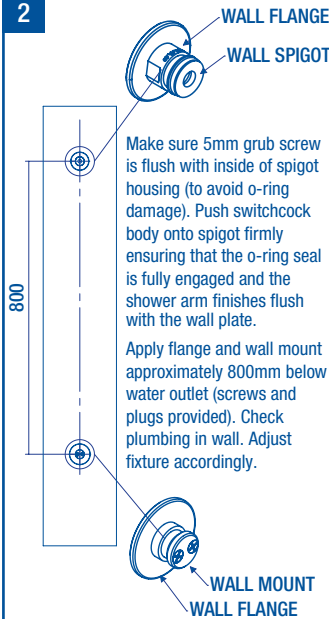

Make sure 5mm grub screw is flush with inside of spigot housing (to avoid o-ring damage). Push switchcock body onto spigot firmly ensuring that the o-ring seal is fully engaged and the shower arm finishes flush with the wall plate.

Apply flange and wall mount approximately 800mm below water outlet (screws and plugs provided). Check plumbing in wall. Adjust fixture accordingly.

3

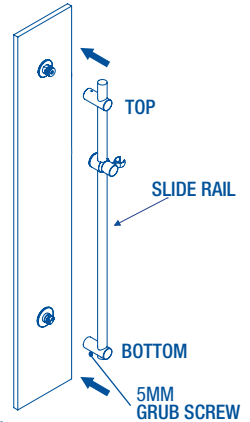


Caution:
Do not rotate bracket on rail when fitting.

Screw slide rail onto top bracket body.


Slide bottom bracket onto slide rail (grub screws to bottom).

4

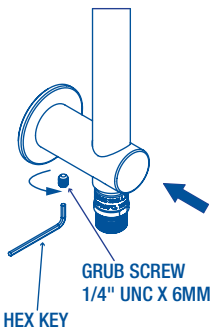

Tighten inner grub screw to secure rail.

5

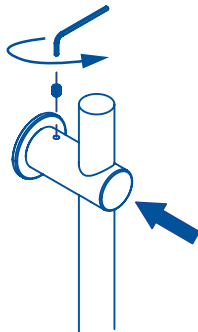


Fit top and bottom brackets to wall mounts by tightening rear grub screws (1/8" hex key supplied).

6



Screw hose onto bottom of rail using gaskets supplied (long tubular nut).

7

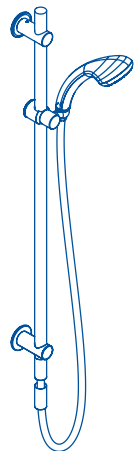

Screw handpiece to conical nut end of hose using gaskets supplied.

(DO NOT OVER TIGHTEN THE CONICAL NUT)