



1.

Prepare rebated double doors for mortice lock and strike plate.

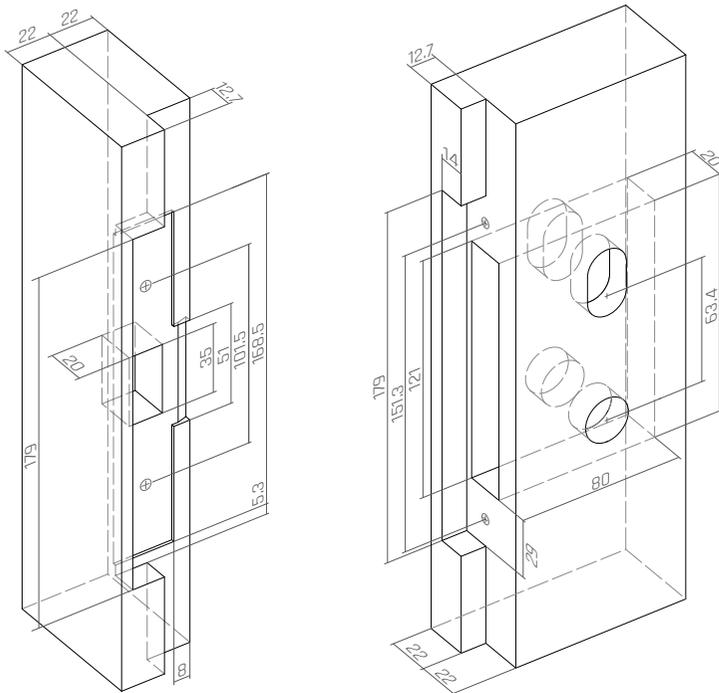


2.

Install mortice lock through rebate kit into door and fix with screws provided.

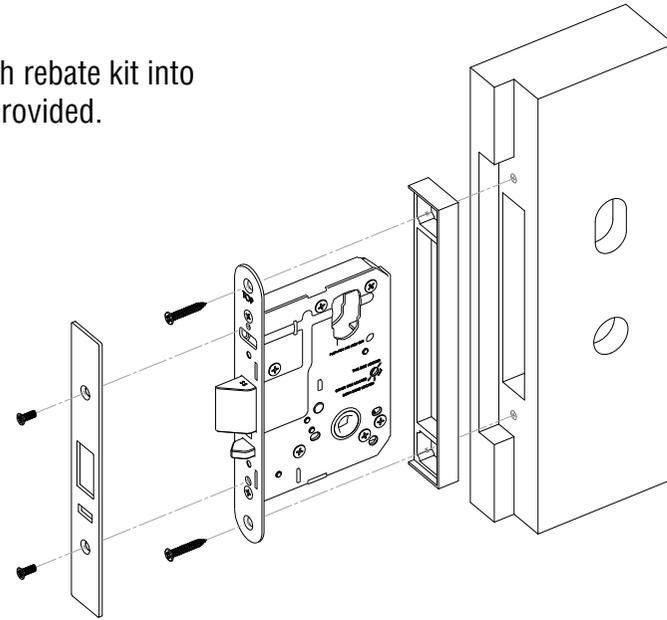

3.

Install rebate strike plate and fix with screws provided.

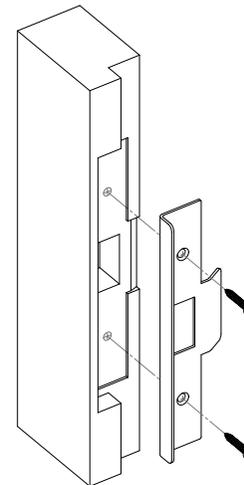

4.

Complete Setup.

