




1. Replace Inner Forend Plate

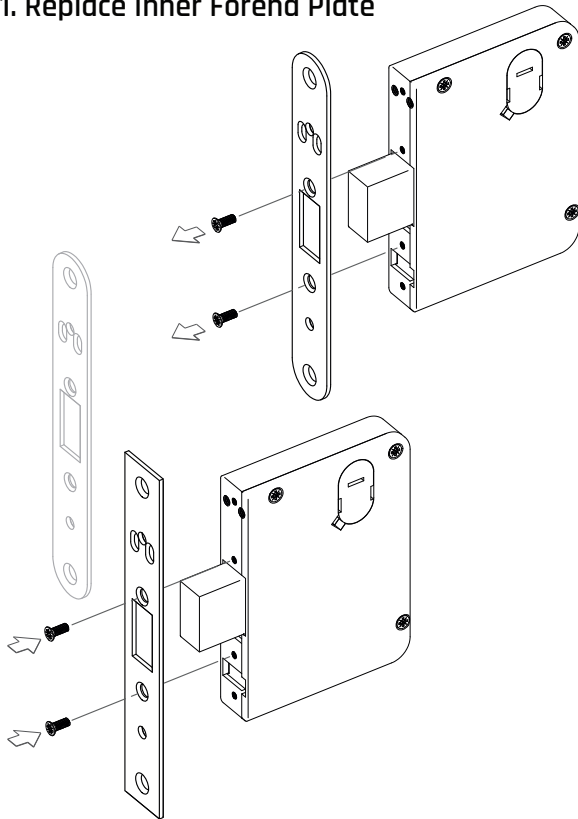

2. Prepare Rebated Door

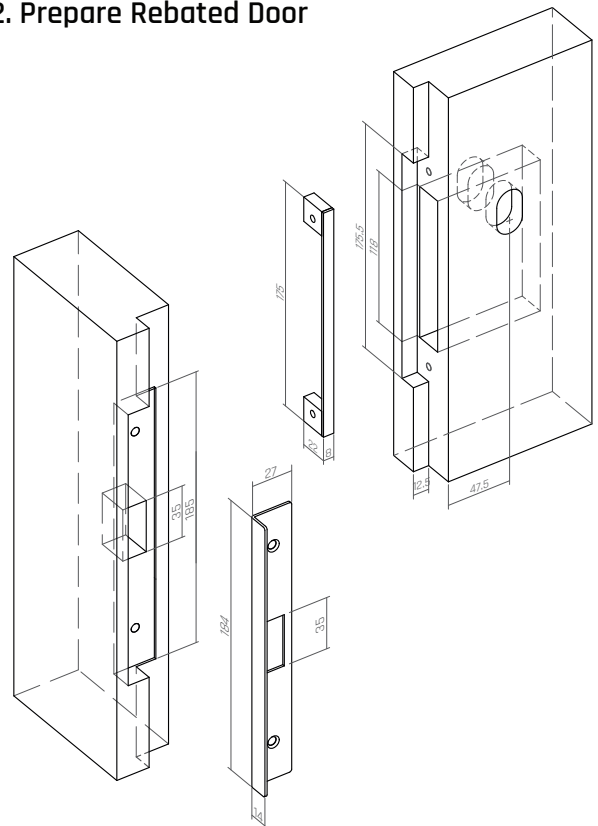

3. Install Mortice Deadlock

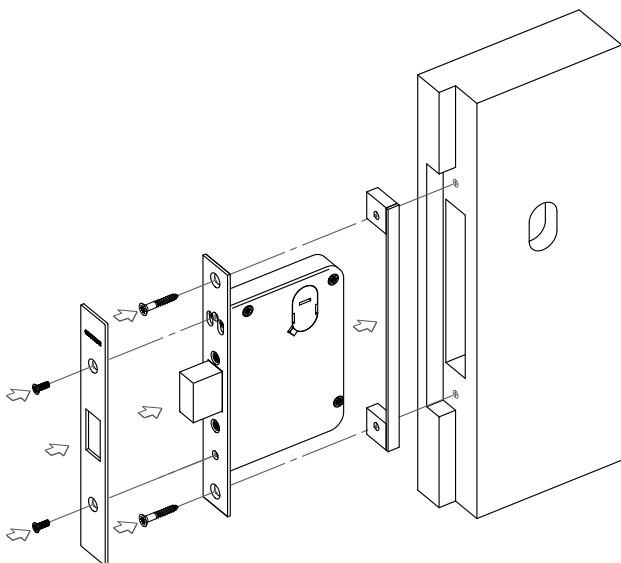

4. Complete Setup

