



*A0440ET SUITS RH LOCK SETUP AS STANDARD. FOLLOW STEUP 5 TO ADJUST TO SUIT LH SETUP.


1. Prepare Lock for escape turn installation. Ensure Deadbolt is in locked position.

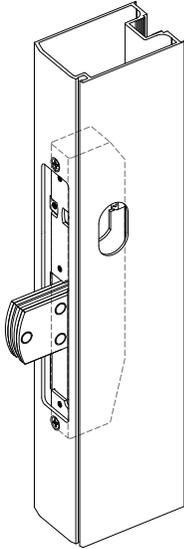


2. Ensure escape turnsnib is set in horizontal position before inserting into lock. Once cam has engaged with the lock, install the cylinder fixing pin and cylinder escutcheon cover.

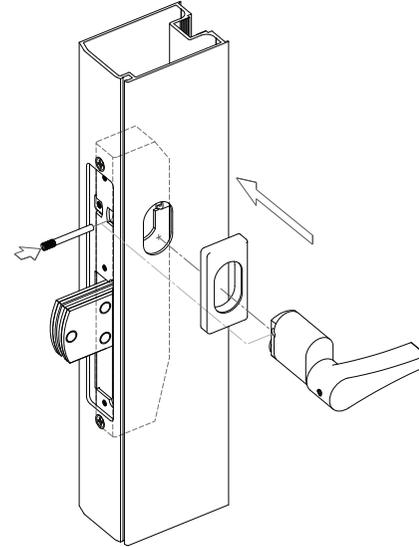

3. Install and fix faceplate.

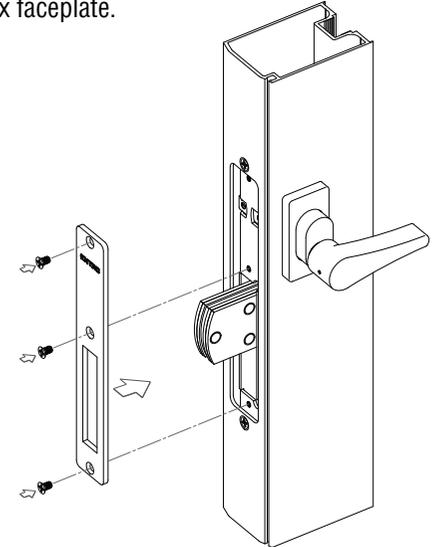

4. RH Lock Setup complete. For LH Lock Setup, follow Step 5 before inserting escape turnsnib into lock.

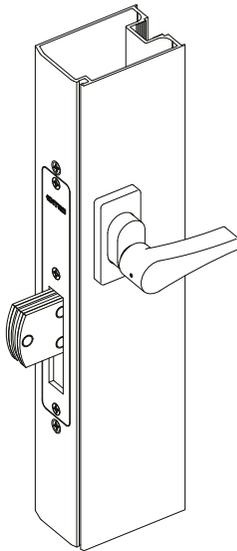

5. To set escape turnsnib to suit LH Lock Setup, (a.) unscrew the grub fixing screw with a 2mm metric allen key. (b.) Ensuring the cam does not rotate, gently remove the Escape Turnsrib and (c.) rotate 90deg clockwise before reattaching. (d.) Refix grub fixing screw and rotate the escape turnsrib a further 90deg clockwise. The escape turnsrib is now ready for installation on LH Lock Setup following Steps 1 - 4.

