



## I. DOOR PREPARATION

1. Using the template, mark the door and drill the holes, and chisel out a mortise.


NOTE: Drill from both sides to avoid wood splitting.

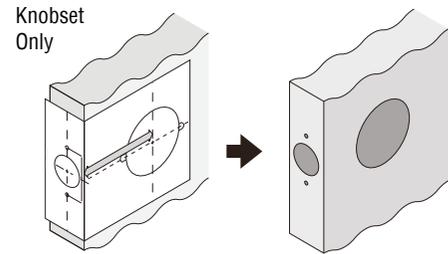

OR

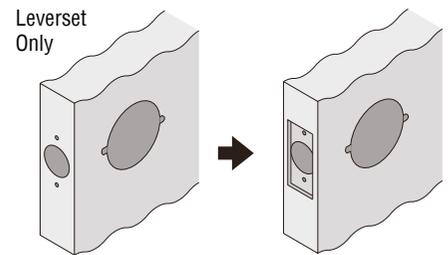

2. Prepare the door jamb – using the strike plate as a pattern, drill the latch and screw holes, and chisel out a mortise until the strike plate fits flush

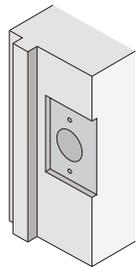


NOTE: To assure proper lockset function, the holes in the door jamb must be drilled 13 mm deep.

## II. INSTALLATION


1. Installing the Latch

a. Attach the correct faceplate

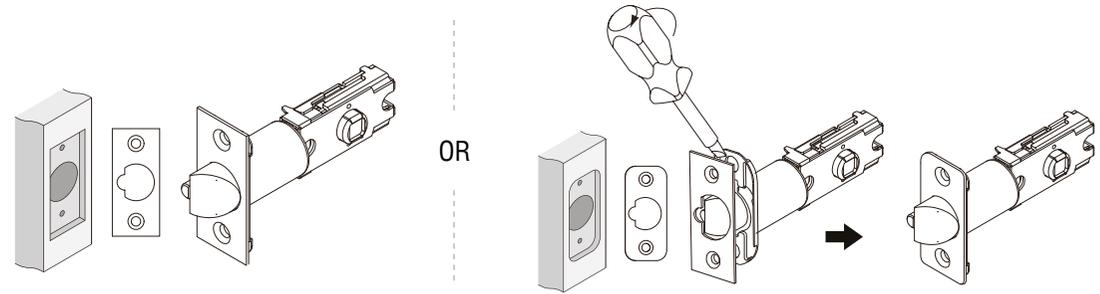


b. Set the latch backset

CAUTION: Be sure the acam is upright before making any backset adjustment.

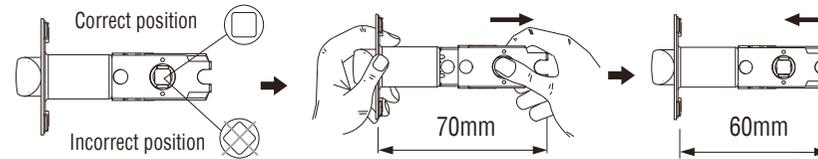


c. Install the latch

NOTE: The bevel should face the door jamb.

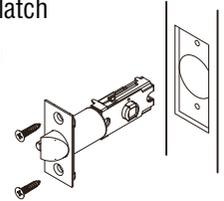


2. Installing the Lever/Knob

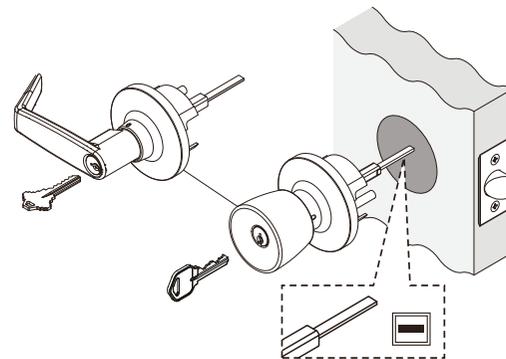


a. For Exposed Screws

Interior

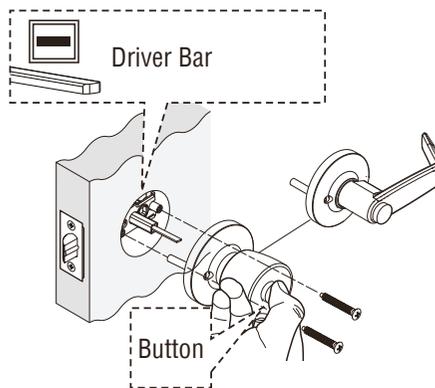

OR

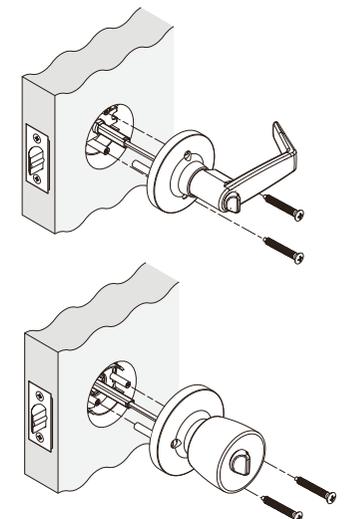


# ENTRO

## A0800/A0900 LOCKSETS Installation Instructions



### b. For Concealed Screws (Leverset Only)

Interior

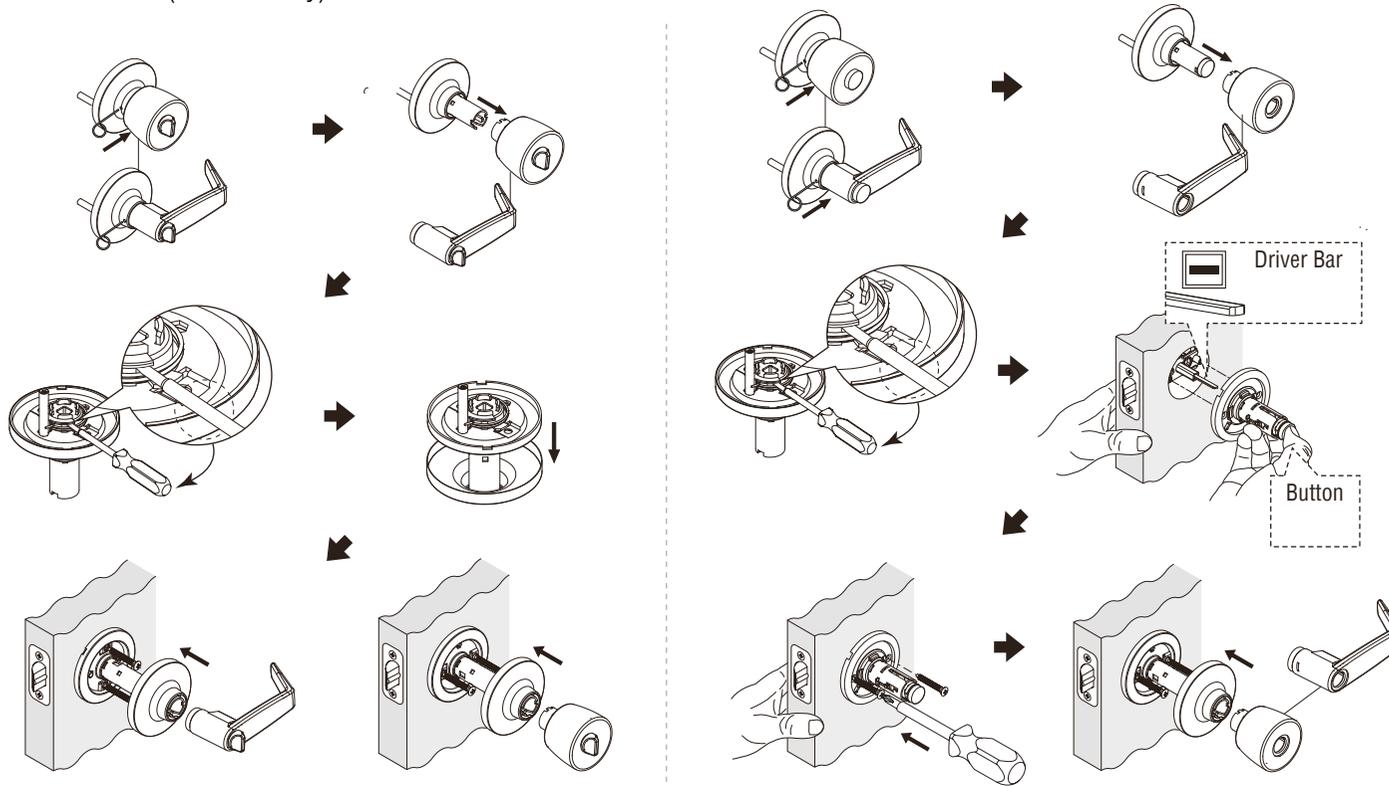



### III. INSTALLING THE STRIKE PLATE

NOTE: If required, bend the adjustable tang on the strike to eliminate a loose fit between the door and the door stop.

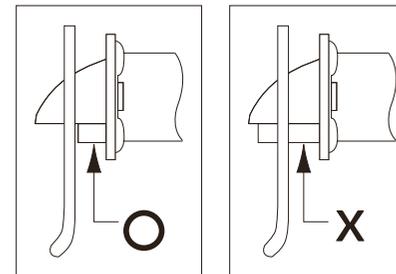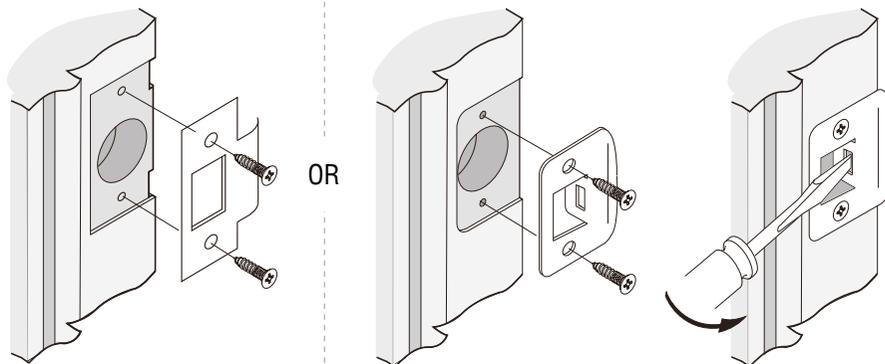

Security Pin

NOTE: Ensure the lip faces away from the door.

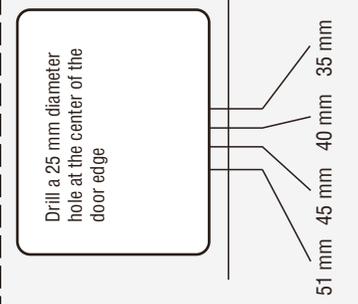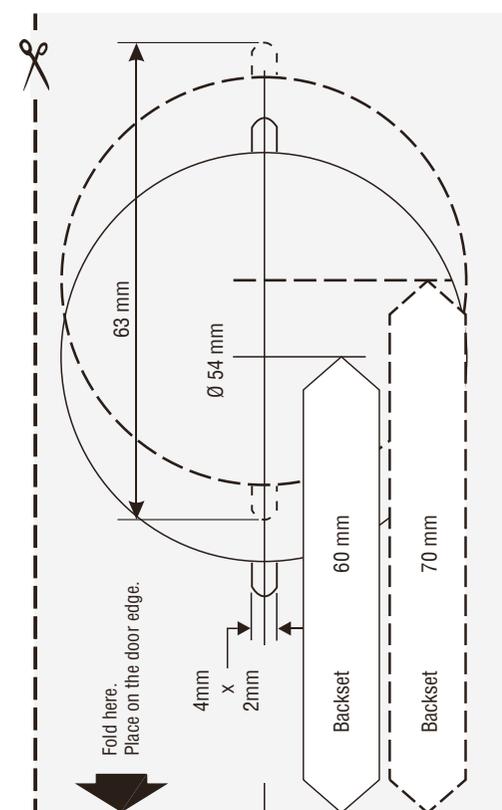

# TEMPLATE