




TUBULAR LATCH PREPARATION TEMPLATE

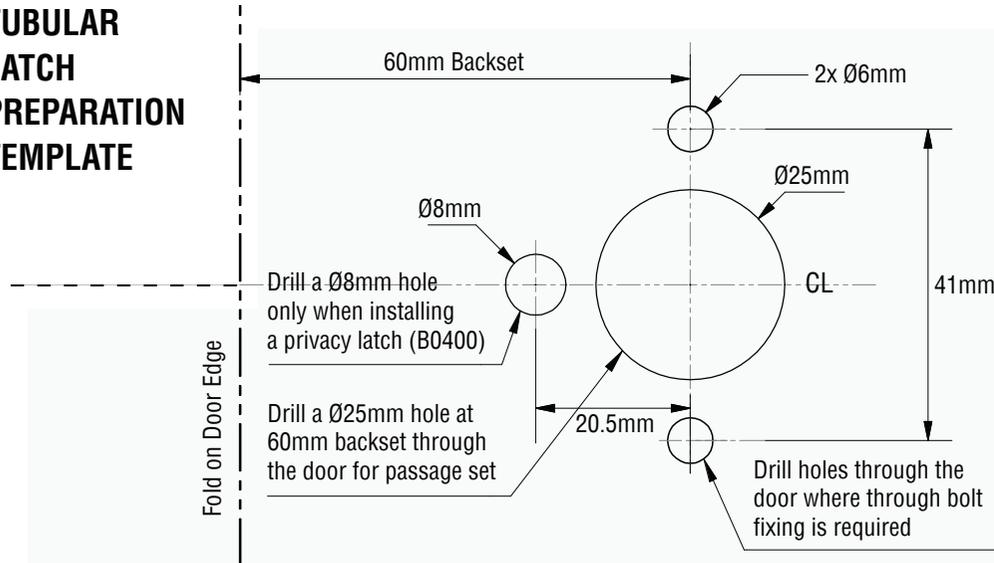


1. Fold template on door edge with centre line at desired height (approx 1000mm from floor). Mark holes ready for drilling.

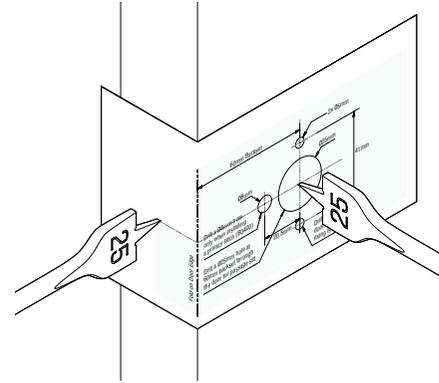

2. Drill 2mm pilot holes for the furniture from both side of the doors.

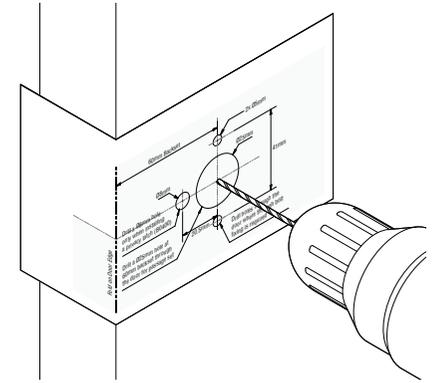


3. Drill 25mm latch hole (a.) to 80mm depth. Drill 25mm & 5mm furniture holes (b.) from both sides of the door. Additional 8mm hole (c.) when installing privacy latch (B0400).

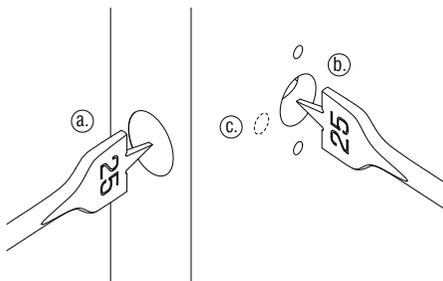


B0400 PRIVACY LATCH ONLY

4. If handing is required for the privacy latch (eg open out doors), pull latch & rotate.

Use split spindle (a.) supplied in B0400 set. Ensure split spindle is released by 1/2 turn before installing.

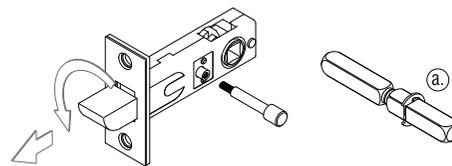

5. Insert latch into 25mm hole & mark around latch plate. Chisel out recess and ensure faceplate is flush with the door face.

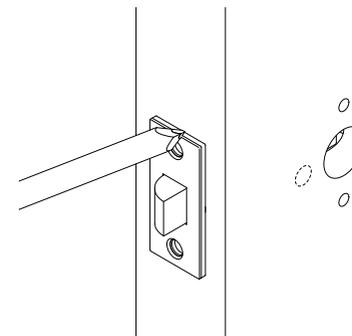

6. Drill 2x 2mm pilot holes and affix with screws provided.

