




## INSTALLATION INSTRUCTIONS

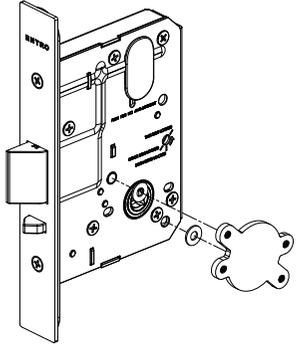


1. Determine the side of the mortice lock that won't require a lever and mount the plate with washers according to diagram

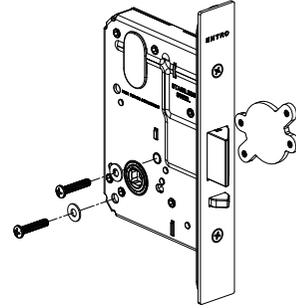


2. Insert M4x20mm screws & washers provided through mortice lock according to diagram and fix to mount plate on the inside of mortice lock.

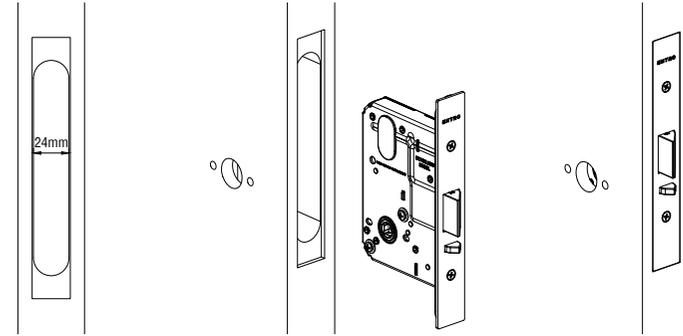


3. Prepare door using mortice lock template provided with lock ensuring only the required holes for the single lever and cylinders are drilled. The width of the mortice cutout will need to be increased to 24mm to accommodate the mortice fixing plate. Install mortice and affix with screws provided.

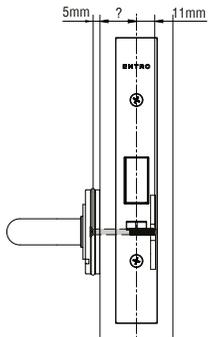

4. Cut down the lever screws provided by measuring the dimension from the lever mounting door face to the centre of the mortice lock + 16mm (5+11mm).

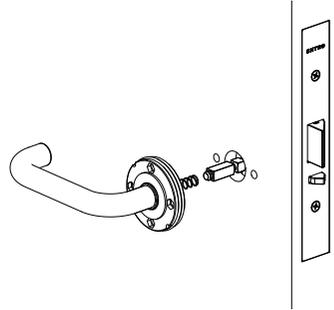

5. Attach spindle, spring and lever to mortice lock.

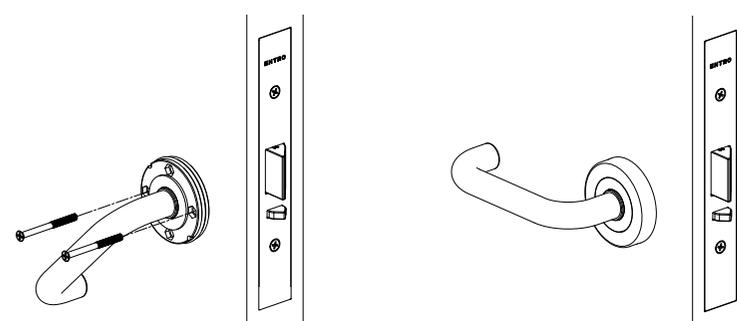

6. Insert the 1st fixing screw through lever and lightly fix to the internal mortice fixing plate. Rotate lever to provide access for the 2nd fixing screw. Insert and lightly fix 2nd fixing screw. Check lever is horizontal before firmly tightening both screws.