


1. DOOR PREPARATION

METAL DOOR PREPARATION

1. Determine the height of the lockset on the door
2. Cut out the mortice window 156mm x 25.5mm with 3mm radius corners
3. Place template in opening and drill 4.5mm holes, countersink with 8mm dia at 90°
4. Drill other appropriate holes for the selected lockset. Dimensions in the illustration suit a 23mm backset lock
5. Do not drill holes all the way through to avoid door damage or incorrect installation


NOTE: Ensure door furniture supplied match the correct hole dimensions being drilled.

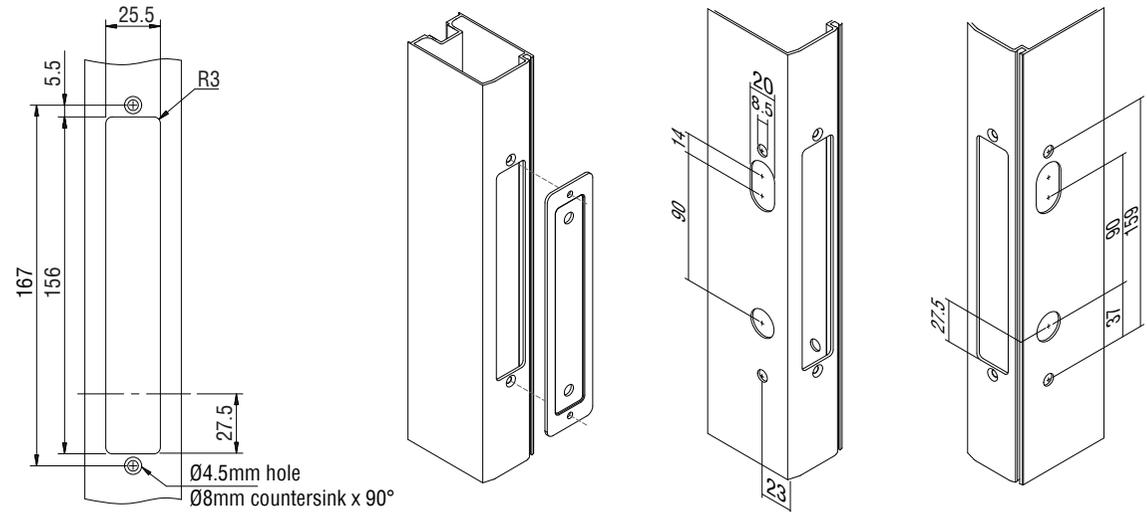

2. DOOR FURNITURE INSTALLATION

FIT FURNITURE

1. Rotate handle to the desired handing as shown.
2. Place screws through visible fix plate and the door.
3. Determine screw length with minimum flush with door face and maximum with 2mm protrusion. Mark and cut screws to length.
4. Insert spindle/s into lock as required, ensuring the spindle spring is attached to the rear of the spindle before fitting plates and fixing with screws.

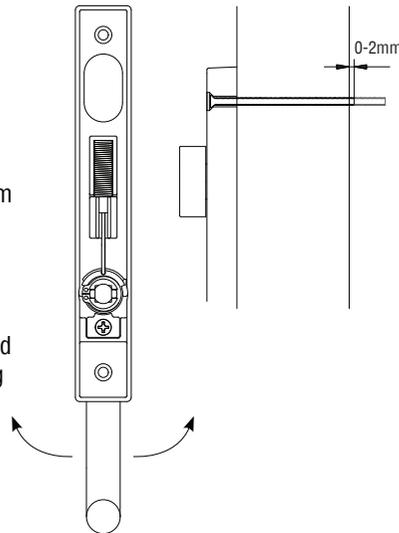

FIT MOUNTING STRIKE

1. Prepare doorjamb cutout and fit Strike Box to frame.
2. Fit Strike to Strike Box and secure with screws provided.

