



SURFACE MOUNT

1. Follow the arrow direction to install the cushion limit stay inside the slide track in sequential number order ①~③.

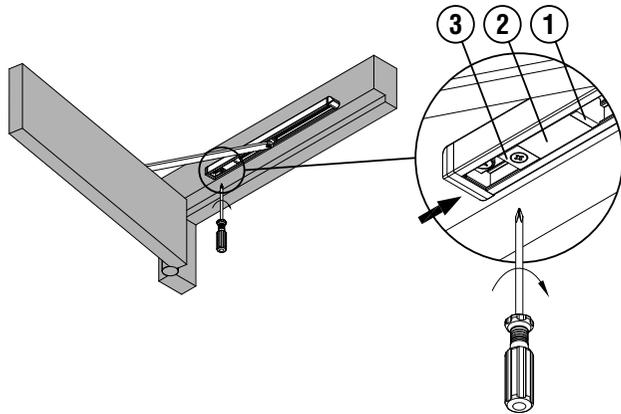


2. Choose door opening angle between 80°~120° and tighten to lock in screw number ③.

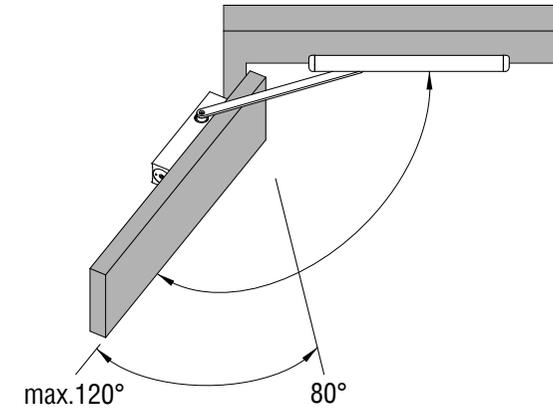

CONCEALED MOUNT

1. Follow the arrow direction to install the cushion limit stay inside the slide track in sequential number order ①~③.

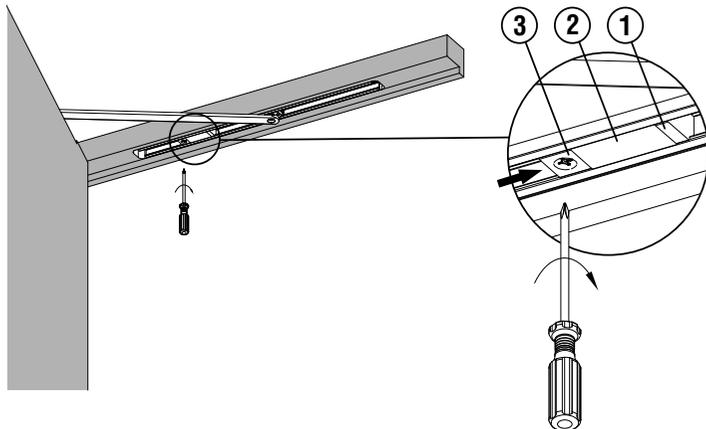

2. Choose door opening angle between 80°~120° and tighten to lock in screw number ③.

