


END PULL - BACK FIXING TEMPLATE

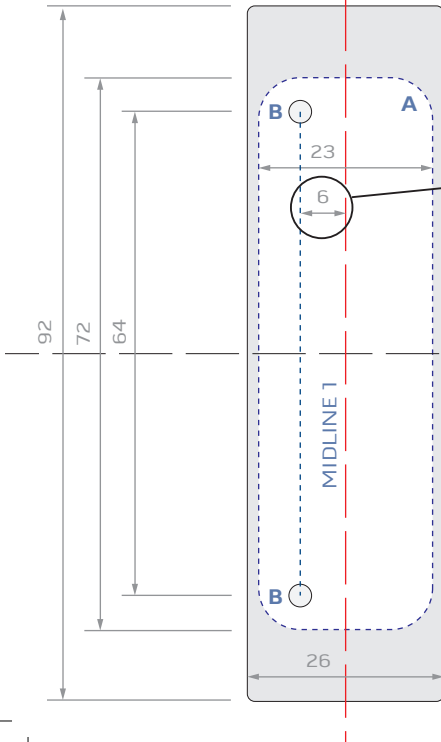

ATTENTION! screw holes are not centre aligned

Screw hole centres are offset by 6mm. Use this template to ensure accurate fitment into cabinetry.

MIDLINE 2

Cutting Details

Mark cutting using Midlines for accurate reference.

A. Remove middle section of template. Place template in position using midlines and mark outline. Cut 12mm rebate

B. Place middle section of template back into rebate and drill two 4.5mm holes for screws.

Aluminium Door Routing Details

C

W=23 H=73

- Offset Vertical Centerline 2.5mm (see dashed line D)
- Corner Radius 5.5mm



42mm
Door

38mm
Door

MIDLINE

Wood Door Cutting Details

A

- Cut 2mm deep
- Corner Radius 1mm

B

- Cut 15mm deep from front face
- Corner Radius 3mm

Do not cut rebate A if you intend your End Pull to sit proud.

END PULL TEMPLATE

