


FACTORY BONNET SWITCH COLOURS:

2016> Ford Ranger. Location: thin BLUE/ORANGE middle plug BCM (NC).
2016> Toyota Hilux. Location: RED under plastic cover at switch (NC).

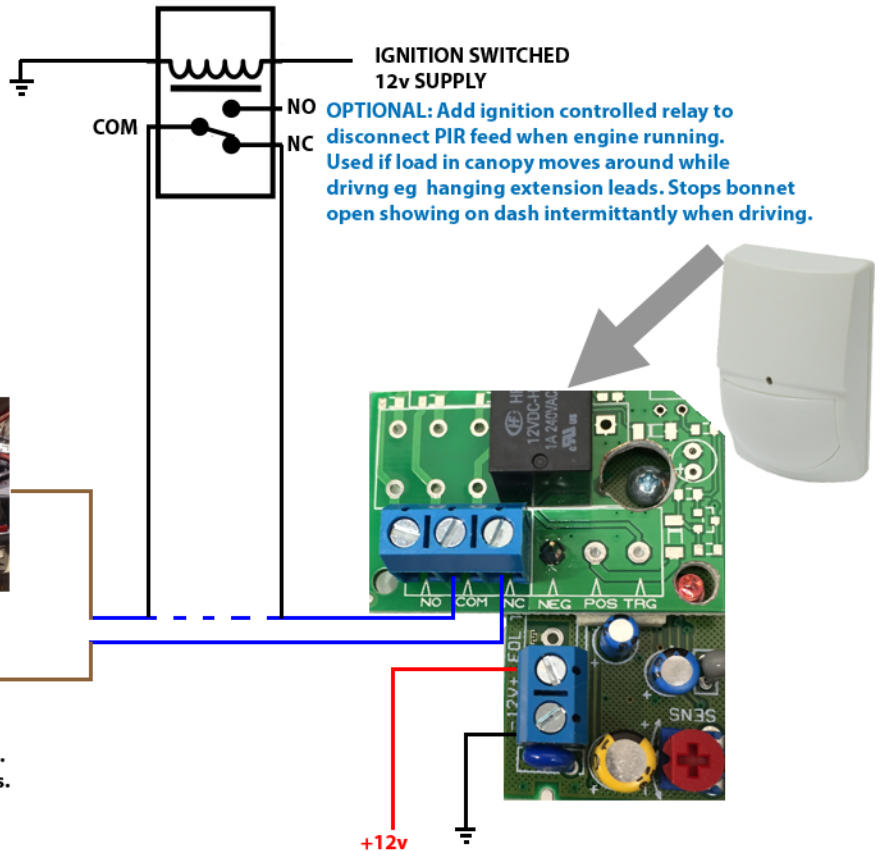

Factory bonnet wire
Cut and interrupt with
PIR relay.
Use COM>NC for NC vehicles.
Use COM>NO for NO vehicles.