




CTSNS010.2

Nissan Steering Wheel Control Interface

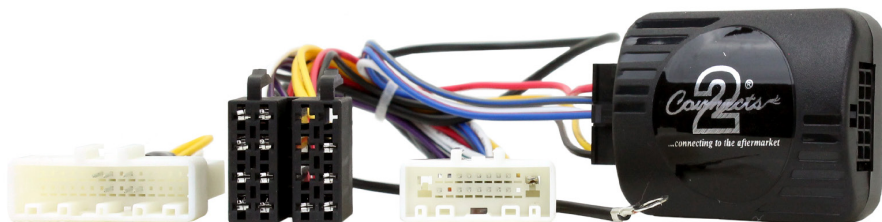

Vehicle Application

Nissan Juke (F15) 2010>
Nissan Micra (K13) 2010>
Nissan Sunny 2012>
Nissan March 2010>
Nissan Pulse 2011>
Nissan Evalia 2013>
Nissan Versa 2008>
Nissan Frontier 2009>
Nissan Pathfinder (R52) 2013>

Nissan Versa Note 2013>
Nissan NV200 2013>
Nissan Quest 2010>
Nissan Cube (Z12) 2009>
Nissan Xterra 2009 - 2016
Nissan Titan 2009>
Nissan Navara (D40) 2009>
Nissan Sentra 2013 - 2016
Nissan Cabstar 2014>

Key Features

- Retains Steering Wheel Controls (if equipped)
- Retains OEM Phone Buttons (if equipped)

www.connects2.com

Designed and
Engineered
in the UK.



The information provided in this document is subject to change without notice due to manufacturer changes and/or improvements to the product/s.

ABOUT THIS PRODUCT

CTSNS010.2

Analogue Steering Wheel Control Interface for select Nissan vehicles. With phone button support.

WIRING COLOUR CODES

Purple	Right Rear Speaker +	Yellow	Permanent 12V
Purple/Black	Right Rear Speaker -	Black	Ground
Green	Left Rear Speaker +	Red	Ignition 12V
Green/Black	Left Rear Speaker -		
Grey	Right Front Speaker +		
Grey/Black	Right Front Speaker -		
White	Left Front Speaker +		
White/Black	Left Front Speaker -		

PRIOR TO INSTALLATION


Read the manual prior to installation. Technical knowledge is necessary for installation. The place of installation must be free of moisture and away from heat sources. Please ensure that the correct tools are using during the installation to avoid damage to the vehicle or product. **Connects2 can not be held responsible for the installation of this product.**

TECHNICAL SUPPORT

Connects2 want to provide a fast and suitable resolution to any problems encountered during installation of this product. To get in touch with our dedicated technical support team, please fill in a ticket at support.connects2.com and provide as much information as possible.

FITTING GUIDE


1. Remove and disconnect the original head unit.
2. Connect the 12 way molex connector of the head unit patch lead (supplied separately) to the interface.

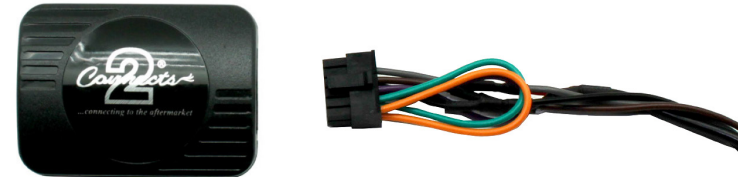

3. Connect the opposite end of head unit patch lead to the head unit steering wheel control input on the back of the aftermarket head unit.

NB: This may be a 3.5mm jack plug or a wire input depending upon the head unit brand being fitted. Please see the head unit installation manual for further information on where to connect.


Important: This step must be completed before connecting power to the interface. Failure to so do may result in no steering wheel control function.

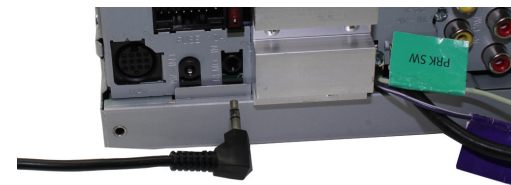

4. Connect the 14 way molex connector to the interface



5. Connect the male power/speaker ISO harness to the female power/speaker ISO harness from the aftermarket head unit. For aftermarket head units without an ISO connector, please refer to "Wiring Colour Codes" on Pg. 2.

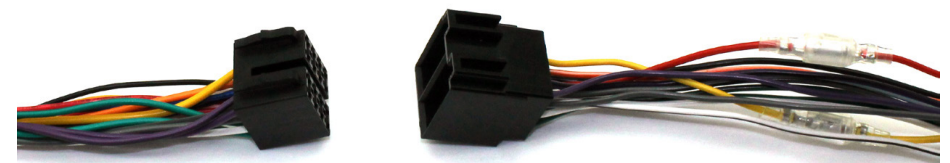

FOLLOW US ON SOCIAL MEDIA
for all the latest updates



FITTING GUIDE

6. For vehicles with phone buttons, locate the OEM streamming module. This is usually behind the glovebox or under the passenger seat. For Versa vehicles, it is in the right hand side of the boot behind the carpet. Disconnect the white 32 way connector and plug it into the white loop connector supplied with the interface.

7. Connect the female vehicle specific connectors on the harness to the male vehicle connector from the vehicle. Test head unit for correct operation.

STEERING WHEEL CONTROL FUNCTIONALITY

Original Button	Function
+ Icon	Volume +
- Icon	Volume -
Track Forward	Track +
Track Backward	Track -
Pick Up Icon	Pick Up
Hang Up Icon	Hang Up
SOURCE	Source