


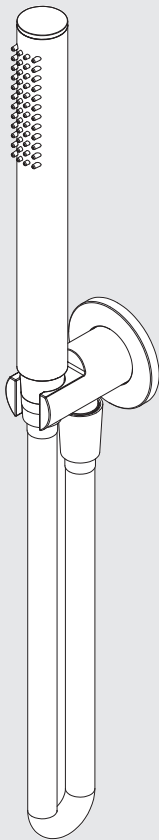










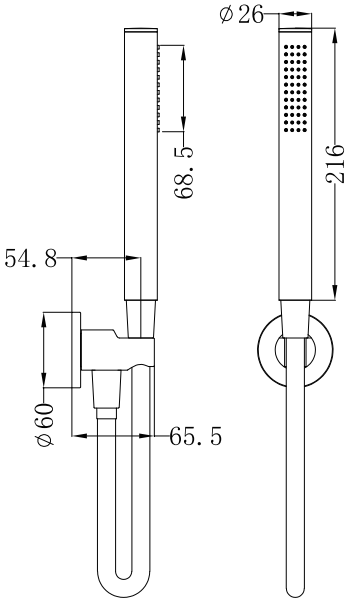







Slim Shower On Bracket

Nero



Versions:202506



Drawing	Specifications	Packaging Includes						
	<p>SKU NR307</p> <p>Watermark License WM-060093</p> <p>Temperature Rating Min 1°C-Max 75°C</p> <p>Pressure Rating Min 150kpa - Max 500kpa</p> <p>Finish</p> <table><tr><td> Chrome NR307CH</td><td> Gun Metal NR307GM</td><td> Brushed Bronze NR307BZ</td></tr><tr><td> Matte Black NR307MB</td><td> Brushed Gold NR307BG</td><td> Brushed Nickel NR307BN</td></tr></table>	 Chrome NR307CH	 Gun Metal NR307GM	 Brushed Bronze NR307BZ	 Matte Black NR307MB	 Brushed Gold NR307BG	 Brushed Nickel NR307BN	<p>1x hand shower (built-in check valve) 1x 1.5m hose 1x bracket</p>
 Chrome NR307CH	 Gun Metal NR307GM	 Brushed Bronze NR307BZ						
 Matte Black NR307MB	 Brushed Gold NR307BG	 Brushed Nickel NR307BN						

*Dimensions are nominal measurements only.

Nero

Installation Instruction


Important

All products must be installed by licensed plumbers.


All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.




1. Apply thread sealant or teflon tape on the outlet thread.

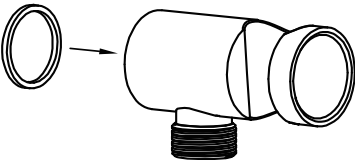

2. Put washer into bracket body.

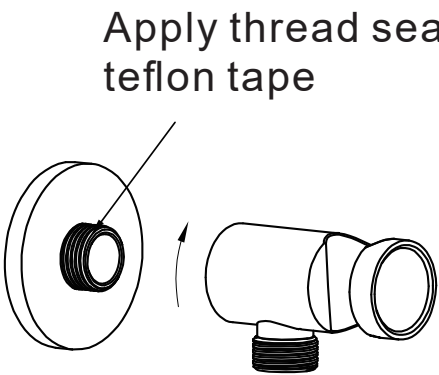

3. Pull back plate onto the outlet, and screw shower bracket body onto outlet.

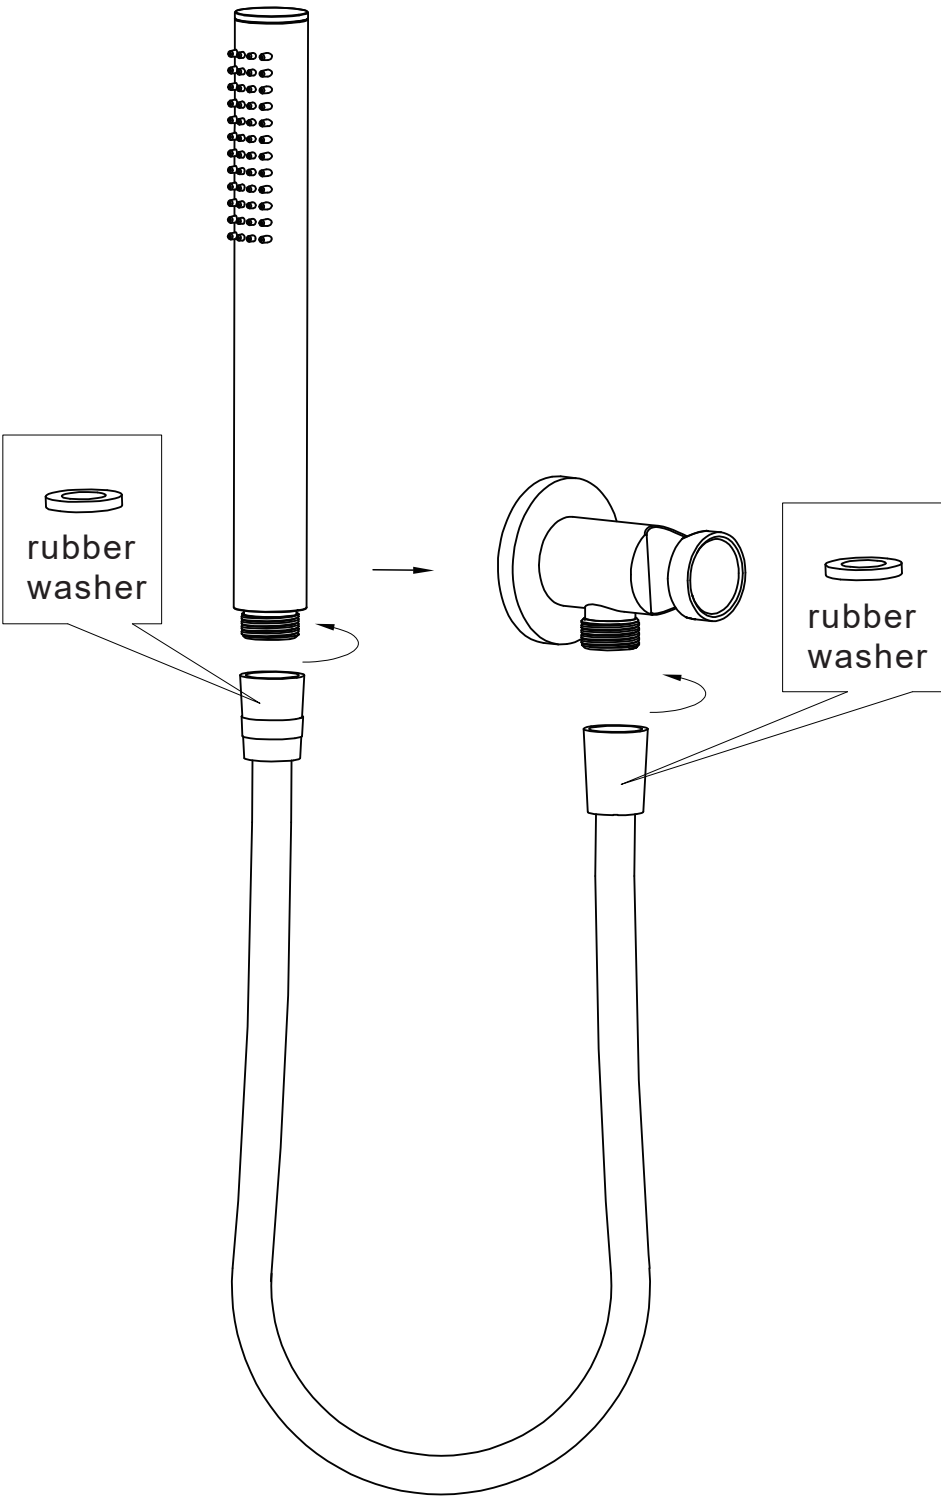

4. Connect bracket and hand shower with hose. TEST & CHECK FOR LEAKS.

Nero

