


Opal Progressive Wall Basin/Bath Set Trim Kits Only

Nero

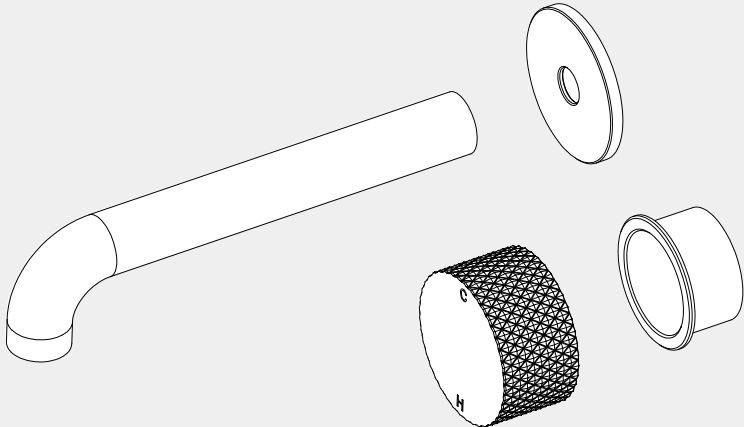

Lead Free




Versions:202506


Drawing	Specifications	Packaging Includes	
	<p>SKU NR252007at(120/160/185/230/260)</p> <p>Watermark License WM-060073</p> <p>Temperature Rating Min 1°C-Max 75°C</p> <p>Pressure Rating Min 150kpa - Max 500kpa</p>	<p>1x spout 1x plate 1x hand wheel 1x cartridge bell 1x Non-Restricting Aerator</p>	
Finish			
	Brushed Bronze NR252007at(120/160/185/230/260)BZ		Graphite NR252007at(120/160/185/230/260)GR
	Brushed Gold NR252007at(120/160/185/230/260)BG		Brushed Nickel NR252007at(120/160/185/230/260)BN

*Dimensions are nominal measurements only
**Includes an additional non-restricting aerator for bath use


Installation Instruction For Body Only

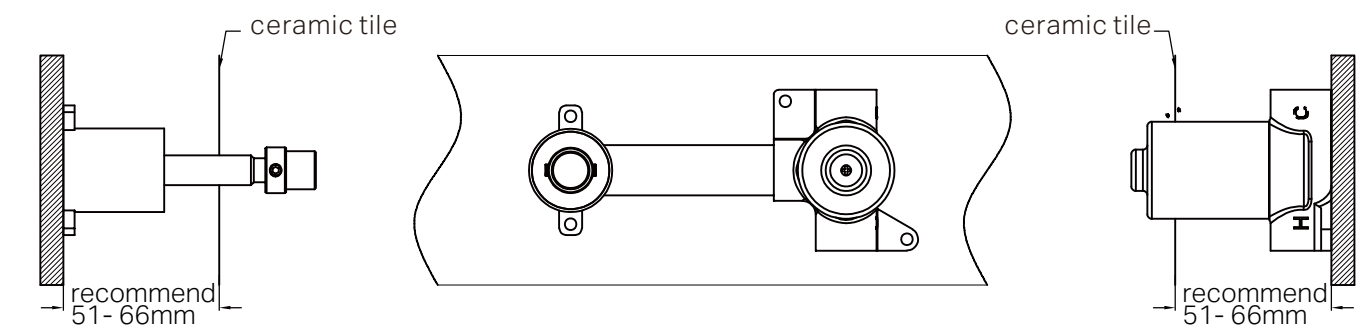


1. Fix body on nogging and ensure installation depth is 51-66mm from nogging to ceramic tile.

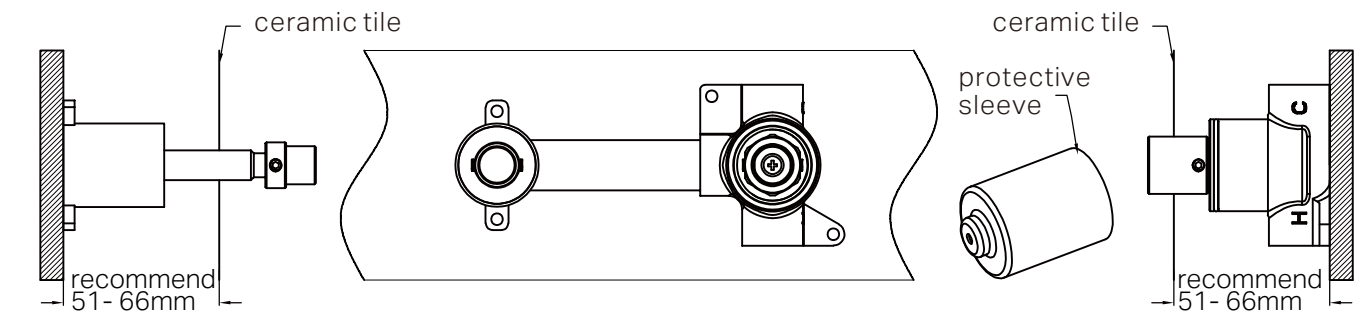

2. Connect cold water hose and hot water hose, take off protective sleeve and conduct water pressure test for leak.

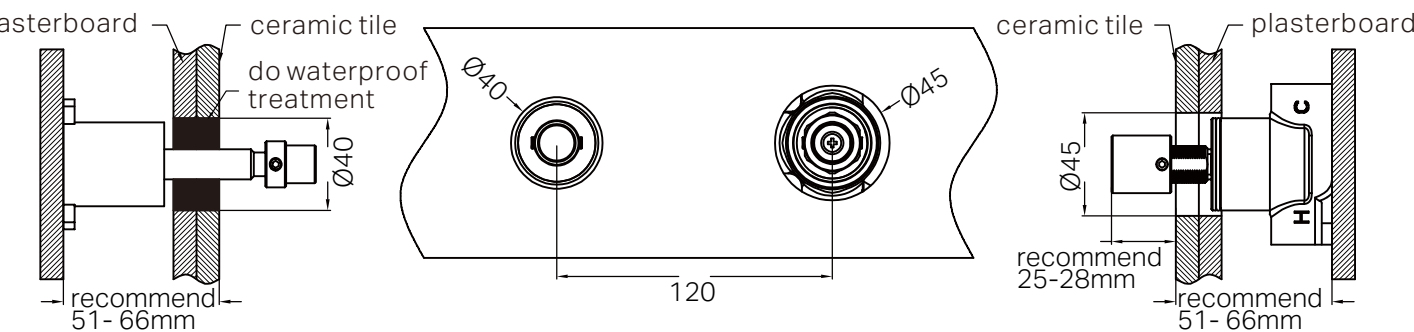


3. Adjust connecting rod and ensure depth is 25-28mm from the front of adaptor to ceramic tile. Drill a $\phi 45$ and a $\phi 40$ holes on plasterboard and ceramic tile for the body, according to above picture. Then install plasterboard and do waterproof for the whole plasterboard. Install ceramic tile and do waterproof for the gap between spout outlet and plasterboard and ceramic tile.

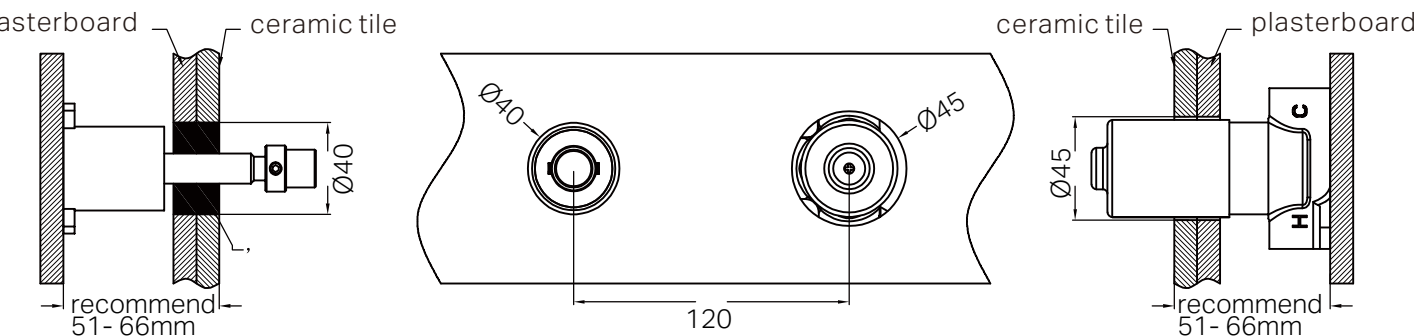


4. Install protective sleeve back to the body.


Installation Instruction For Trim Kits Only

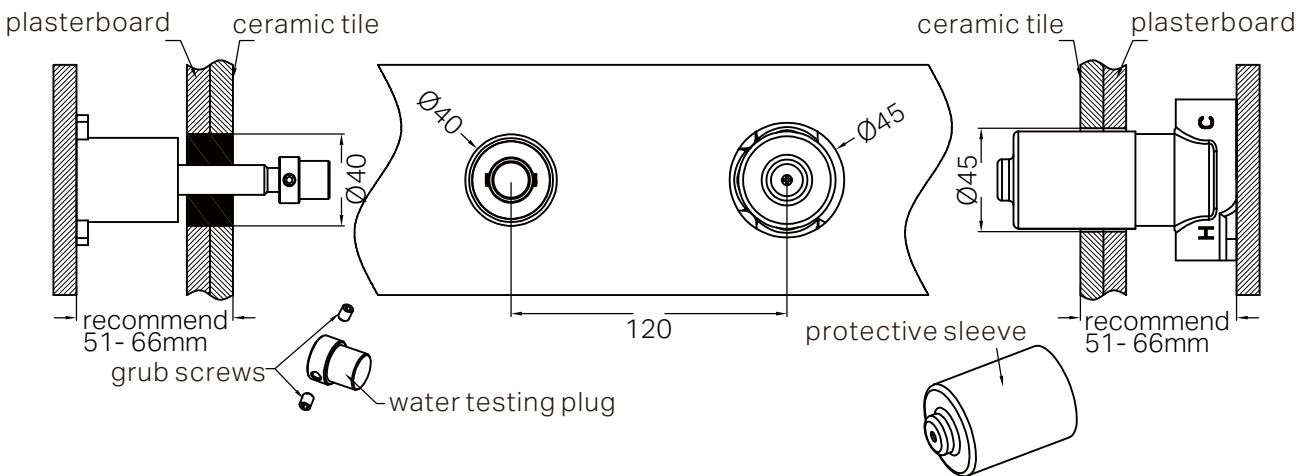

1. Remove protective sleeve, grub screw and water testing plug.

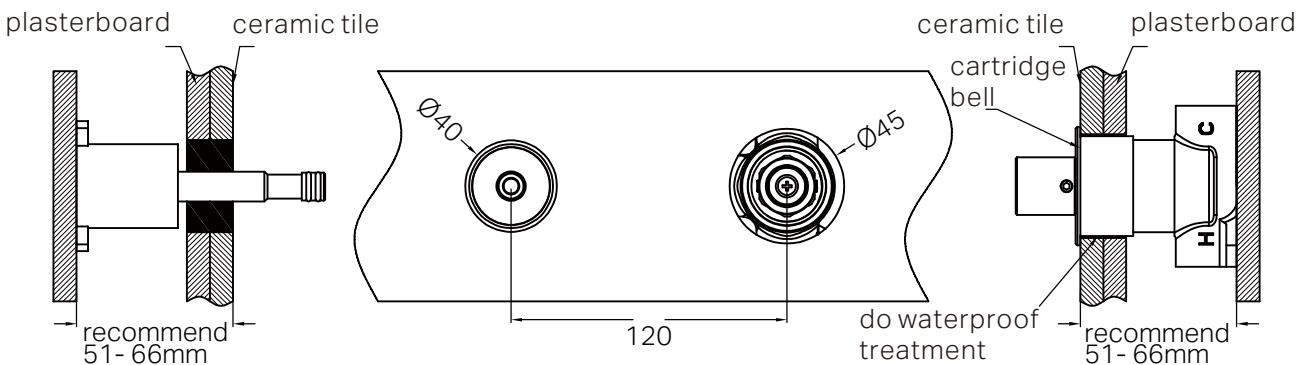


2. Put cartridge bell onto body and do waterproof treatment for the gap between cartridge bell and plasterboard and ceramic tile.

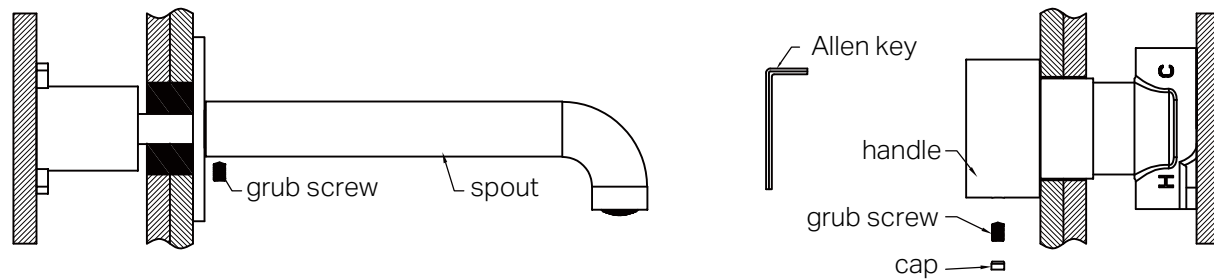

3. Put plate, washer and spout onto body successively, tighten grub screw of spout firmly by allen key.

4. Make hand wheel into connecting rod, turn the hand wheel counterclockwise to the end. Then reinstall the hand wheel, make the "C" should be on twelve o'clock direction and "H" on the six o'clock direction, according to above picture. Then tighten grub screw of hand wheel by allen key, put cap into hand wheel.

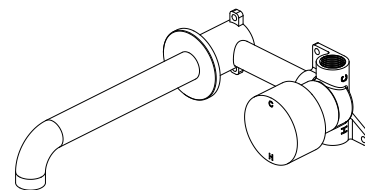

Nero

