





Mecca Care DDA Accessible Toilet Backrest

Nero

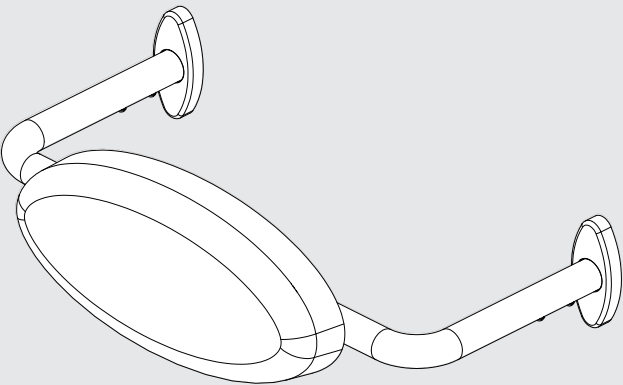

Versions:202506

Drawing

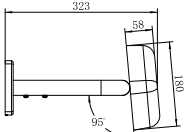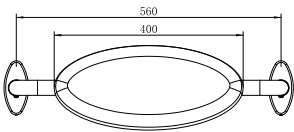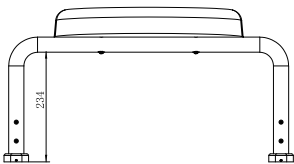

Specifications

SKU

NRCR0001

Warning:

These rails are designed to be mounted onto wall studs or masonry walls. Installation is recommended to be completed by qualified trades person who complies with the AS 1428.1-2009 design for access and mobility standard. It is recommended rail location is determined by a qualified occupational therapist or trained professional to the AS 1428.1-2009 standard. Correct installation is required to ensure safe, long term operation. Incorrect mounting can result in reduced capacity of the rail which can result in injury to user and damage to the wall.

Finish

Chrome
NRCR0001CH

Gun Metal
NRCR0001GM

Brushed Bronze
NRCR0001BZ

Matte Black
NRCR0001MB

Brushed Gold
NRCR0001BG


Brushed Nickel
NRCR0001BN

Features


1. Australian owned and designed.
2. High quality, high strength materials and finishes.
3. 150kg capacity when installed into brick/masonry or multiple wall studs.
4. AS1428.1 Compliant for DDA bathrooms.
5. Gun metal, brushed gold and brushed bronze colours are PVD coated for long term durability.

*Dimensions are nominal measurements only.


Installation Instruction

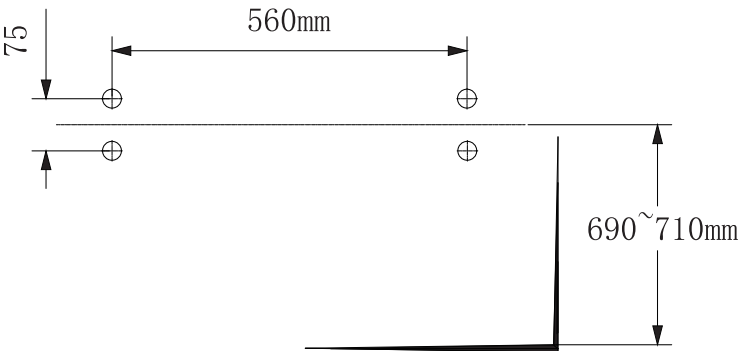


1. Before beginning installation, ensure that the wall is suitable for installing the backrest. Place the wall fixing plate on the wall at the correct height over the center of a stud and mark hole positions on the wall (refer to above picture). Tip: The backrest should be installed at a height of 690-710mm above ground level.

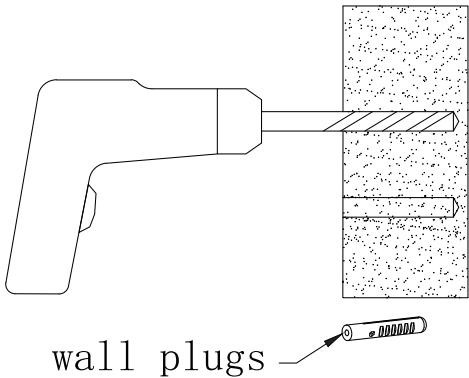


2. Drill pilot holes into the wall stud to a depth of approximately 60mm in order to accommodate mounting screws (and wall plugs if necessary). Tip: Use 3mm hole for screws into timber or 8mm hole for wall plugs.

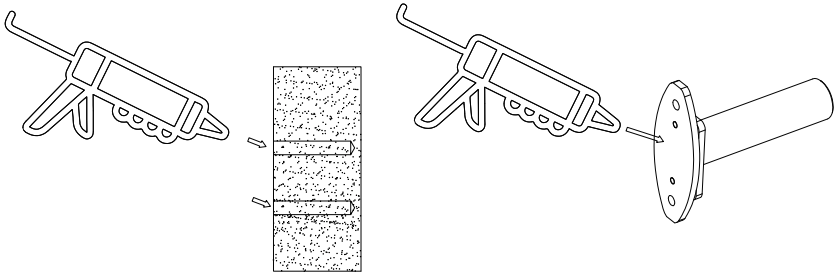


3. Reapply a small quantity of silicone to the wall fixing plate and the surrounding areas of the screw holes

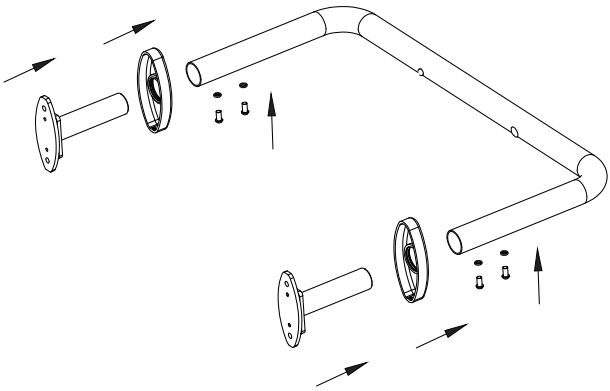


4. Slide the cover plate onto the rail, followed by inserting the wall fixing plate into the rail and securing it with a washer and grub screw.

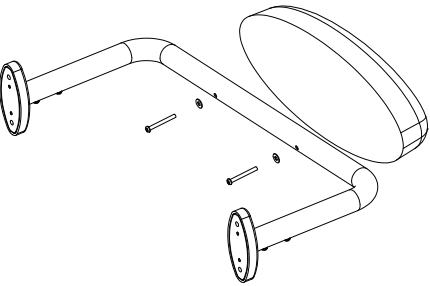


5. Tighten the backrest onto rail by washer and screws.

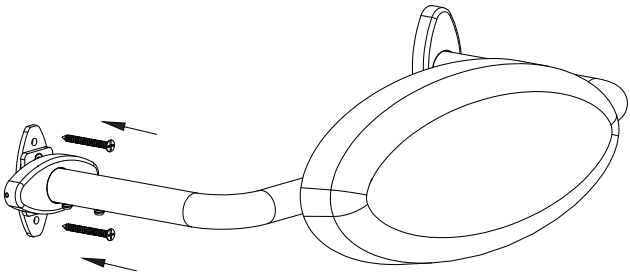


6. Secure the wall mounting plate and rails onto the wall.

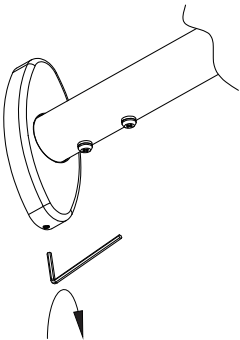


7. Reposition the cover plates onto the wall fixing plate and secure them by tightening the grub screw with an Allen key.

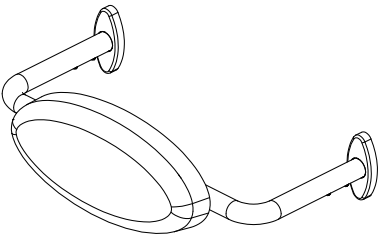

8. Finished.

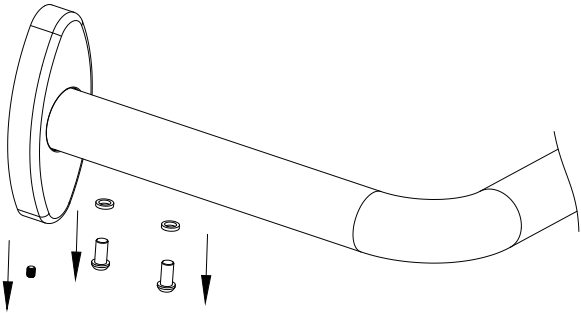

9. Backrest can be removed, if you want. Loosen screws on rails and screws on cover plates. And take off rail and plates.

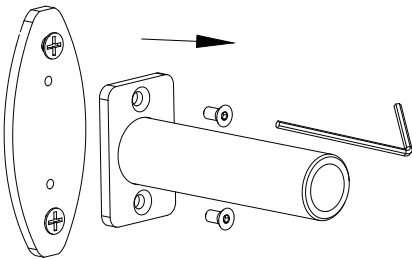

10. Loosen the screws on brackets (refer to above picture). Then you can take off the backrest.

Nero



MECCA CARE
DDA CARE 32MM

