


Opal Progressive Shower System With Spout Trim Kits Only

Nero

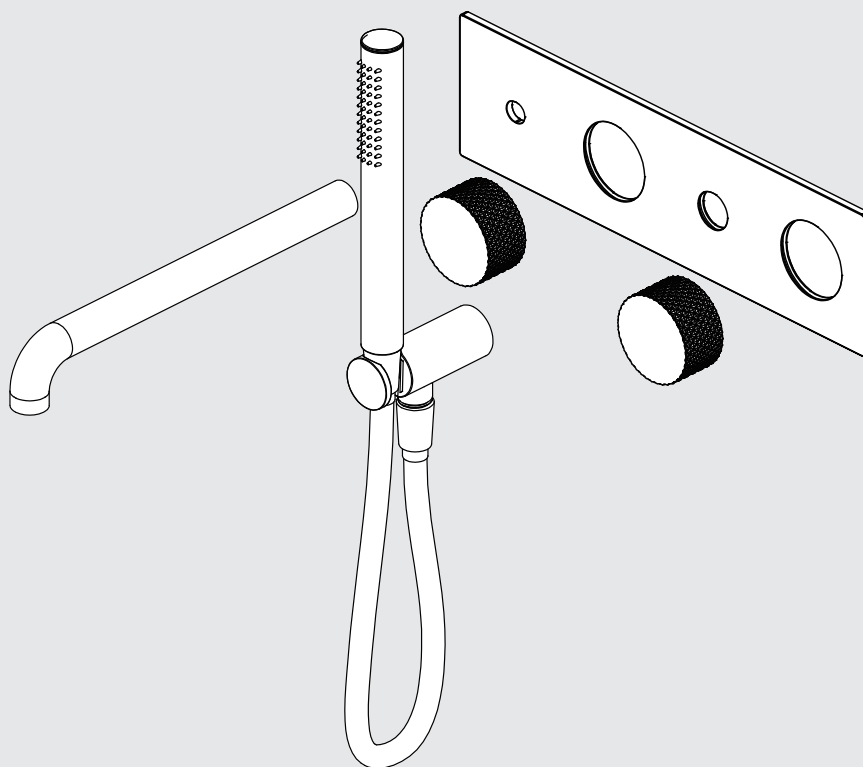


Lead Free



Versions:202506



Drawing

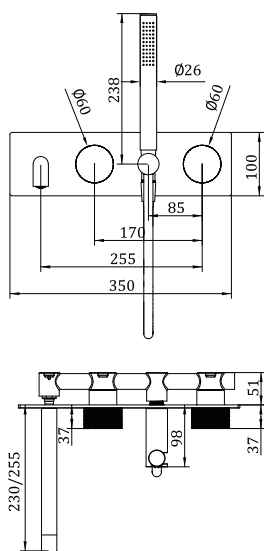

Specifications

Watermark License

WM-060073

Temperature Rating

Min 1°C-Max 75°C

Pressure Rating

Min 150kpa - Max 500kpa


Packaging Includes

1x Plate
1x Spout
1x Hand- Wheel
1x Diverter Knob
1x Hand Shower(Within Check- Valve)
1x 1m PVC Hose
1x Shower Bracket


Finish & SKU

 Graphite NR252003a(230/250)tGR	 Brushed Bronze NR252003a(230/250)tBZ
 Brushed Gold NR252003a(230/250)tBG	 Brushed Nickel NR252003a(230/250)tBN


*Dimensions are nominal measurements only.

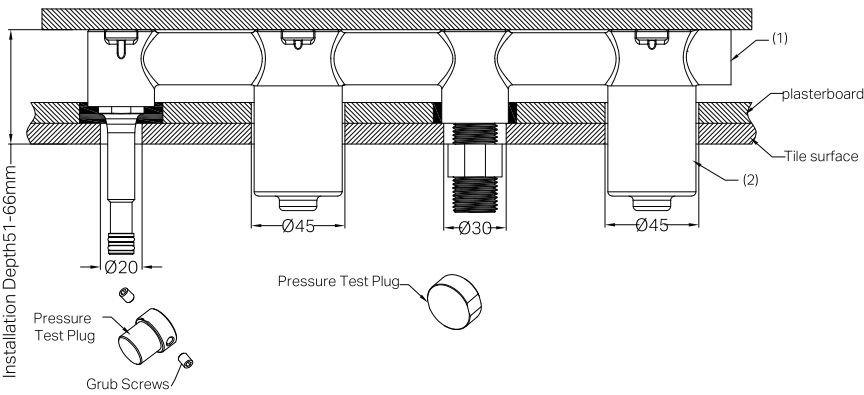


- 1. Install tiles and drill holes with diameters of Ø20, Ø45, Ø30, Ø45.
- 2. Remove the pressure test plug.
- 3. Assemble the cutting gauge onto the mixer body, make it flush with the tile surface, and trim off any excess part after assembly.

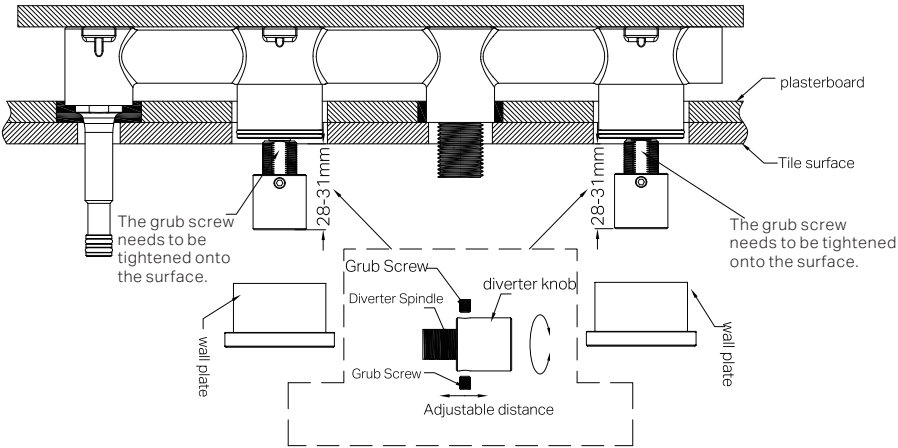


- 5. Adjust the distance between the Diverter knob and the tile surface to 28-31mm, as shown in the diagram.
- 6. Place the wall plate onto the mixer body.

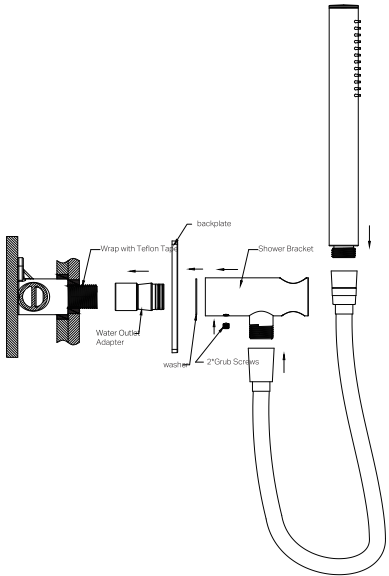


- 8. Thread the water outlet adapter onto the in-wall body, and seal with Teflon tape.
- 9. Assemble the Backplate, washer, and shower bracket onto the main body, then secure with screws.
- 10. Attach the shower hose and hand shower, securing them in place.

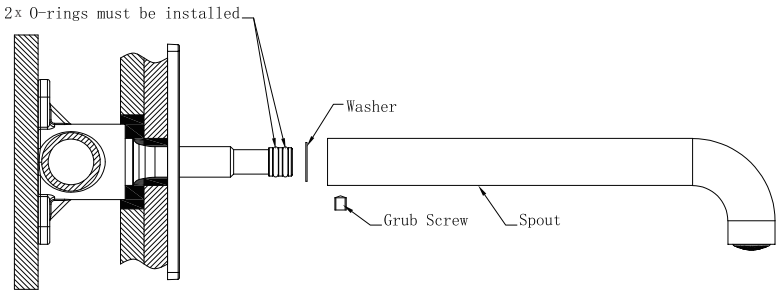


- 12. Assemble washer, and spout onto the mixer body, then secure with grub screws. Please Note: Waterproofing is required.

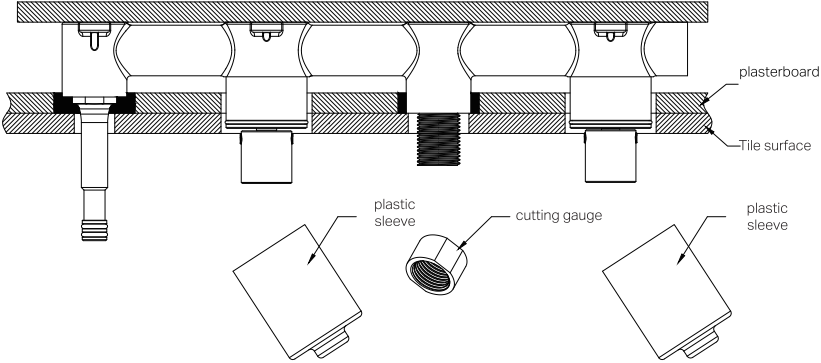

- 4. Remove the cutting gauge and protective sleeves.

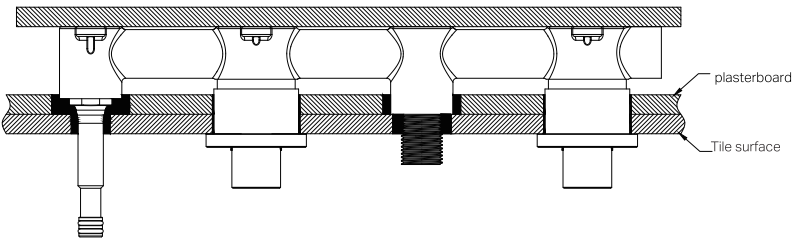


- 7. Apply waterproofing in the gap between the ceramic tile and the water outlet.

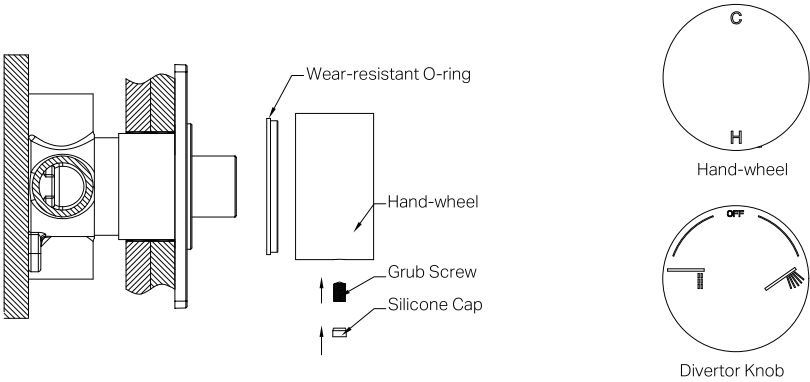

Follow step 11 to install the Hand-wheel and the Diverter Knob

- 11. Attach the wear-resistant O-ring, hand-wheel/ Diverter knob, grub screw, and silicone cap, securing them in place.

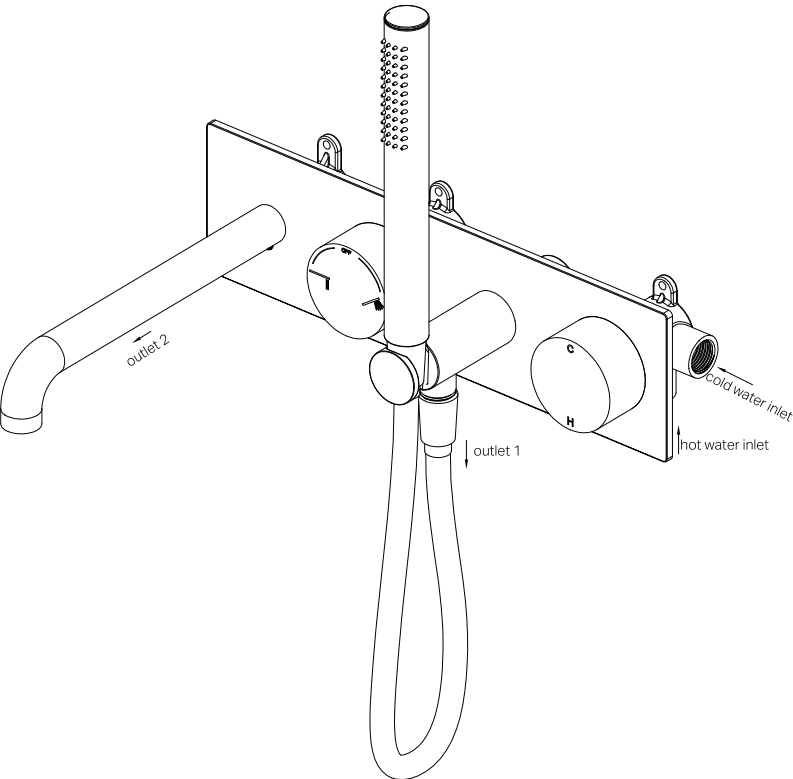

- 13. Installation is now complete. Test for leaks.

Nero

