


## INSTALLATION

## Absorbent Roll Wall Dispenser

**MATERIALS REQUIRED:** Electric drill, marker, spirit level. **PLUS for wooden walls:** 8mm hex drill bit, **OR for masonry walls:** 10mm Masonry drill bit, 13mm hex drill bit / socket.

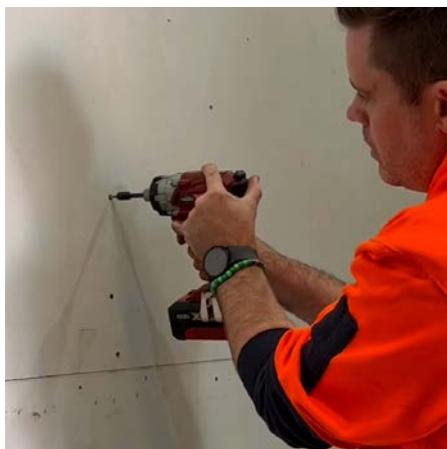

1. Place dispenser frame at desired height (ensure level) and mark holes for drilling.
2. Pre-drilling holes is recommended.
3. Place dispenser frame in position and secure with screws or dynabolts.



4. Ensure the dispenser is mounted securely to the wall.
5. Thread dispenser support rod through absorbent roll.
6. Place absorbent rod and roll onto dispenser frame.

## TO ORDER

Code	Description	Roll Width	UOM
DS9034K	Absorbent Roll Wall Dispenser (Includes 4x Hex Screws & 4x Dynabolts)	Up to 500mm	Each
DS9036K	Absorbent Roll Wall Dispenser (Includes 4x Hex Screws & 4x Dynabolts)	Up to 1000mm	Each


 Scan to  
Watch Video