3770 SERIES MORTICE LOCK AND REBATE DOOR KIT
MOUNTING INSTRUCTIONS FOR REBATED TIMBER DOORS


LOCKWOOD ASSA ABLOY


P/No. 3770RK-121 01/16

THIS INSTRUCTION COVERS REBATED DOOR PREPARATION
AND SECURING THE LOCK INTO THE REBATED DOOR.
FOR HOLE LOCATIONS, CYLINDER AND ADAPTOR INSTALLATION INSTRUCTIONS
AND FUNCTION SETTING INSTRUCTIONS - REFER TO THE INSTRUCTIONS SUPPLIED WITH THE LOCK.


1 DOOR PREPARATION - LOCK SIDE

SPACER DIMENSIONS

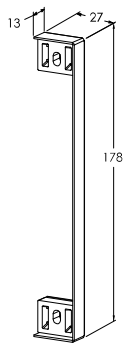





- Set lock and install cylinders as per standard **MOUNTING INSTRUCTIONS**.
- Use spacer as template to mark required cutout in the rebate.
- Cut recess allowing front of spacer to be flush with front of rebate, cut lock mortice and furniture holes as required.

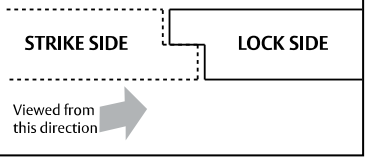

2 LOCK INSTALLATION

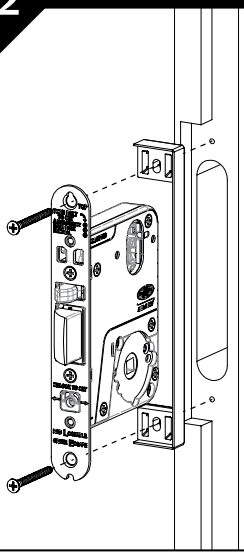


- Fit lock onto spacer and place into mortice.
- Drill 2.5mm pilot holes and secure the lock using the supplied 45mm long screws.

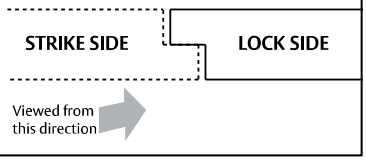


3 PREPARATION - STRIKE SIDE


STRIKE DIMENSIONS

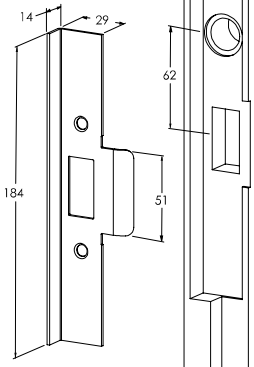


- Use strike as a template to mark required cutout onto the door.
- Mortice door frame to allow strike to sit flush with lower face.
- Mortice recess for latch bolt 15mm deep.
- For electric mortice lock magnets, drill Ø25 x 2mm deep and Ø19 x 20mm deep as shown.

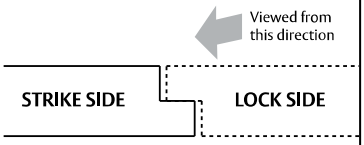



4 STRIKE INSTALLATION

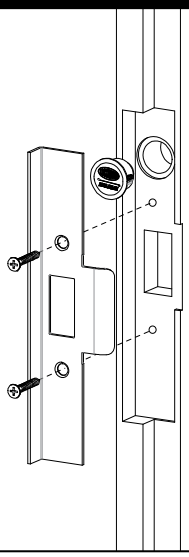

- For electric mortice locks, insert magnet in hole.
- Drill 2.5mm pilot holes and secure the strike plate using the supplied 30mm long screws.

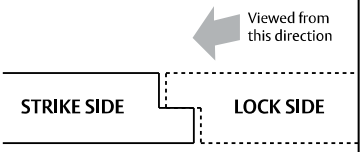

STRIKE OPTIONS FOR REBATE KITS

3571-2902	3772-RK32	3772-RK46
		
Lipless strike	32mm lip strike	46mm lip strike

PLEASE RECYCLE THIS PACKAGING