


3772 MORTICE LOCK AND DX DIGITAL KEY OVERRIDE KIT

MOUNTING INSTRUCTIONS FOR TIMBER DOORS

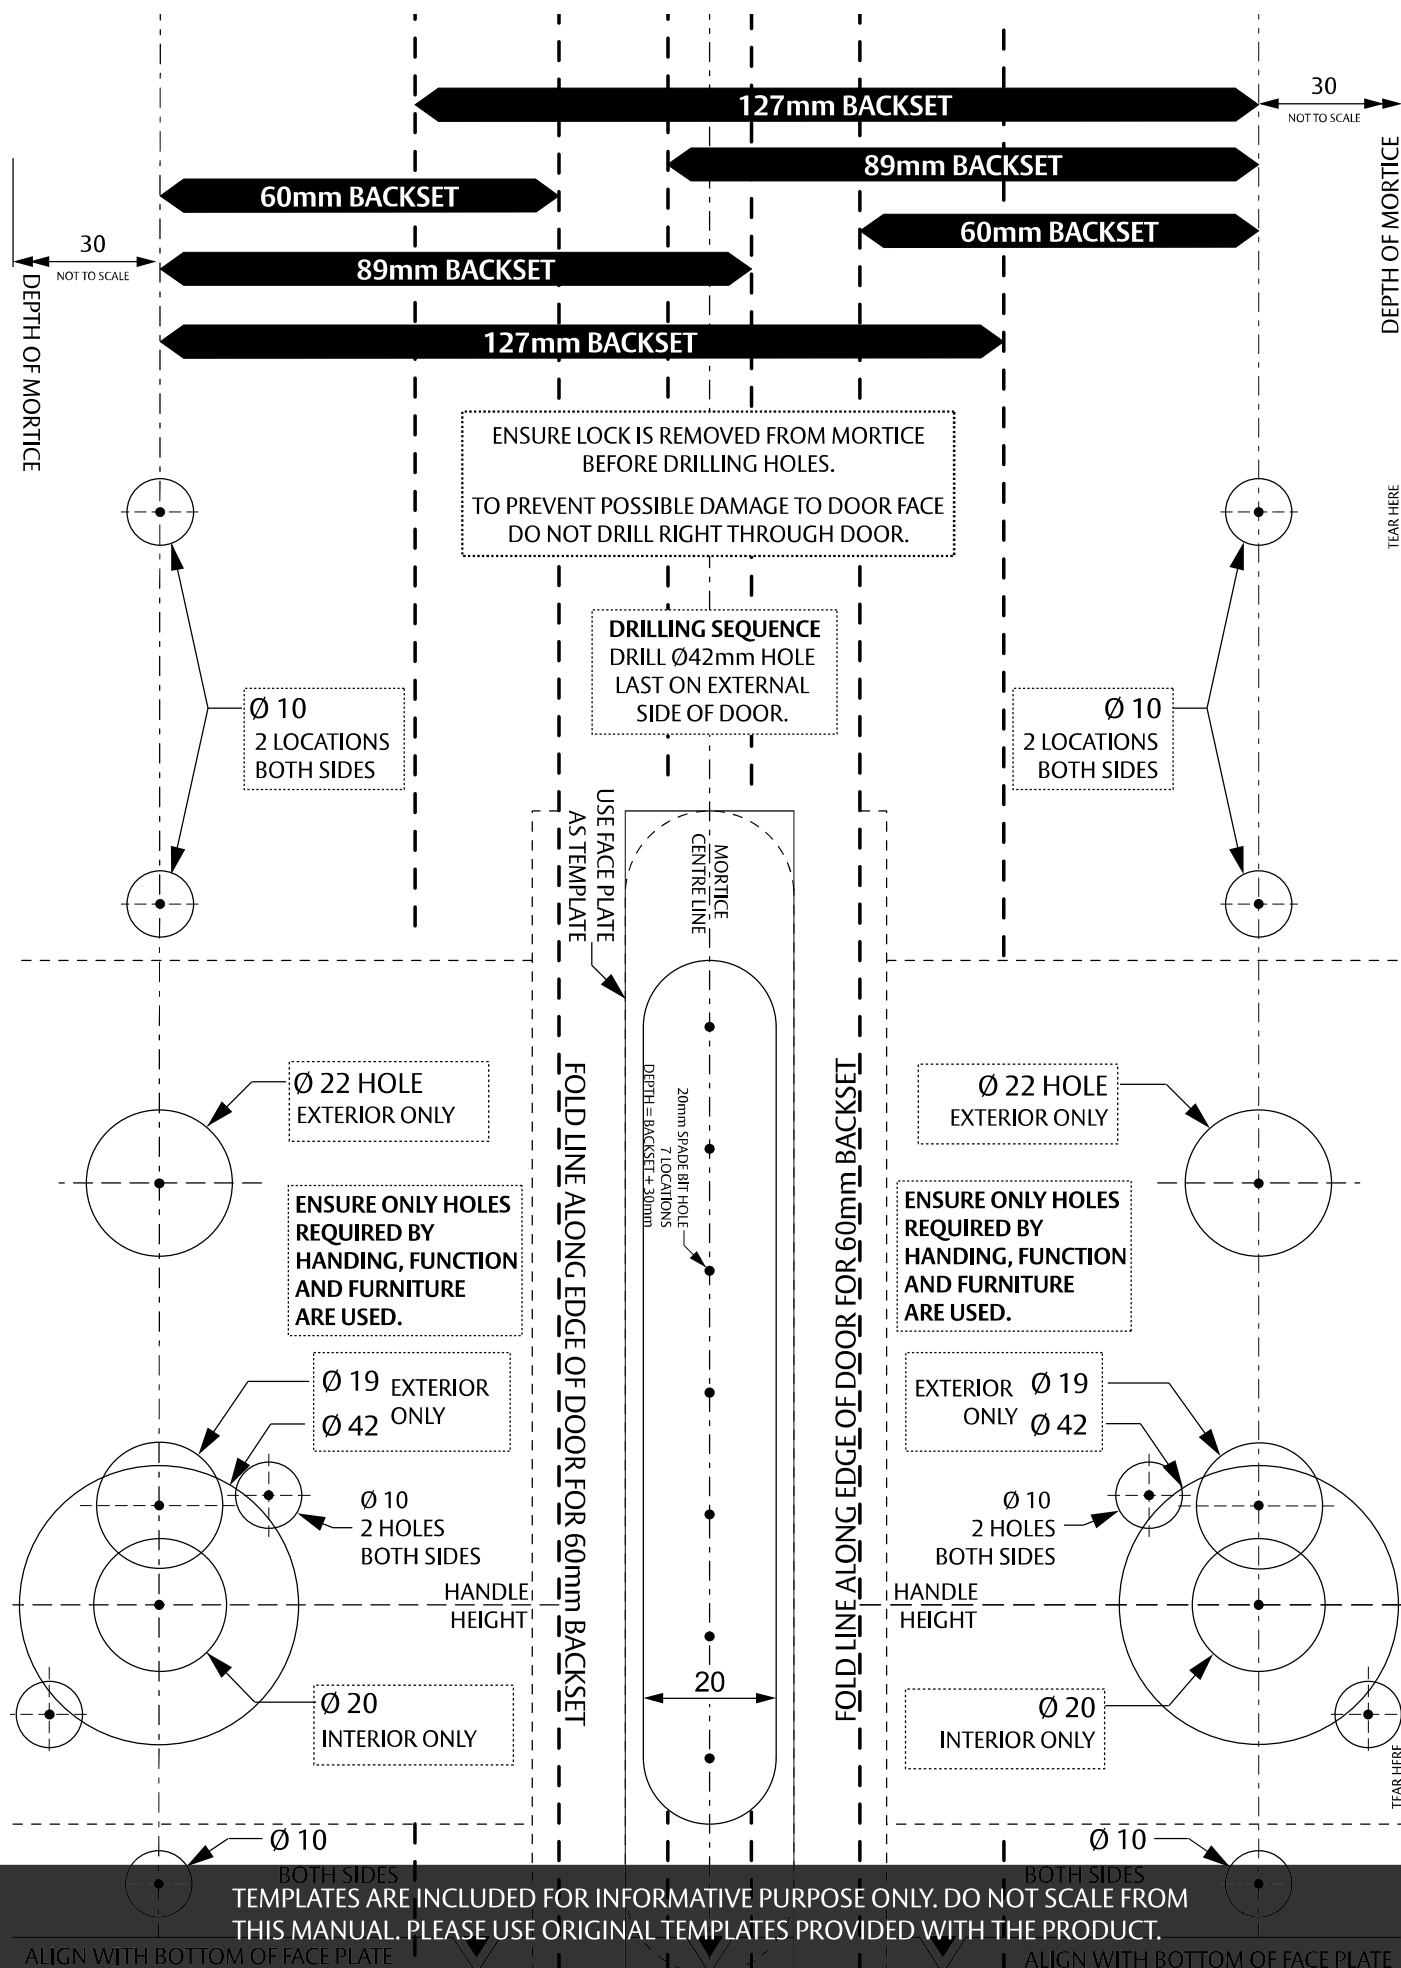

3772 MORTICE LOCK AND 3777 DUAL ENTRY KIT MOUNTING INSTRUCTIONS FOR TIMBER DOORS

P/N: 3777-5121 08/20


HAND OF DOOR ACCORDING TO ENGLISH PRACTICE

DOOR OPENING IN		DOOR OPENING OUT	
INSIDE		INSIDE	
RIGHT HAND LOCK	LEFT HAND LOCK	RIGHT HAND LOCK	LEFT HAND LOCK
OUTSIDE		OUTSIDE	

- Determine hand of lock required from chart above.
- Ensure only holes required by handing, function and furniture are cut into door.
- Disregard instructions referring to features not required.
- The lock is supplied in passage mode. The hold back and anti-lockout functions are de-activated.

1


LOCK SETTING

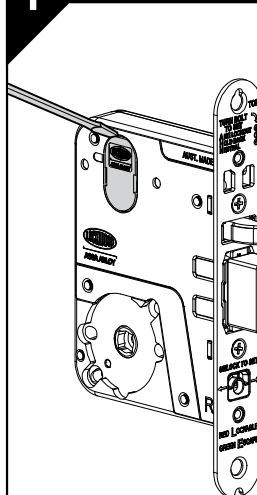


- Where cylinders or turn knobs are required, remove the cylinder plugs from the lock using a small screwdriver.
- Set the required lock function as per **SETTING AND OPERATING INSTRUCTIONS** and the **FUNCTION CHART** on the reverse of this instruction.
- Where required, refer to standard **MOUNTING INSTRUCTIONS** for cylinder or adaptor installation instructions.

2

DOOR PREPARATION

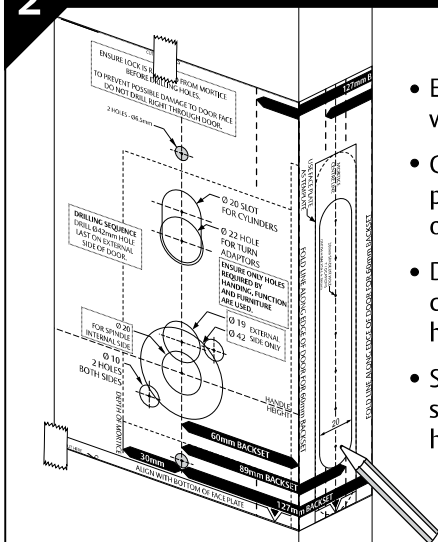


- Establish height that lock will be on the door.
- Cut mortise in door as per sizes shown on template.
- Determine what lever, cylinder or turn knob holes are required.
- Starting on the dual cylinder side, drill required furniture holes from both sides of door.

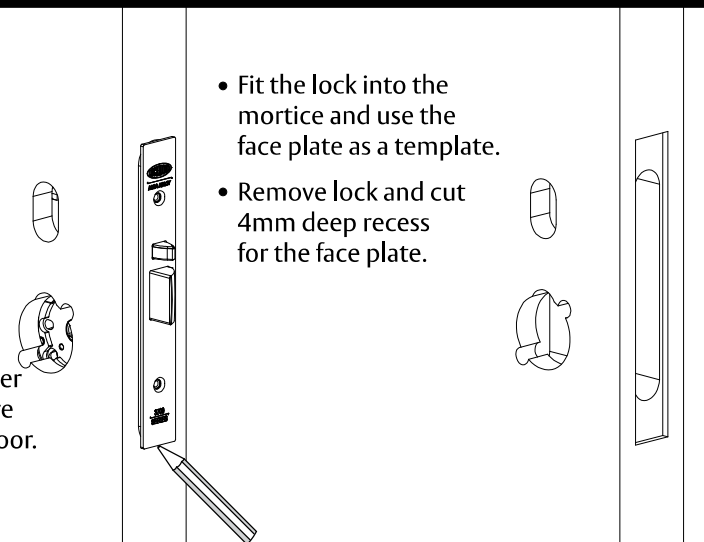

- Fit the lock into the mortise and use the face plate as a template.
- Remove lock and cut 4mm deep recess for the face plate.

3


LOCK INSTALLATION

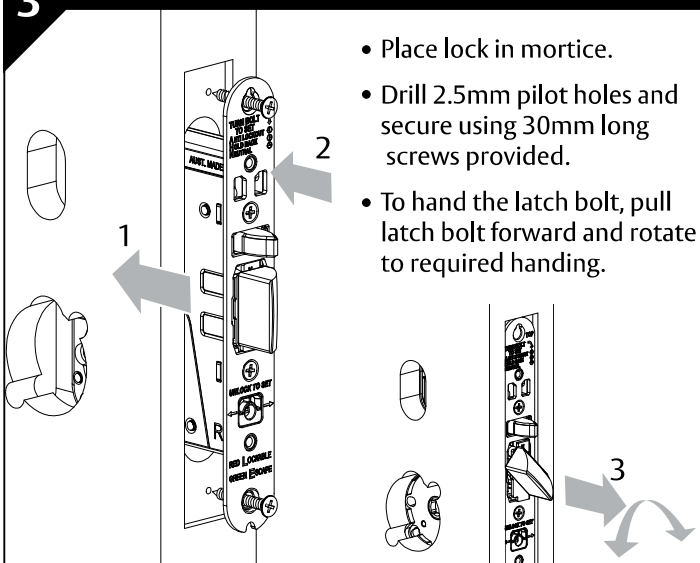

- Place lock in mortise.
- Drill 2.5mm pilot holes and secure using 30mm long screws provided.
- To hand the latch bolt, pull latch bolt forward and rotate to required handing.

4

LOWER CYLINDER PREPARATION

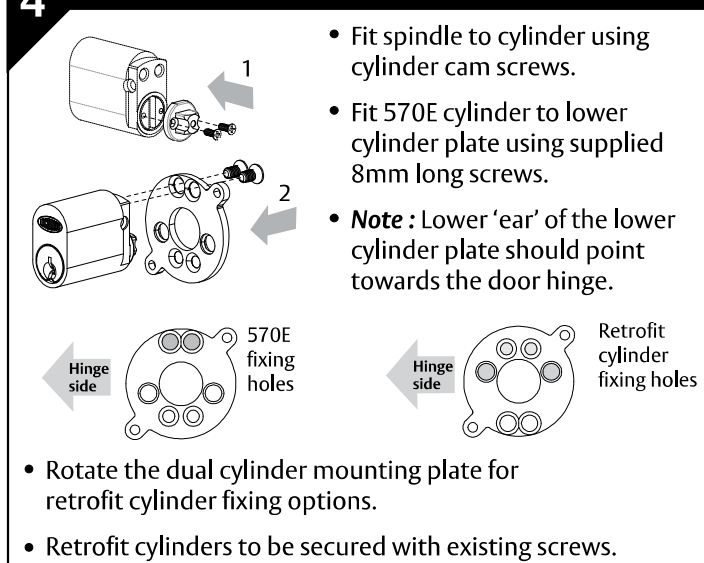





- Fit spindle to cylinder using cylinder cam screws.
- Fit 570E cylinder to lower cylinder plate using supplied 8mm long screws.
- **Note** : Lower 'ear' of the lower cylinder plate should point towards the door hinge.



- Rotate the dual cylinder mounting plate for retrofit cylinder fixing options.
- Retrofit cylinders to be secured with existing screws.


3772 MORTICE LOCK AND 3777 DUAL ENTRY KIT

MOUNTING INSTRUCTIONS FOR TIMBER DOORS

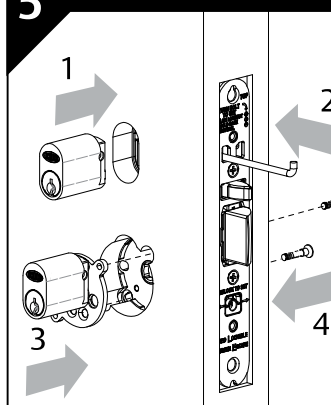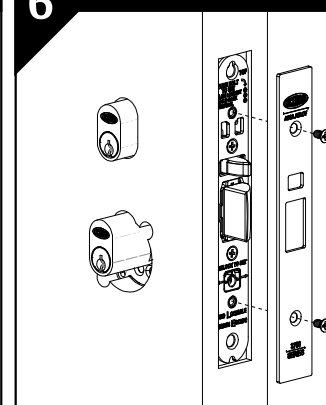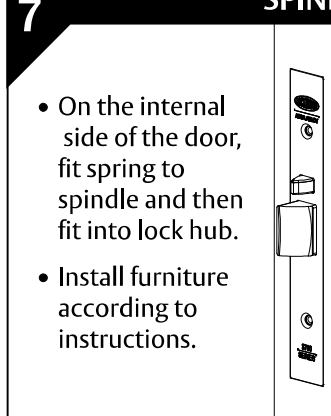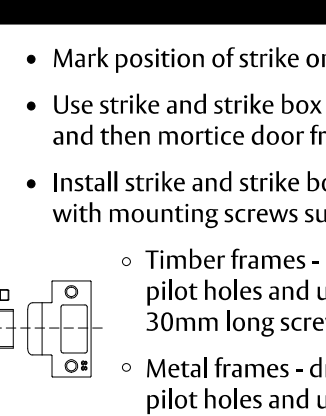5 CYLINDER INSTALLATION  - Place the upper cylinder into the lock and secure by pressing in the cylinder retaining pin, ensuring the pin is flush with the front plate. - Place lower cylinder assembly into lock and secure with supplied 19mm long screws from opposite side of door.	6 FACE PLATE INSTALLATION  Fit face plate onto lock using the supplied 8mm long screws.
7 SPINDLE INSTALLATION  - On the internal side of the door, fit spring to spindle and then fit into lock hub. - Install furniture according to instructions.	8 STRIKE INSTALLATION  - Mark position of strike on door frame. - Use strike and strike box as templates and then mortise door frame for strike. - Install strike and strike box with mounting screws supplied. - Timber frames - drill 2.5mm pilot holes and use 30mm long screws. - Metal frames - drill 4mm pilot holes and use 12mm long screws.

3772 MORTICE LOCK AND 3777 DUAL ENTRY KIT

MOUNTING INSTRUCTIONS FOR TIMBER DOORS

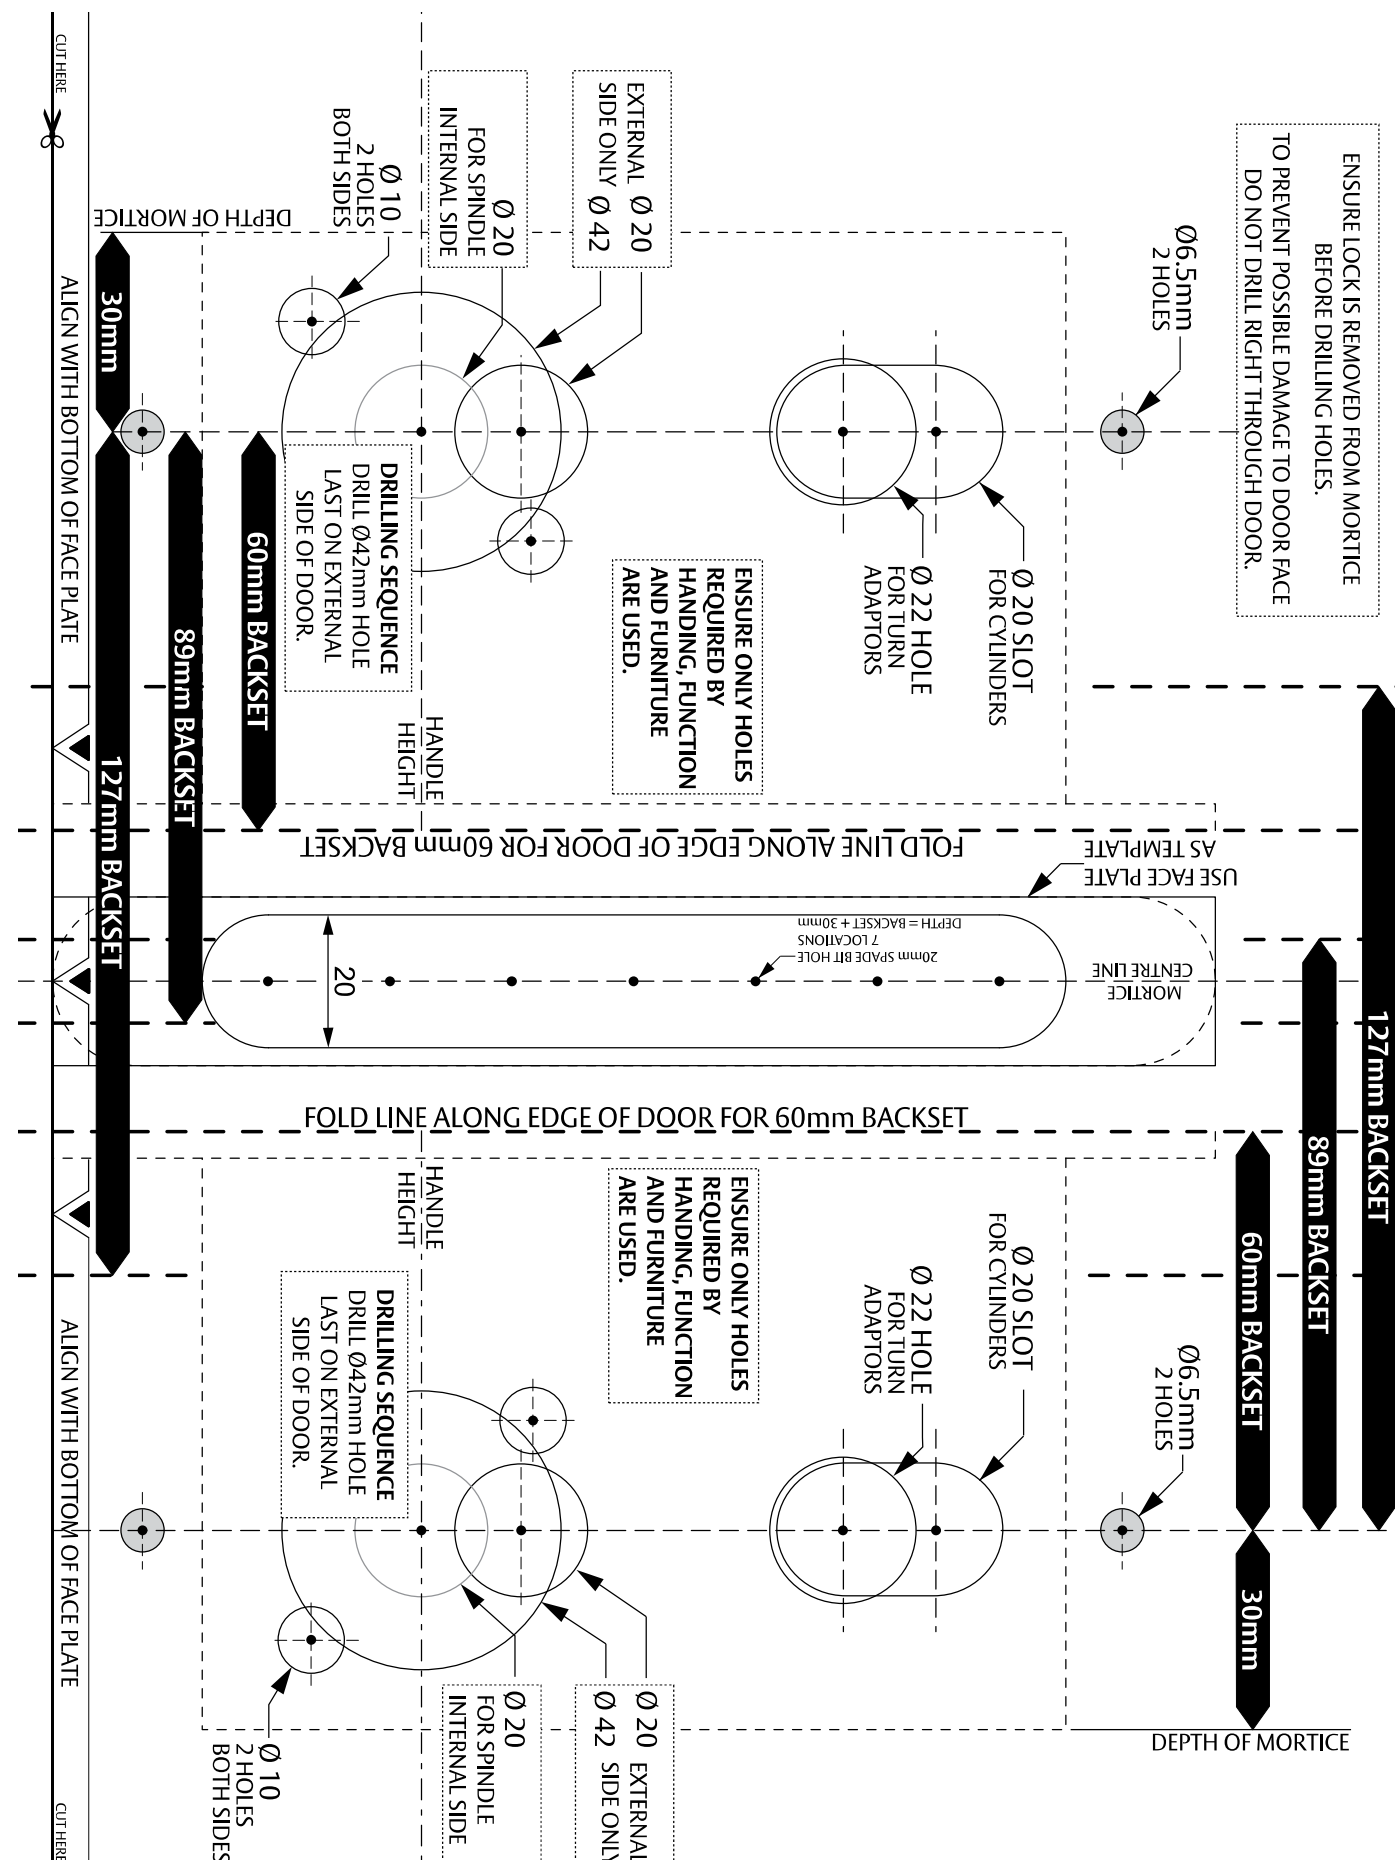

TEMPLATES ARE INCLUDED FOR INFORMATIVE PURPOSE ONLY. DO NOT SCALE FROM THIS MANUAL. PLEASE USE ORIGINAL TEMPLATES PROVIDED WITH THE PRODUCT.