

Setting a New Code

If necessary the factory set five digit code can be easily changed to a new four, five or six digit code of your choice.

STEP 1:

SELECT YOUR NEW CODE:

Use any combination of numbers or letters (0 to 9 XYZ) as a four, five or six digit code. EACH DIGIT CAN ONLY BE USED ONCE IN A CODE.

NOTE: BUTTON 'C' is used for clearing the code selector mechanism and CANNOT BE CHANGED.

EXAMPLES OF CODES

FOUR DIGIT CODE - C 2347


FIVE DIGIT CODE - C 897YZ

SIX DIGIT CODE - C 01349X

STEP 2:

PREPARE LOCK FOR RE-CODING: KEEP LOCK HORIZONTAL WHILE CHANGING CODE


- Remove adaptor plate. (where fitted)
- Remove four red screws and carefully remove backplate.

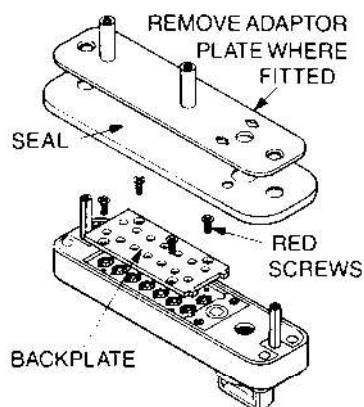

STEP 3:

SETTING YOUR NEW CODE:


- Hold button 'C' depressed on front face while repositioning tumblers.
- Using tweezers supplied, reposition RED and BLUE tumblers as follows: RED TUMBLERS are located in holes corresponding to new code. Insert one red tumbler for each digit in the code. e.g. a four digit code requires four red tumblers. (Where necessary use spare tumblers from plastic wallet.) BLUE TUMBLERS are located in all remaining holes. INSERT TUMBLERS WITH COLOURED END UP AND LARGE SQUARE CUT-OUT FACING SIDE OF LOCK. EVERY HOLE MUST HAVE A TUMBLER FOR THE LOCK TO FUNCTION.
- Release button 'C' after repositioning tumblers.

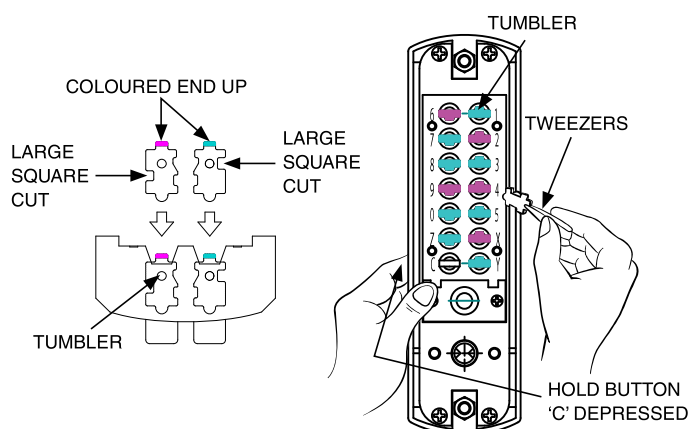

STEP 4:

TO RE-ASSEMBLE:

Replace backplate carefully and secure with four red screws. CHECK THAT LOCK FUNCTIONS CORRECTLY USING NEW CODE BEFORE INSTALLING ON DOOR. Retain tweezers, spare tumblers and instructions for future code changes.




CODED
EXAMPLE
- C897YZ

ADDITIONAL KEYPAD TUMBLERS:

RED	SPDX-42
BLUE	SPDX-43

530 DX SERIES DIGITAL ENTRANCE SET

LOCK MOUNTING POSITION

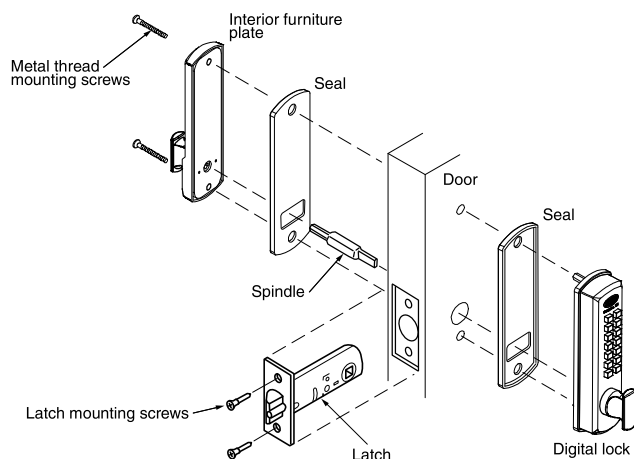

Lock mounting position.

This product is more convenient to operate at approximately chest level, but door construction may restrict the mounting position.

SOLID DOORS: Permit mounting at any height.


HOLLOW CORE DOORS: Mounting may be restricted by the size and position of the timber block within the door for lock mounting.

Note: For fire door applications, keypad must be fitted without rubber mounting pad.

FOLLOW INSTRUCTIONS CAREFULLY

1

INSTALL LOCK

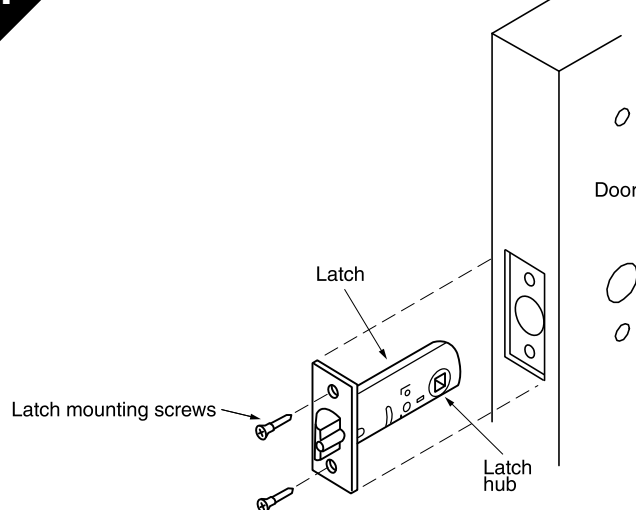

1. Prepare door and install latch.


- Mark and drill holes as shown on template.
- Insert latch into hole in door edge and scribe around faceplate.
- Mortise 4mm ($\frac{5}{32}$ ") deep to accept latch faceplate.
- Pre-drill 2.5mm ($\frac{3}{32}$ ") to accept mounting screws and secure latch using woodscrews supplied.

2

INSTALL LOCK

2. Install digital lock and interior furniture plate.

- Fit rubber seal to the back of the digital lock and interior furniture plate.
- Insert blade end of spindle in vertical position into digital lock drive gear.
- Install digital lock and interior furniture plate to door with both turn knobs in vertical position.
NOTE: Ensure that spindle engages latch hub and interior furniture plate drive gear.
- Secure using two metal thread mounting screws.

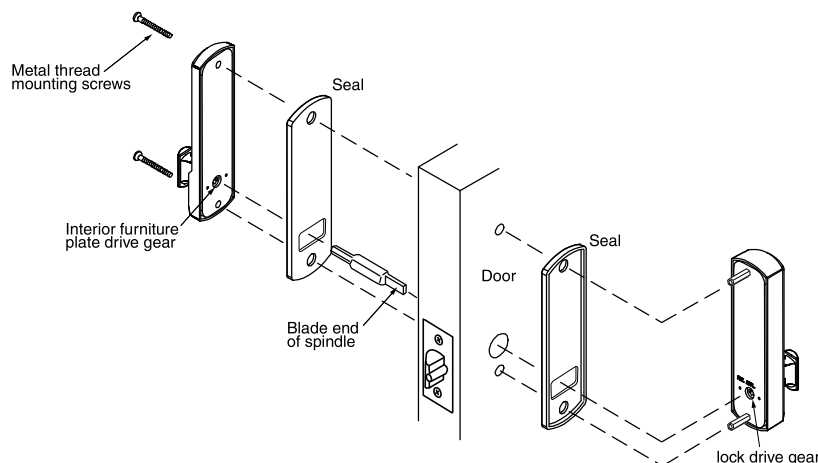

3

PREPARE AND INSTALL

3. Prepare jamb and install strike.

- Mark strike location on jamb edge directly opposite latch as shown.
- Locate strike on jamb edge centrally about horizontal centreline with screw holes in strike on vertical centreline. Mark outline of strike and bolt hole onto jamb edge.
- Mortise in the following sequence:
 - Bolt hole mortise 16mm ($\frac{5}{8}$ ") deep.
 - Strike mortise 1.5mm ($\frac{1}{16}$ ") deep.
- Pre-drill 2.5mm ($\frac{3}{32}$ ") to accept mounting screws and secure using woodscrews supplied.

