



# INSTALLATION INSTRUCTIONS


Footrest

Footrest. A personal beauty shower recess corner footrest, fabricated from ABS. Designed to assist in personal grooming e.g. shaving legs.

- 1** Slide end caps 'A' and 'B' towards centre of Footrest to expose fixing holes.



- 2** Place Footrest in position and mark screw positions on wall.

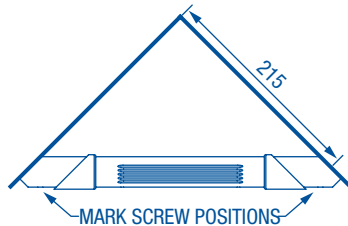


- 3** Drill wall to take wall plugs provided (7mm drill), fit wall plugs, making sure plugs are slightly recessed from wall face. Drive screws into plugs leaving a 5-6mm gap under screw head.

- 4** Slide Footrest down over screws so as to sit firmly on screws - tighten screws to lock Footrest in position.



- 5** Slide end covers 'A' and 'B' to wall and press front to lock.

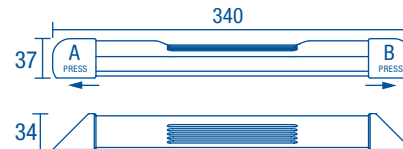

**MAX. 70 KILOS LOAD BEARING. STAINLESS STEEL SCREWS ENCLOSED**