


1. First, use an air wrench to tighten the bolts diagonally, then adjust the torque wrench to 190Nm;
2. After tightening, apply a soft fill oil to the surface, put on a net cover, and neatly place them in a wooden box

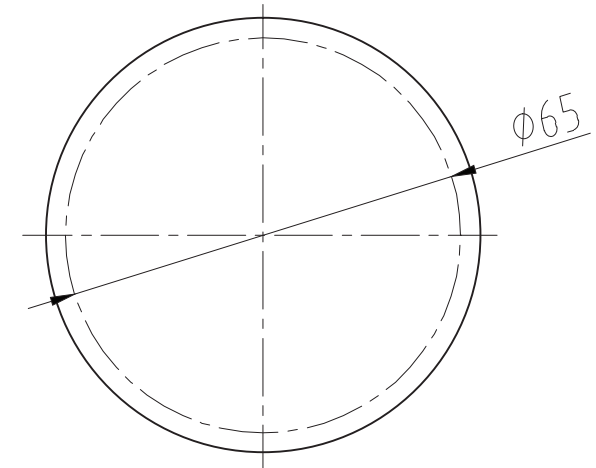

770902

www.mtw.co.nz