


BOSCH – Solution Series – Tech Notes

Wiring a DS160 / 161 Request to Exit detector for CHIME use.

Note: You can make a REX-PIR act as a stand-alone CHIME by wiring as follows.

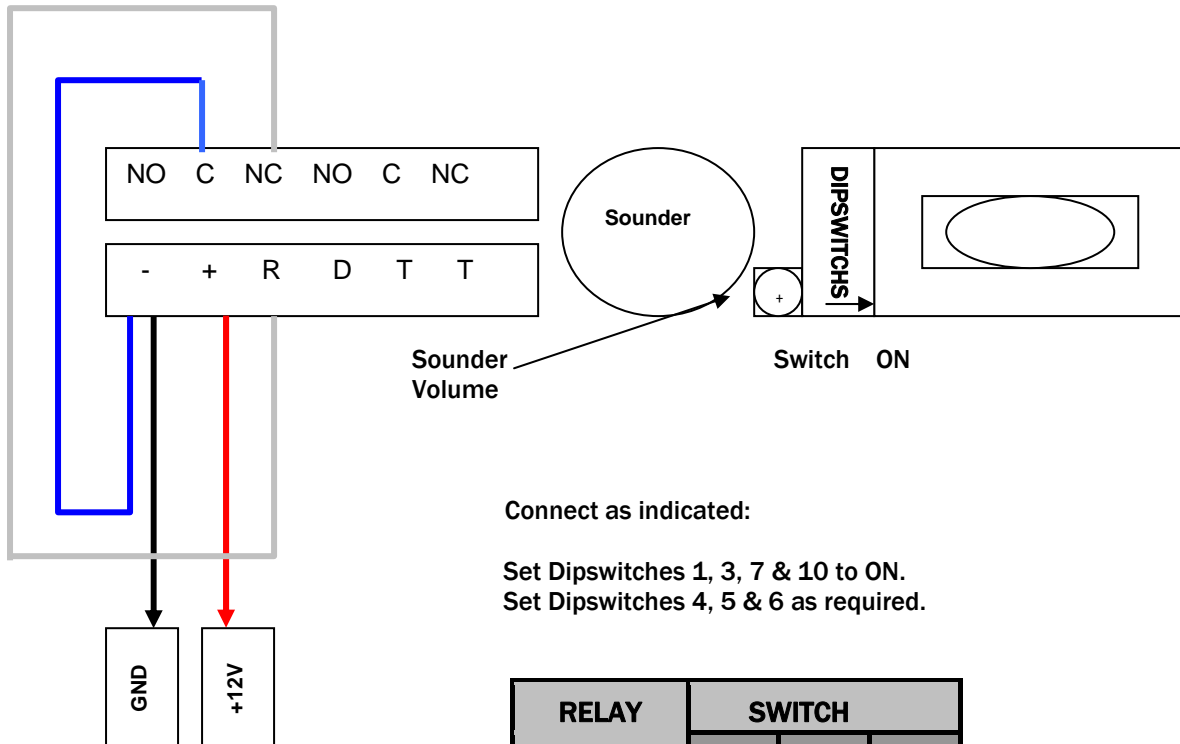

Connect as indicated:

Set Dipswitches 1, 3, 7 & 10 to ON.
Set Dipswitches 4, 5 & 6 as required.

RELAY Timer	SWITCH		
	4	5	6
1/2 Second	OFF	OFF	OFF
1 Second	OFF	OFF	ON
2 Seconds	OFF	ON	OFF
4 Seconds	OFF	ON	ON
8 Seconds	ON	OFF	OFF
16 Seconds	ON	OFF	ON
32 Seconds	ON	ON	OFF
64 Seconds	ON	ON	ON