



INSTALLATION INSTRUCTIONS DEADBOLT LOCKSET

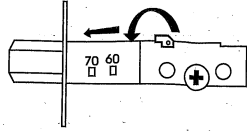

Your Latch is factory set for 2-3/8" (60mm)
If your door requires a 2-3/4"(70mm)Latch,
follow these steps.


- A. Hold Latch in your right hand so you can see adjustment holes. With left hand turn latchplate in clockwse position.pull latch plate out of sase as far as it will go.
B. Turn back and lock into 70mm position.

3.INSTALL INTERIOR ASSEMBLY

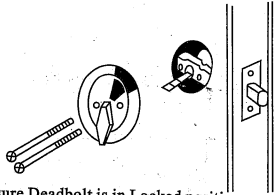


Make sure Deadbolt is in Locked position.
Place thumb turn assembly onto torque blade and line up screw holes.The thumb knob will bein the "up" position so you can see the screwholes.Tighten long machine screws.

1. INSTALL THE LATCH

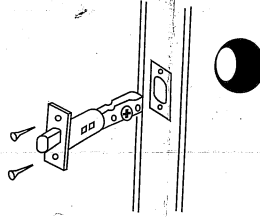

1. Install deadbolt latch in "up" position into door hole.
2. Insert and secure with wood screws.


2.INSTALL EXTERIOR ASSEMBLY

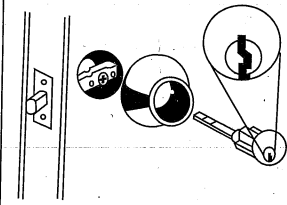

1. Place cylinder assembly through outside cylinder guard and on door making sure torque blade is properly positioned in latch crank.
 2. Put key in cylinder and turn until Deadbolt is exposed.
- Note: Keyhole must be in the "down" position as shown.


INSTRUCTIONS FOR INSTALLING DOUBLE CYLINDER DEADBOLTS

Install Exterior Cylinder

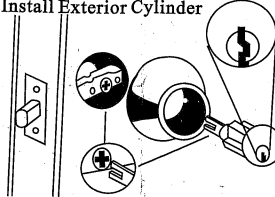

Press interior assembly flush against door making certain the torque blade is properly positioned in the latch hole.Key hole must be in down position.

Install Interior Cylinder

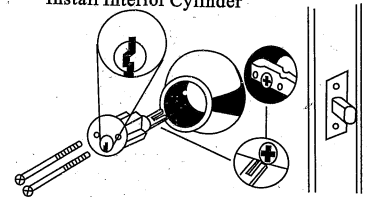

Insert (2)two screws through holes engaging holes in exterior cylinder and tighten.

INSTALLATION TEMPLATE

